



CIRCUIT OPENING RELAY COMPONENTS FOR REMOVAL AND INSTALLATION

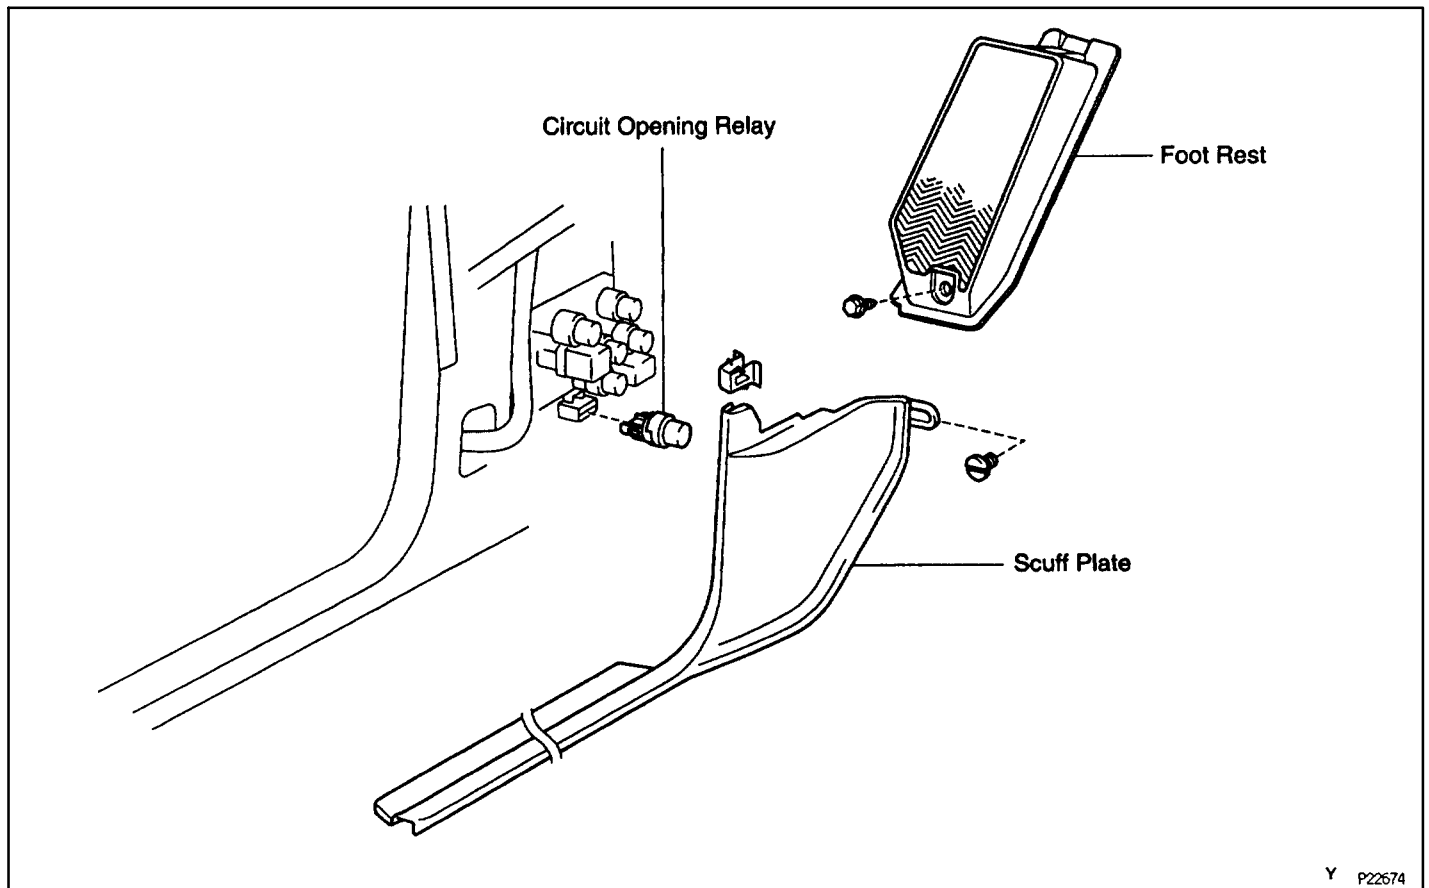

Y P22674

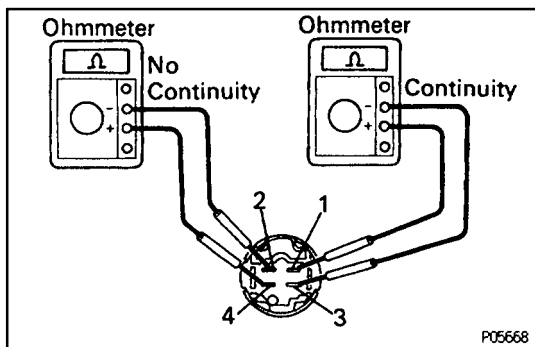

P05668

CIRCUIT OPENING RELAY INSPECTION

1. REMOVE CIRCUIT OPENING RELAY

2. INSPECT CIRCUIT OPENING RELAY


A. Inspect relay continuity

- Using an ohmmeter, check that there is continuity between terminals 1 and 3.
- Check that there is no continuity between terminals 2 and 4. If continuity is not as specified, replace the relay.

B. Inspect relay operation

- Apply battery voltage across terminals 1 and 3.
- Using an ohmmeter, check that there is continuity between terminals 2 and 4. If operation is not as specified, replace the relay.

3. REINSTALL CIRCUIT OPENING RELAY

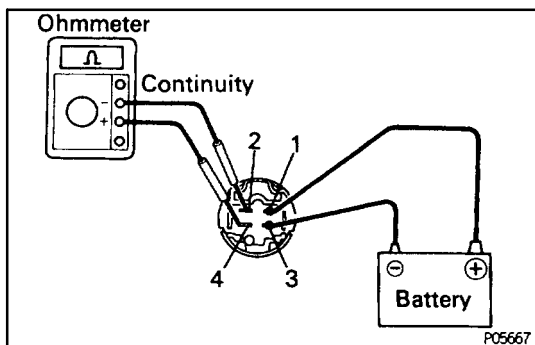

P05667