


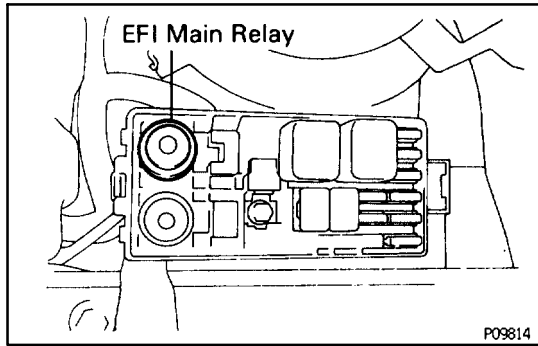


EFI MAIN RELAY

EFI MAIN RELAY INSPECTION

1. REMOVE EFI MAIN RELAY


LOCATION: In the engine compartment relay box.

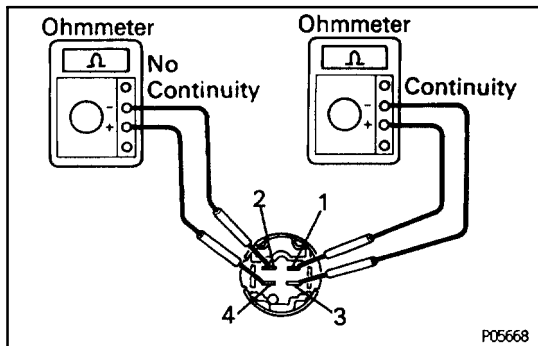

2. INSPECT EFI MAIN RELAY

A. Inspect relay continuity

- Using an ohmmeter, check that there is continuity between terminals 1 and 3.
- Check that there is no continuity between terminals 2 and 4. If continuity is not as specified, replace the relay.

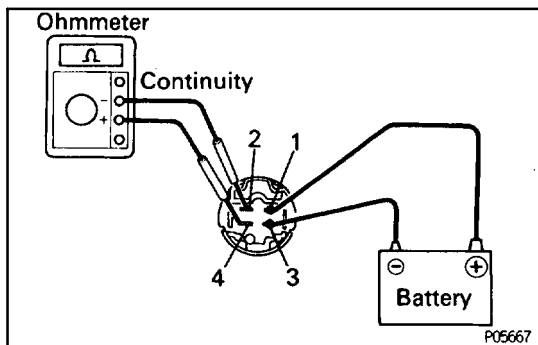

B. Inspect relay operation

- Apply battery voltage across terminals 1 and 3.
- Using an ohmmeter, check that there is continuity between terminals 2 and 4. If operation is not as specified, replace the relay.

3. REINSTALL EFI MAIN RELAY