
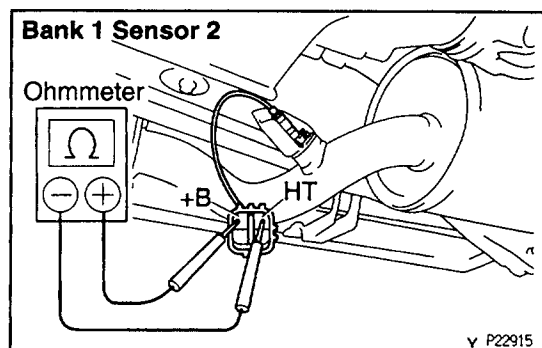


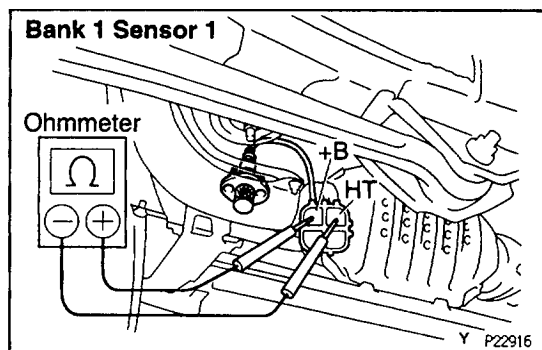

HEATED OXYGEN SENSOR HEATED OXYGEN SENSORS INSPECTION

INSPECT HEATER RESISTANCE OF HEATED OXYGEN SENSORS

- Disconnect the heated oxygen sensor connector.
- Using an ohmmeter, measure the resistance between terminals +B and HT.

Resistance:

At 20°C (68°F): 11-16 Ω

If resistance is not as specified, replace the heated oxygen sensor.

- Reconnect the heated oxygen sensor connector.

ENGINE CONTROL MODULE (ECM) COMPONENTS FOR REMOVAL AND INSTALLATION

