 
 
 
 
 
 


PREPARATION

SST (SPECIAL SERVICE TOOLS)



	09268-41045 Injection Measuring Tool Set	
	(09268-41090) No.7 Union	
	(90405-09015) No.1 Union	
	09268-45012 EFI Fuel Pressure Gauge	
	09631-22020 Power Steering Hose Nut 14 x 17 mm Wrench Set	Fuel line flare nut
	09816-30010 Oil Pressure Switch Socket	Knock sensor
	09842-30070 Wiring "F" EFI Inspection	

RECOMMENDED TOOLS

	09082-00050 TOYOTA Electrical Tester Set.	
	09200-00010 Engine Adjust Kit .	
	09258-00030 Hose Plug Set .	Plug for vacuum hose, fuel hose etc.

EQUIPMENT

Carburetor cleaner	Throttle body
Graduated cylinder	Injector
OBD II scan tool	Engine speed
Soft brush	Throttle body
Sound scope	Injector
Torque wrench	

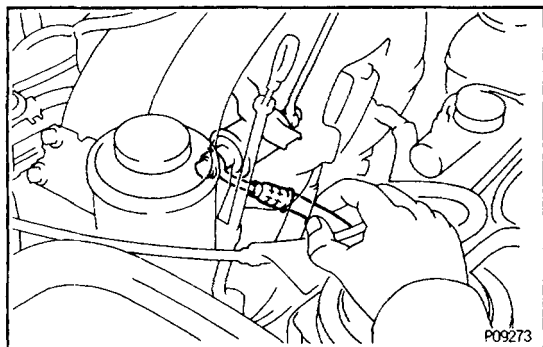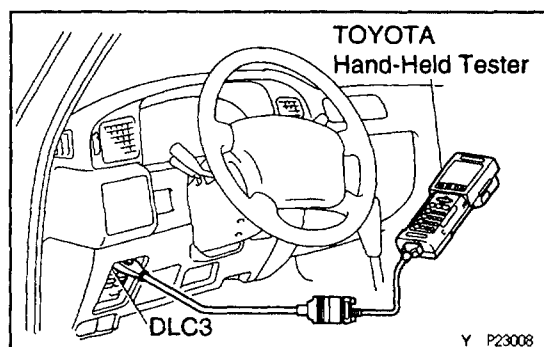

FUEL PUMP ON-VEHICLE INSPECTION

1. CHECK FUEL PUMP OPERATION

- Remove the fuse cover on the instrument panel.
- Connect the TOYOTA hand-held tester to the DLC3.
- Turn the ignition switch ON and TOYOTA hand-held tester main switch ON.

NOTICE: Do not start the engine.

- Select the active test mode on the TOYOTA handheld tester.
- Please refer to the TOYOTA hand-held tester operator's manual for further details.
- If you have no TOYOTA hand-held tester, connect the positive (+) and negative (-) leads from the battery to the fuel pump connector.
(See step 3 in fuel pump inspection)
- Check that there is pressure in the fuel inlet hose from the fuel filter.

HINT: If there is fuel pressure, you will hear the sound of fuel flowing.

If there is no pressure, check these parts:

- Fusible links (MAIN 2.OL, AM2 0.3P)
- Fuses (EFI 15A, IGN 7.5A)
- EFI main relay
- Fuel pump
- ECM
- Wiring connections

- Turn the ignition switch to LOCK.