

CAUTIONS, NOTICES, HINTS:


- **CAUTIONS** are presented in bold type, and indicate there is a possibility of injury to you or other people.
- **NOTICES** are also presented in bold type, and indicate the possibility of damage to the components being repaired.
- **HINTS** are separated from the text but do not appear in bold. They provide additional information to help you perform the repair efficiently.

SI UNIT

The UNITS given in this manual are primarily expressed according to the SI UNIT (International System of Unit), and alternately expressed in the metric system and in the English System.

Example:

Torque: 30 N·m (310 kgf·cm, 22 ft·lbf)

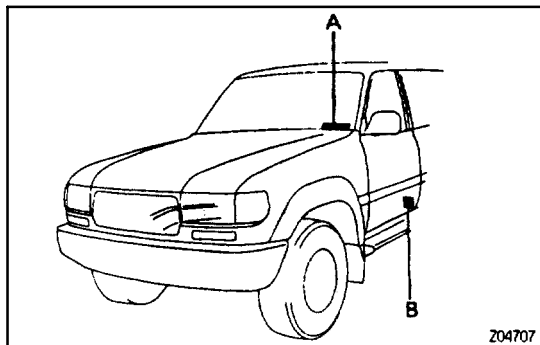


IDENTIFICATION INFORMATION

VEHICLE IDENTIFICATION NUMBER

The vehicle identification number is stamped on the outer surface of the front right side frame. This number is also stamped on the vehicle identification number plate at the top of the left instrument panel. The certification regulation label is affixed on the left side lower front door.

- A. Vehicle Identification Number Plate
- B. Certification Label

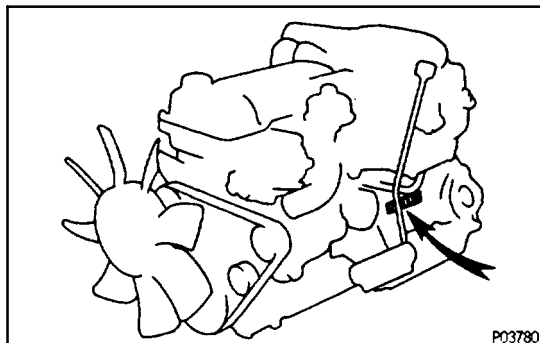

ENGINE SERIAL NUMBER

The engine serial number is stamped on the engine block as shown.