

MAINTENANCE

GENERAL NOTES:

- There are 2 separate maintenance schedules, namely A and B, which apply to different driving conditions. Find out how the vehicle is driven, and select the appropriate schedule.
- Every service item in the periodic maintenance list must be done.
- Next to the columns of periods in the schedule, reference pages have been added for easy access to service data and procedures necessary for each operation.
- Periodic maintenance service must be done according to whichever interval occurs first, the miles or months.
- Maintenance services after the last period should be done at the same interval as before unless otherwise noted.
- Skipping even one item in the list can cause the engine to run poorly and increase exhaust emissions.

MAINTENANCE SCHEDULE

SCHEDULE A

CONDITIONS:

- Towing a trailer, using a camper or car top carrier.
- Repeated short trips of less than 8 km (5 miles) with outside temperature remaining below freezing.
- Extensive idling and/or low speed driving for long distances, such as police, taxi or door-to-door delivery use.
- Operating on dusty, rough, muddy or salt spread roads.

Maintenance operation: A = Check and adjust if necessary.

R= Replace, change or lubricate.

I = Inspect and correct or replace if necessary.

System	Service interval (Odometer reading or months, whichever comes first)	Maintenance services beyond 96,000 km (60,000 miles) should continue to be performed at the same intervals shown in each maintenance schedule.																	See page (item No.)	
		x 1,000 km	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96		
	Maintenance items	x 1,000 miles	3.75	7.5	11.25	15	18.75	22.5	26.25	30	33.75	37.5	41.25	45	48.75	52.5	56.25	60	Months	
ENGINE	Valve clearance																	A	A: Every 72 months	MA-8 (item 11)
	Drive belts (1)								I									I	I: 36 months, 72 months	MA-6 (item 1)
	Engine oil and oil filter ★		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R: Every 6 months	MA-7 (item 5)
	Engine coolant (2)													R					R: 36 months	MA-7 (item 6)
	Exhaust pipes and mountings					I				I					I				I	I: Every 24 months
FUEL	Air Filter ★ (3)		I	I	I	I	I	I	I	R	I	I	I	I	I	I	I	R	I: Every 6 months R: Every 36 months	MA-6 (item 2, 3)
	Fuel lines and connections (4)									I								I	I: Every 36 months	MA-8 (item 9)
	Fuel tank cap gasket																	R	R: Every 72 months	MA-8 (item 8)
IGNITION	Spark plugs★◆									R								R	R: Every 36 months	MA-6 (item 4)
EVAP	Charcoal canister (5)																	I	I: Every 72 months	MA-7 (item 7)
BRAKES	Brake linings and drums			I		I		I		I		I		I		I		I	I: Every 12 months	MA-9 (item 14)
	Brake pads and discs (Front and rear)			I		I		I		I		I		I		I		I	I: Every 12 months	MA-9 (item 13)
	Brake line pipes and hoses					I				I					I			I	I: Every 24 months	MA-8 (item 12)
CHASSIS	Steering linkage			I		I		I		I		I		I		I		I	I: Every 12 months	MA-10 (item 15)
	SRS airbag	I: First period, 10 years. I: After that every 2 years.																	MA-10 (item 16)	
	Ball joints and dust covers			I		I		I		I		I		I		I		I	I: Every 12 months	MA-10 (item 15)
	Automatic transmission					R				R				R				R	R: Every 24 months	MA-11 (item 19)
	Transfer and differential					R				R				R				R	R: Every 24 months	MA-12 (item 20)
	Steering gear box oil (6)					I				I				I				I	I: Every 24 months	MA-11 (item 17)
	Front wheel bearing and thrust bush grease									R								R	R: Every 36 months	MA-12 (item 21)
	Steering knuckle and chassis grease (7)		R			R		R		R		R		R		R		R	R: Every 12 months	MA-12 (item 22)
	Propeller shaft grease (7)		R			R		R		R		R		R		R		R	R: Every 12 months	MA-12 (item 22)
Bolts and nuts on chassis and body (8)			I		I		I		I		I		I		I		I	I: Every 12 months	MA-13 (item 23)	

Maintenance services indicated by ★ or ◆ are required under the terms of the Emission Control Systems Warranty. See Owner's Guide or Warranty Booklet for complete warranty information.

★ : **For vehicles sold in California and Massachusetts**

◆ : **For vehicles sold outside California and Massachusetts**

- (1) After 96,000 km (60,000 miles) or 72 months, inspect every 12,000 km (7,500 miles) or 12 months.
- (2) After 72,000 km (45,000 miles) or 36 months, replace every 48,000 km (30,000 miles) or 24 months.
- (3) Applicable when operating mainly on dusty roads. If not, follow schedule B.
- (4) Includes inspection of fuel tank band vapor vent system.
- (5) For vehicles sold in California and Massachusetts.
- (6) Inspect the steering gear box for oil leakage only.
- (7) If the propeller shaft has been immersed in water, it should be re-greased within a day.
- (8) Applicable only when operating mainly on rough, muddy roads. The applicable parts are listed below. For other usage conditions, refer to SCHEDULE B.
 - Bolts for seat installation.

SCHEDULE B

CONDITIONS:

Conditions others than those listed for SCHEDULE A.

Maintenance operation: A = Check and adjust if necessary.

R = Replace, change or lubricate.

I = Inspect and correct or replace if necessary.

System	Service interval (Odometer reading or months, whichever comes first)	Maintenance services beyond 96,000 km (60,000 miles) should continue to be performed at the same intervals shown for each maintenance schedule.										See page (item No.)	
		x 1,000 km	12	24	36	48	60	72	84	96	Months		
		Maintenance items	x 1,000 miles	7.5	15	22.5	30	37.5	45	52.5			60
ENGINE	Valve clearance									A	A: Every 72 months	MA-8 (item 11)	
	Drive belts (1)					I				I	I: 36 months, 72 months	MA-6 (item 1)	
	Engine oil and oil filter ★		R	R	R	R	R	R	R	R	R: Every 12 months	MA-7 (item 5)	
	Engine coolant (2)							R			R: 36 months	MA-7 (item 6)	
	Exhaust pipes and mountings						I				I	I: Every 36 months	MA-8 (item 10)
FUEL	Air filter ★						R				R	R: Every 36 months	MA-6 (item 3)
	Fuel lines and connections (3)							I			I	I: Every 36 months	MA-8 (item 9)
	Fuel tank cap gasket										R	R: Every 72 months	MA-8 (item 8)
IGNITION	Spark plugs ★◆						R				R	R: Every 36 months	MA-6 (item 4)
EVAP	Charcoal canister (4)										I	I: Every 72 months	MA-7 (item 7)
BRAKES	Brake linings and drums				I			I			I	I: Every 24 months	MA-9 (item 14)
	Brake pads and discs (Front and rear)				I			I			I	I: Every 24 months	MA-9 (item 13)
	Brake line pipes and hoses				I			I			I	I: Every 24 months	MA-8 (item 12)
CHASSIS	Steering linkage				I			I			I	I: Every 24 months	MA-10 (item 15)
	SRS airbag		I: First period, 10 years.					I: After that every 2 years.					MA-10 (item 16)
	Ball joints and dust covers			I			I			I	I	I: Every 24 months	MA-10 (item 15)
	Front wheel bearing and thrust bush grease						R				R	R: Every 36 months	MA-12 (item 21)
	Steering knuckle and chassis grease (5)			R			R			R	R	R: Every 24 months	MA-12 (item 22)
	Propeller shaft grease (5)			R			R			R	R	R: Every 24 months	MA-12 (item 22)
	Automatic transmission			I			I			I	I	I: Every 24 months	MA-11 (item 18)
	Transfer, differential and steering gear box oil (6)			I			I			I	I	I: Every 24 months	MA-11 (item 17,18)
	Bolt and nuts on chassis and body (7)			I			I			I	I	I: Every 24 months	MA-13 (item 23)

Maintenance services indicated by ★ or ◆ are required under the terms of the Emission Control Systems Warranty. See Owner's Guide or Warranty Booklet for complete warranty information.

★ : For vehicles sold in California and Massachusetts

◆ : For vehicles sold outside California and Massachusetts

- (1) After 96,000 km (60,000 miles) or 72 months, inspect every 12,000 km (7,500 miles) or 12 months.
- (2) After 72,000 km (45,000 miles) or 36 months, replace every 48,000 km (30,000 miles) or 24 months.
- (3) Includes inspection of fuel tank band vapor vent system.
- (4) For vehicles sold in California and Massachusetts.
- (5) If the propeller shaft has been immersed in water, it should be re-greased within a day.
- (6) Inspect the steering gear box for oil leakage only.
- (7) The applicable parts are listed below.
 - Bolts for seat installation.