


WIRE HARNESS AND CONNECTOR

HINT: The SRS wire harness is integrated with the cowl wire harness assembly and floor wire harness assembly.

The wires for the SRS wire harness are encased in a black corrugated tube and all the connectors in the system are a standard yellow color.

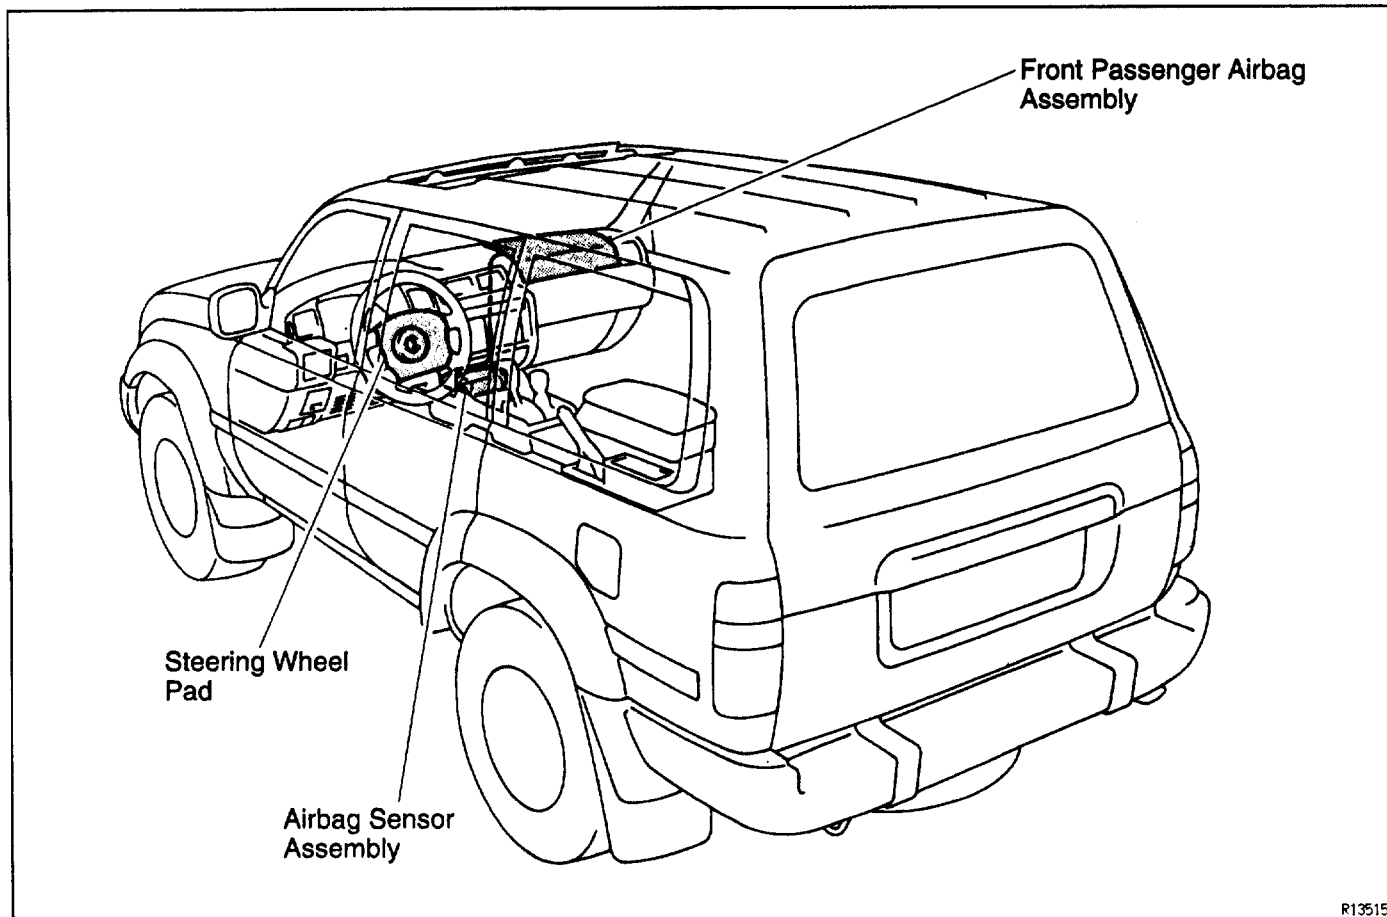

R13515

INSPECTION ITEMS

1. VEHICLES NOT INVOLVED IN A COLLISION

Do a diagnostic system check.

(See page [RS-38](#))

2. VEHICLES INVOLVED IN A COLLISION

(a) Do a diagnostic system check.

(See page [RS-38](#))

(b) Check for breaks in all wires of the SRS wire harness, and for exposed conductors.

(c) Check to see if the SRS wire harness connectors are cracked or chipped.

REPLACEMENT REQUIREMENTS

In the following cases, replace the wire harness or connector.

- If any part of the SRS wire harness or any connector has been found to be faulty in troubleshooting.
- If any part of the SRS wire harness or any connector has been found to be faulty during the check in items 2–(b) or (c).

NOTICE:

- **If the wire harness used in the SRS is damaged, replace the whole wire harness assembly.**

-MEMO -