


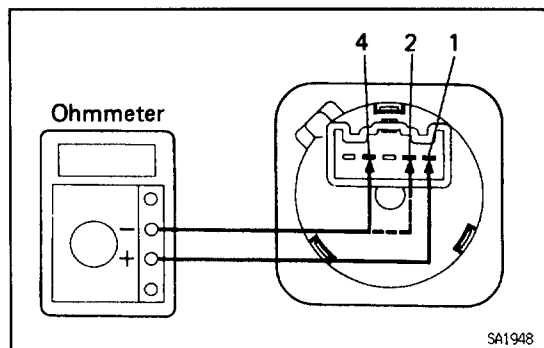

DIFFERENTIAL LOCK CONTROL SWITCH


DIFF. LOCK CONTROL SWITCH INSPECTION

INSPECT SWITCH CONTINUITY

Inspect the switch continuity between terminals, as shown.

Terminal Switch position	1 (B)	2 (RF)	4 (R)
OFF			
RR	○		○
FR-RR	○	○	○

If continuity is not as specified, replace the switch.

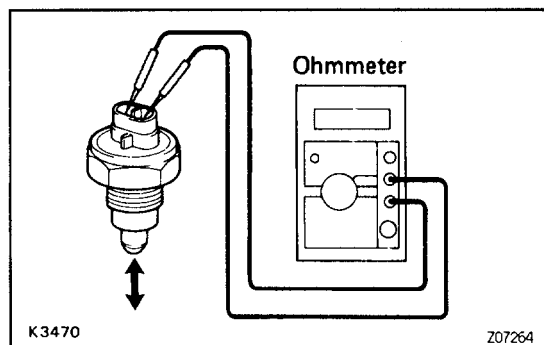

DIFFERENTIAL LOCK POSITION SWITCH

DIFF. LOCK POSITION SWITCH INSPECTION

1. **INSPECT DIFF. LOCK POSITION SWITCH FRONT AND REAR:**
 - (a) Check that there is continuity between terminals when the switch is pushed (differential connected position).
 - (b) Check that there is no continuity when the switch is free (differential disconnected position).

If operation is not as specified, replace the switch.
2. **INSPECT CENTER DIFF. INDICATOR SWITCH**
(See page [TR-12](#))

COMBINATION METER

VEHICLE SPEED SENSOR AND INDICATOR LIGHT INSPECTION

1. **INSPECT VEHICLE SPEED SENSOR**
(See page [BE-40](#))
2. **INSPECT INDICATOR LIGHT**