 
 
 


FRONT AXLE

PREPARATION

SST (SPECIAL SERVICE TOOLS)

	09308-00010 Oil Seal Puller	
	09605-60010 Steering Knuckle Bearing Cup Replacer—	Bearing outer races installation
	09606-60020 Steering Knuckle Bearing Remover	
	09607-60020 Front Wheel Adjusting Nut Wrench	
	09608-35014 Axle Hub & Drive Pinion Bearing Tool Set	Bearing outer races installation Oil seal installation
	(09608-06020) Handle—	
	(09608-06150) Rear Hub Outer Bearing Cup Replacer	
	(09608-06200) Rear Axle Bearing Replacer	
	(09608-06210) Rear Axle Bearing Replacer	
	09611-22012 Tie Rod End Puller	
	09612-65014 Steering Worm Bearing Puller	Steering knuckle bushing removal
	(09612-01010) Claw "A"	

	(09612-01050) Hanger Pin with Nut	
	09618-60010 Front Axle & Drive Shaft Bearing Replacer	Oil seal installation

RECOMMENDED TOOLS

	09905-00012 Snap Ring No.1 Expander .	
	09905-00013 Snap Ring Pliers .	

EQUIPMENT

Torque wrench	
Dial indicator with magnetic base	
Spring tension gauge	