 
 
 

STEERING

PRECAUTION

- Care must be taken to replace parts properly because they could affect the performance of the steering system and result in a driving hazard.
- The steering wheel pad has an SRS (Supplemental Restraint System) airbag built in, so take all due precautions when handling it. For more details, see the RS section.

PREPARATION

SST (SPECIAL SERVICE TOOLS)

	09527-10011 Rear Axle Shaft Bearing Remover	Vane pump drive gear
	09610-55012 Pitman Arm Puller	Steering damper
	09611-22012 Tie Rod End Puller	Relay rod Tie rod Steering damper with steering damper bracket
	09616-00010 Steering Worm Bearing Adjusting Socket	Adjusting total preload
	09628-62011 Ball Joint Puller	Pitman arm
	09630-00013 Power Steering Gear Housing Overhaul Tool set	
	(09631-00050) No. 3 Wrench	No.1 lock nut
	(09631-00120) Teflon Ring Former	Teflon ring
	(09631-00141) Overhaul Stand	PS gear housing
	09631-10030 Oil Seal Remover	Side front plate
	09631-22020 Power Steering Hose Nut 14 x 17 mm Wrench Set	Pressure feed tube and return tubes