




GROUND POINT

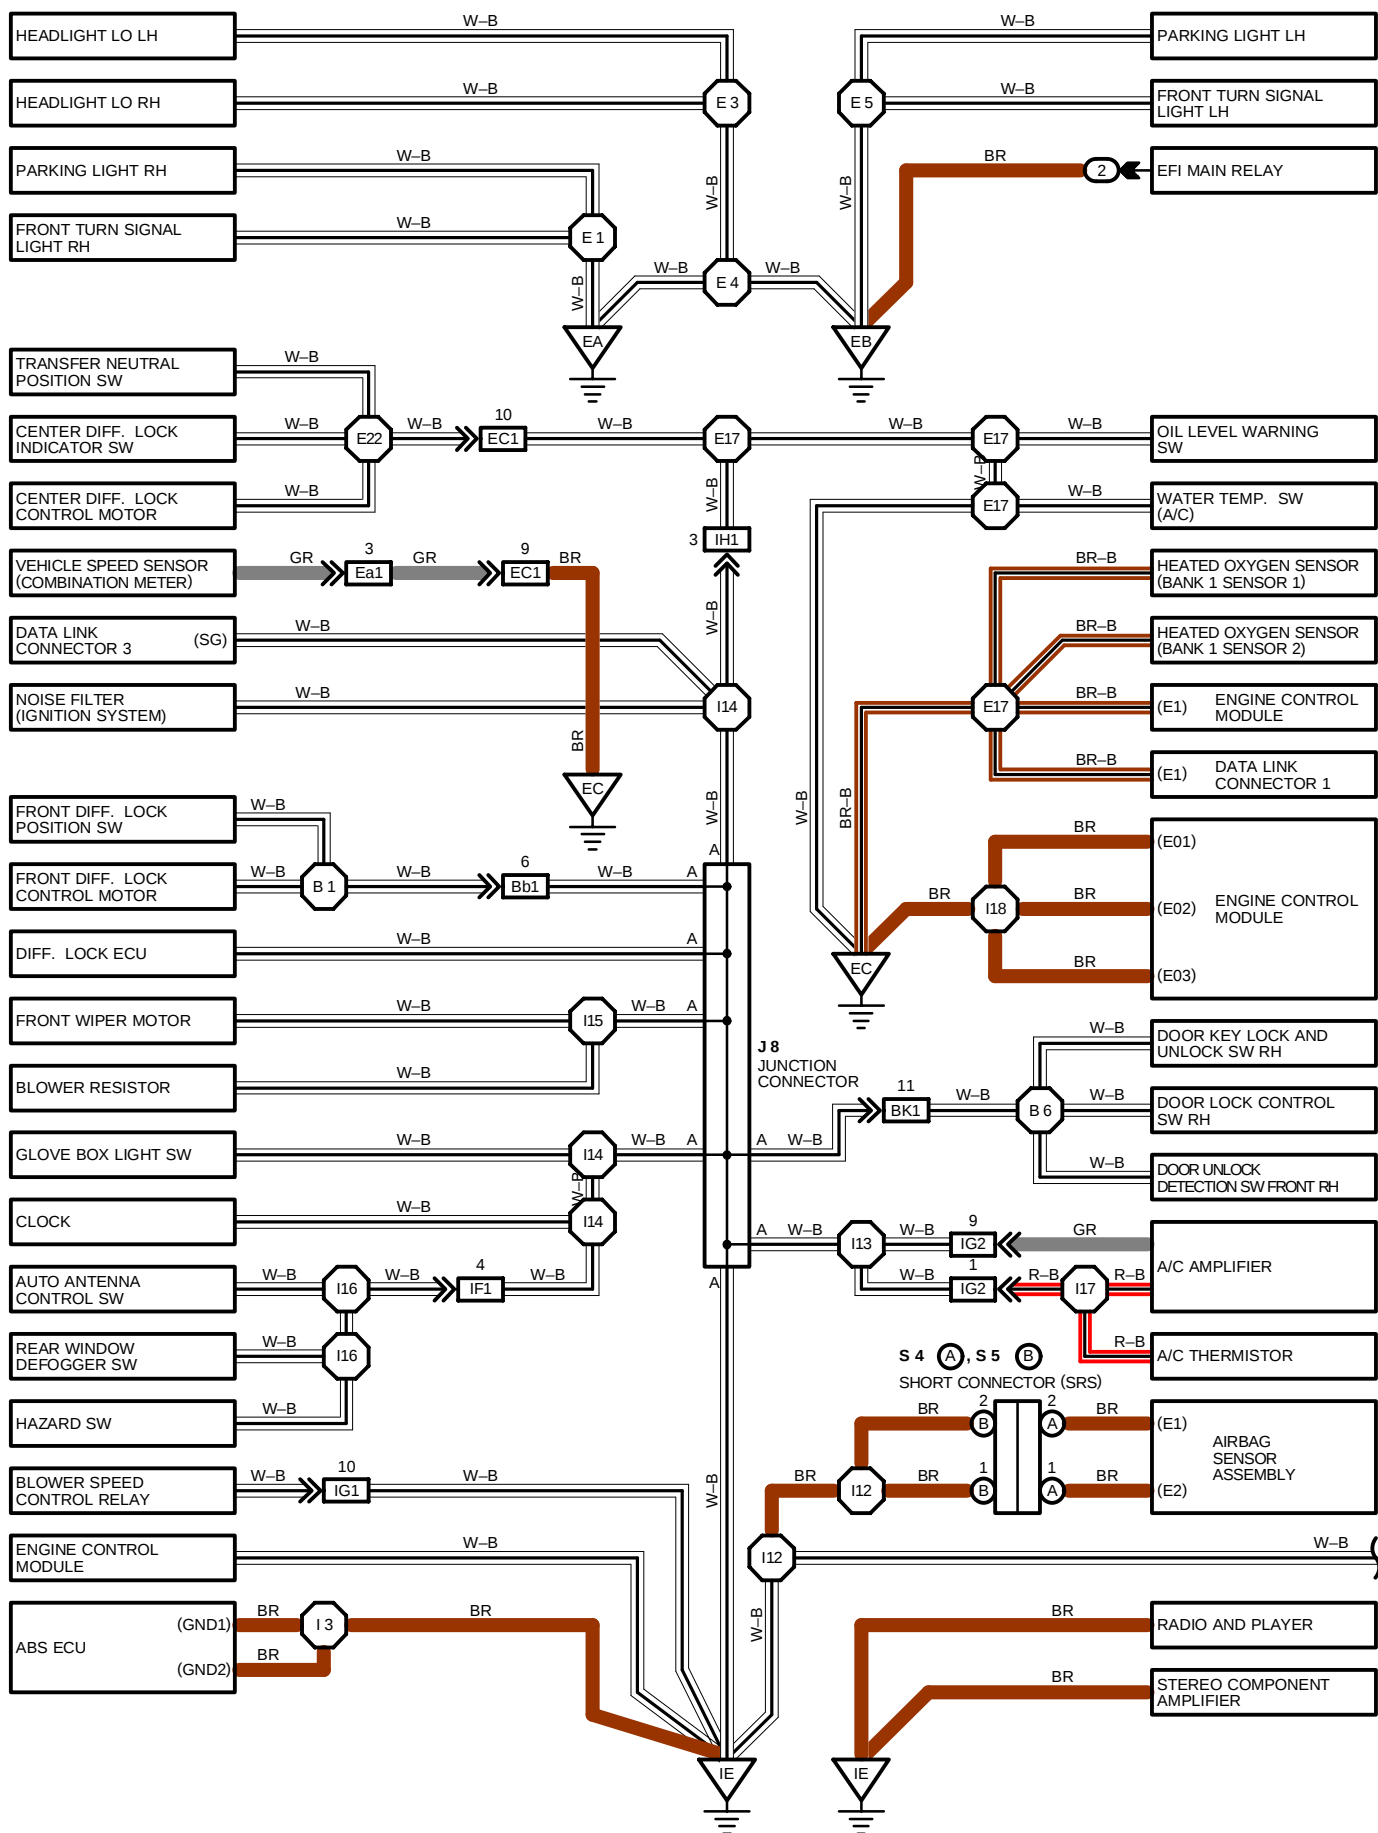

GROUND POINT

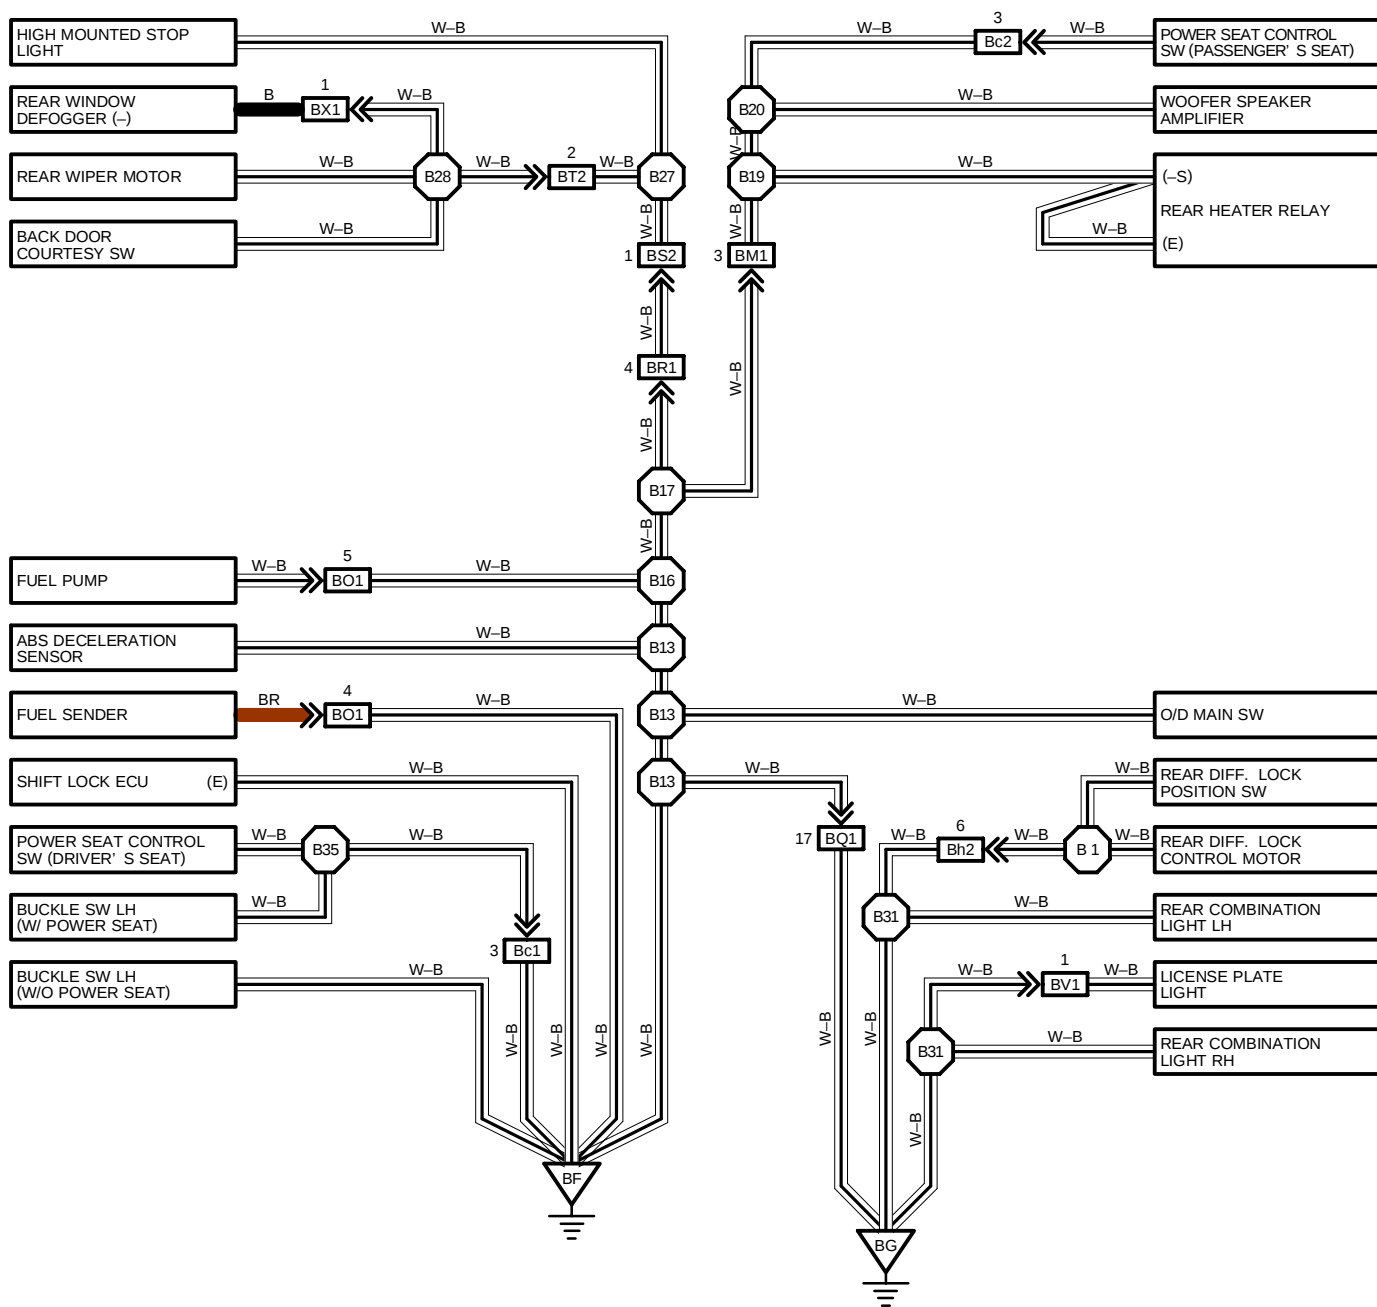


 J 2 BLUE




(HINT : SEE PAGE 7)

 J 7 BLUE




(HINT : SEE PAGE 7)

 J 8 BLUE




(HINT : SEE PAGE 7)

S 4 A YELLOW

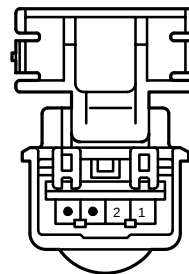

S 5 B YELLOW

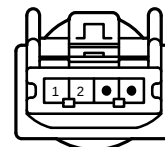

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
J 2	25	J 8	25	S 5	B 25
J 7	25	S 4	A 25		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT KICK PANEL)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA4	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (RIGHT FENDER)
EC1	30	ENGINE WIRE AND TRANSMISSION WIRE (NEAR THE STARTER)
EY1	30	OIL PRESSURE SWITCH WIRE AND ENGINE ROOM MAIN WIRE (NEAR THE AIR CLEANER)
Ea1	30	TRANSMISSION WIRE AND SPEED SENSOR WIRE (NEAR THE TRANSMISSION)
IE1	32	ROOF WIRE AND COWL WIRE (LEFT KICK PANEL)
IF1	32	COWL WIRE AND INSTRUMENT PANEL WIRE (INSTRUMENT PANEL CENTER)
IG1	32	COWL WIRE AND A/C SUB WIRE (BEHIND GLOVE BOX)
IG2		
IH1	32	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)
BJ1	34	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
BK1	34	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
BM1	34	FLOOR NO. 2 WIRE FLOOR NO. 1 WIRE (UNDER THE CENTER CONSOLE)
BO1	34	FLOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 2 WIRE (BESIDE THE FUEL TANK)
BQ1	34	FLOOR NO. 3 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)
BR1	34	LUGGAGE ROOM NO. 1 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)
BS2	34	BACK DOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 1 WIRE (LEFT REAR SIDE OF ROOF)
BT2	36	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)
BV1	36	LUGGAGE ROOM NO. 3 WIRE AND FLOOR NO. 3 WIRE (UNDER THE LOWER BACK PANEL)
BX1	36	REAR WINDOW NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR RIGHT)
Bb1	36	COWL WIRE AND FRAME WIRE (RIGHT FENDER)
Bc1	38	FLOOR NO. 1 WIRE AND SEAT NO. 1 WIRE (UNDER THE DRIVER'S SEAT)
Bc2	38	FLOOR NO. 2 WIRE AND SEAT NO. 1 WIRE (UNDER THE PASSENGER'S SEAT)
Bh2	36	FLOOR NO. 3 WIRE AND FRAME NO. 2 WIRE (LEFT QUARTER PANEL INNER)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	30	FRONT SIDE OF RIGHT FENDER
EB	30	FRONT SIDE OF LEFT FENDER
EC	30	AIR INTAKE CHAMBER
ID	32	LEFT KICK PANEL
IE	32	RIGHT KICK PANEL
BF	34	UNDER THE CENTER CONSOLE BOX
BG	34	LOWER BACK PANEL CENTER

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 1	30	ENGINE ROOM MAIN WIRE	I14	32	COWL WIRE
E 3			I15		
E 4			I16		
E 5			I17		
E10			I18		
E11			B 1		
E12	30	OIL PRESSURE SWITCH WIRE	B 2	36	FRONT DOOR LH WIRE
E13			B 6	36	FRONT DOOR RH WIRE
E17	30	ENGINE WIRE	B 8	36	ROOF WIRE
E22	30	TRANSMISSION WIRE	B 9		
E23	30	COWL WIRE	B13	36	FLOOR WIRE
I 2	32		B16		
I 3			B17		
I 5			B19		
I 6			B20	36	FLOOR NO. 2 WIRE
I 7			B27	36	BACK DOOR NO. 1 WIRE
I11			B28	36	BACK DOOR NO. 2 WIRE
I12			B31	36	FLOOR NO. 3 WIRE
I13			B35	38	SEAT NO. 1 WIRE