


OVERALL ELECTRICAL WIRING DIAGRAM

HOW TO USE THIS MANUAL

* The system shown here is an EXAMPLE ONLY. It is different to the actual circuit shown in the wiring diagram section.

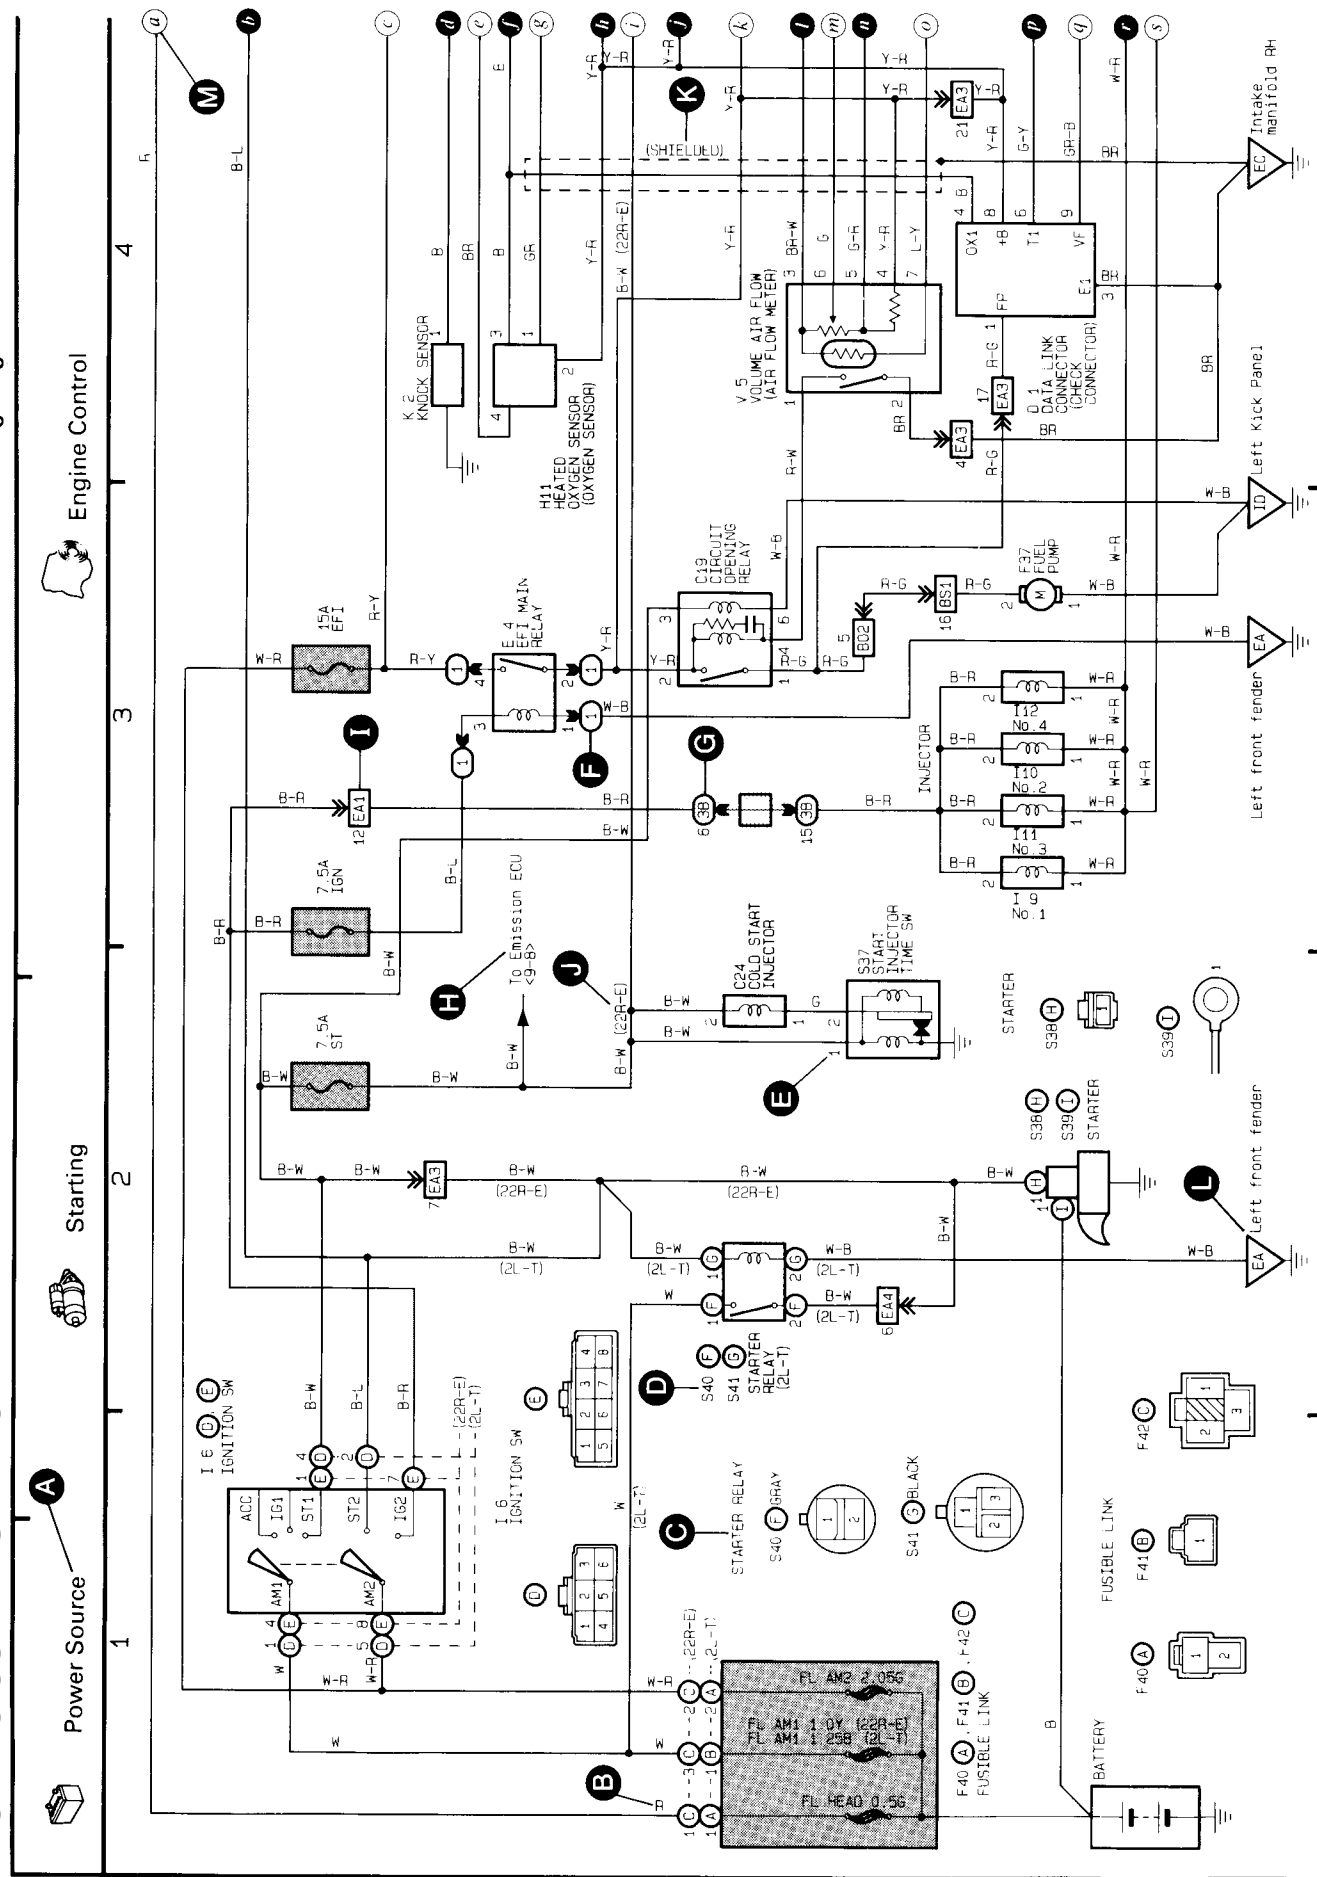

A: System Title

 
B: Indicates the wiring color.

Wire colors are indicated by an alphabetical code.

B = Black L = Blue R = Red
 BR = Brown LG = Light Green V = Violet
 G = Green O = Orange W = White
 GR = Gray P = Pink Y = Yellow

The first letter indicates the basic wire color and the second letter indicates the color of the stripe.

Example: L - Y



C: Indicates the connector to be connected to a part (the numeral indicates the pin No.)

D: The position of the parts is the same as shown in the wiring diagram and wire routing.

 
E: Indicates the pin number of the connector. The numbering system is different for female and male connectors.

Example: Numbered in order from upper left to lower right



Female

Numbered in order from upper right to lower left



Male

The numbering system for the overall wiring diagram is the same as above.

F: Indicates a Relay Block. No Shading is used and only the Relay Block No. is shown to distinguish it from the J/B.

Example: ① Indicates Relay Block No. 1.

G: Junction Block (The number in the circle is the J/B No. and connector code is shown beside it). Junction Blocks are shaded to clearly separate them from other parts (different junction blocks are shaded differently for further clarification.).

Example:




3B indicates that it is inside Junction Block No. 3.

H: Indicates related system.

I: Indicates the wiring harness and wiring harness connector. The wiring harness with male terminal is shown with arrows (↗).

Outside numerals are pin numbers.

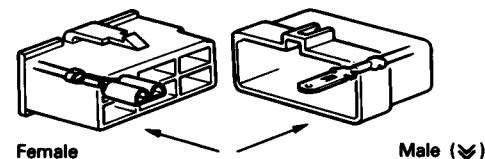

J: () is used to indicate different wiring and connector, etc. when the vehicle model, engine type, or specification is different.

K: Indicates a shielded cable.



L: Indicates and located on ground point.

M: The same code occurring on the next page indicates that the wire harness is continuous.

SYSTEM INDEX

SYSTEMS	LOCATION	SYSTEMS	LOCATION	SYSTEMS	LOCATION
ABS (Anti-Lock Brake System)	10-3	Front/Rear Differential Lock	21-3	Rear Heater	16-2
Auto Antenna	17-4	Front Wiper and Washer	8-2	Rear Wiper and Washer	8-4
Air Conditioning	23-3	Headlight	3-4	Rear Window Defogger	18-2
Back-Up Light	9-8	Horn	15-4	Remote Control Mirror	18-3
Center Differential Lock	20-3	Ignition	1-3	Shift Lock	3-2
Charging	1-4	Illumination	5-3	SRS (Supplemental Restraint System)	4-4
Cigarette Lighter	16-3	Interior Light	6-3	Starting	1-2
Clock	16-4	Light Auto Turn Off	3-3	Stop Light	17-3
Combination Meter	22-3	Moon Roof	15-2	Taillight	4-2
Cruise Control	11-3	Power Seat	12-3	Turn Signal and Hazard Warning Light	7-3
Door Lock Control	14-3	Power Source	1~23-1	Unlock and Seat Belt Warning	17-2
Electronically Controlled Transmission and A/T Indicator	9-3	Power Window	13-3		
Engine Control	2-3	Radio and Player	19-3		