



POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

The next page and following pages show the parts to which each electrical source outputs current.

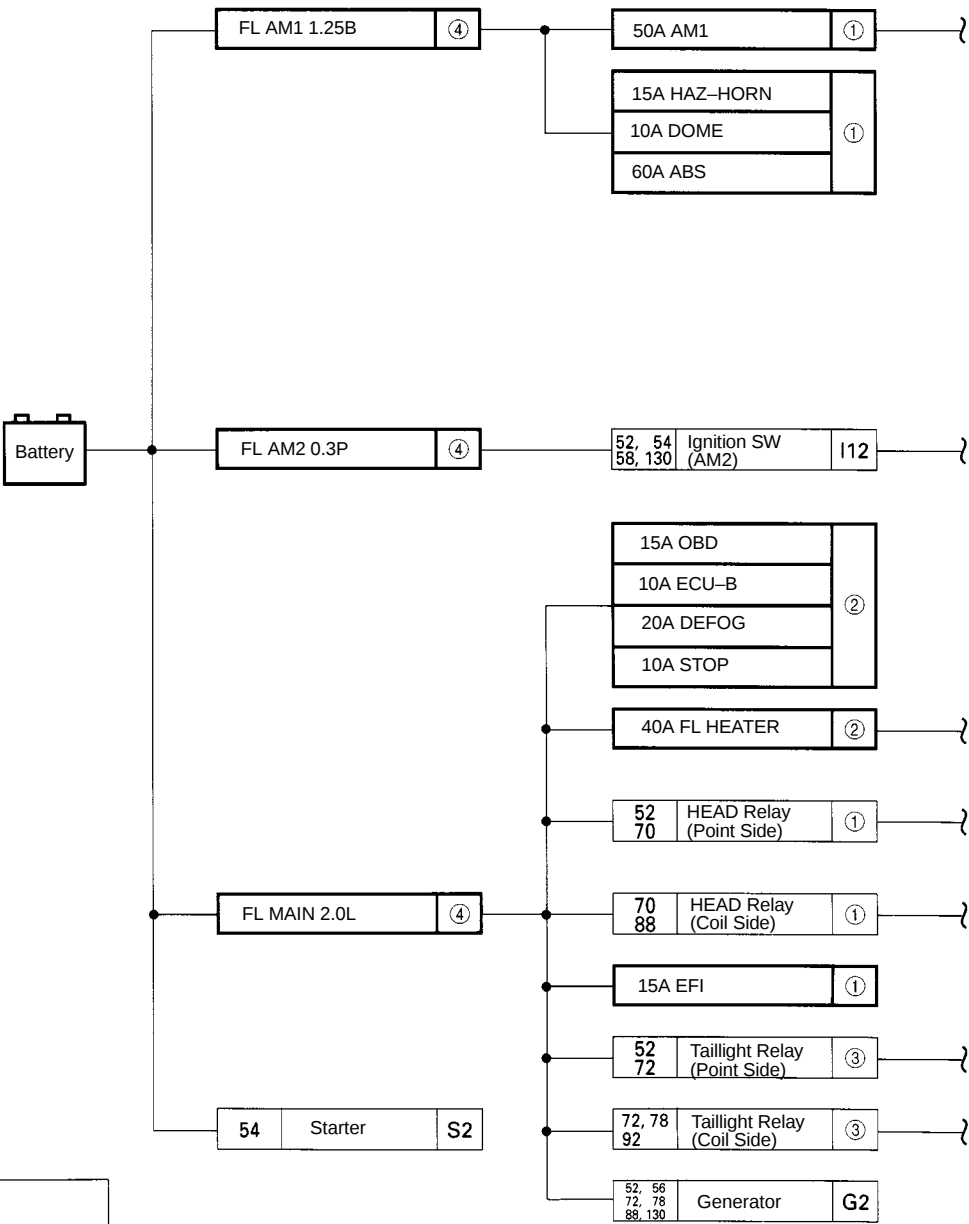


Example

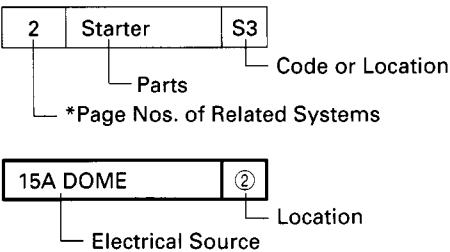

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : R/B No. 2
(See page 18)

(2) : Fuse Block (F11
See page 20)

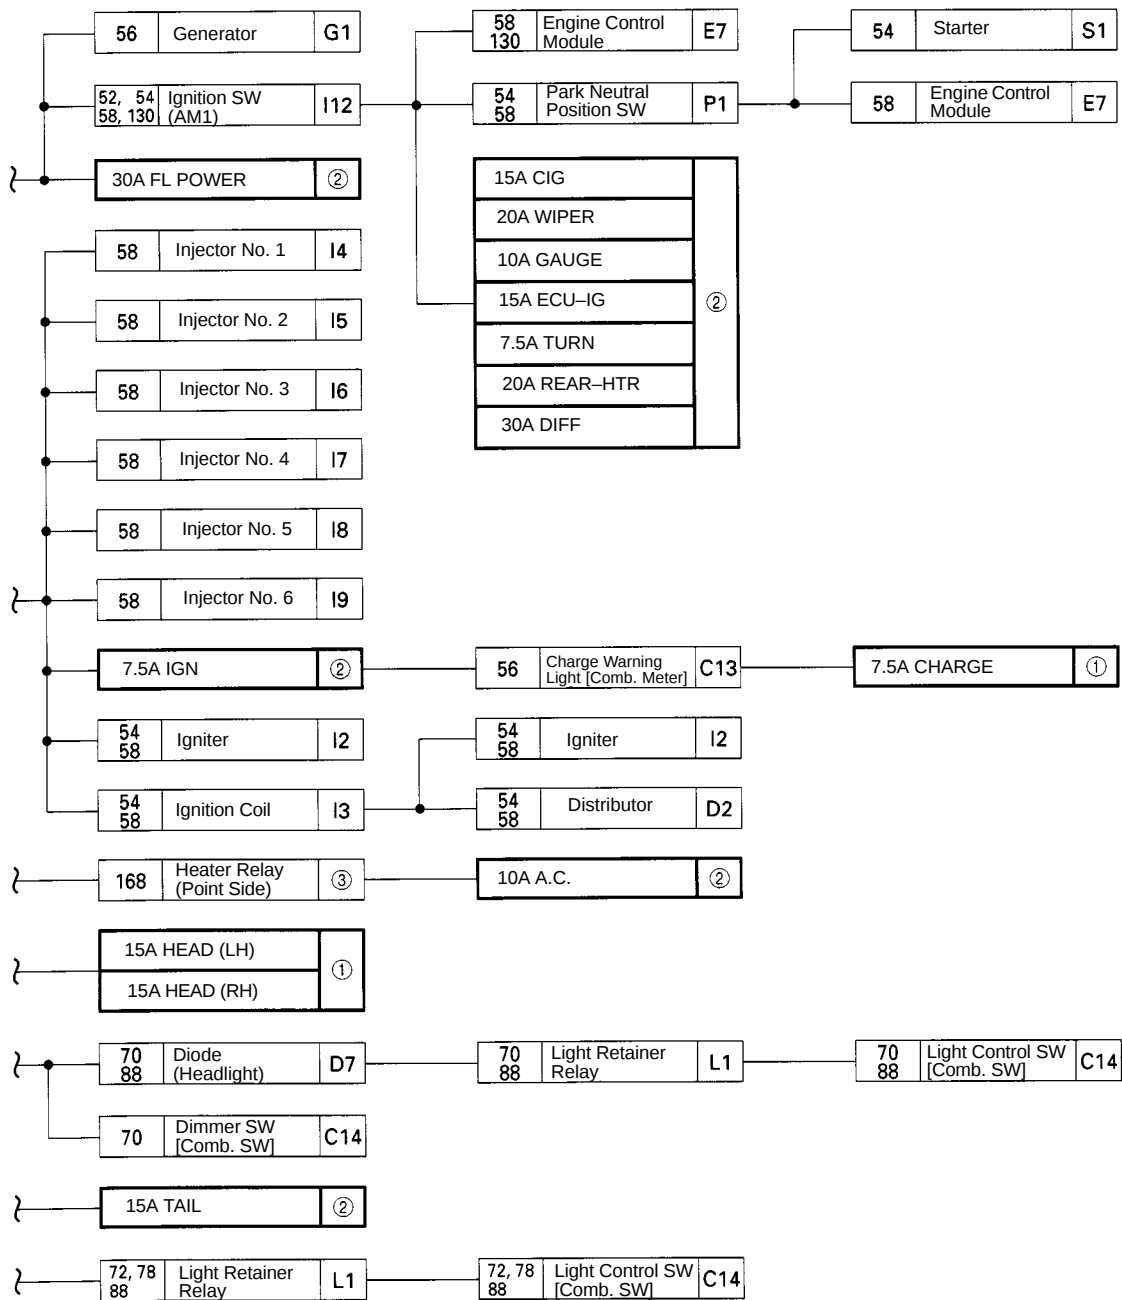

(3) : R/B No. 1
(See page 20)

(4) : Fusible Link (F6, F7, F8)
See page 22

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		168		121		117		168		121		168		143	78	78 117	121	162	168					82	112																					
					Parts		Code or Location		CB or Fuse		A/C Pressure SW		ABS Actuator		ABS Relay		Auto Antenna Motor		A/C Amplifier		A/C System Amplifier		ABS ECU		Air Inlet Control Servo Motor		Air Vent Mode Control Servo Motor		Airbag Sensor Assembly		Ashtray Illumination		Auto Antenna Control SW		ABS Deceleration Sensor		Brake Fluid Level Warning SW		Blower Motor (A/C)		Blower Motor (Heater)		Blower Resistor		Blower Speed Control Relay		Back Door Courtesy SW		Back Door Lock Motor
			A/C Pressure SW								ABS Actuator		ABS Relay		Auto Antenna Motor		A/C Amplifier		A/C System Amplifier		ABS ECU		Air Inlet Control Servo Motor		Air Vent Mode Control Servo Motor		Airbag Sensor Assembly		Ashtray Illumination		Auto Antenna Control SW		ABS Deceleration Sensor		Brake Fluid Level Warning SW		Blower Motor (A/C)		Blower Motor (Heater)		Blower Resistor		Blower Speed Control Relay		Back Door Courtesy SW		Back Door Lock Motor		
			A2		A4		A6		A7		A8		A9		A10		A12		A13		A14		A16		A17		A20		A21		A22		B1		B2		B3		B4		B5		B6		B7				
①	7.5A	CHARGE																																															
	15A	EFI																																															
	15A	HEAD (LH)																																															
	15A	HEAD (RH)																																															
	15A	HAZ-HORN																																															
	10A	DOME																																															
	60A	ABS				●		●		●							●																																
②	15A	CIG							●									●			●																												
	15A	TAIL																					●		●																								
	10A	STOP													●																																		
	20A	DEFOG																																															
	20A	WIPER																																															
	10A	GAUGE				●		●				●		●		●		●																															
	7.5A	TURN																																															
	15A	ECU-IG																																															
	20A	REAR-HTR																																															
	7.5A	IGN																																															
	10A	A.C.																																															
	30A	DIFF																																															
	30A	FL POWER																																															
	40A	FL HEATER																																															
	10A	ECU-B																																															
	15A	OBD																																															

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : R/B No. 2 (See page 18) (2) : Fuse Block (F11 See page 20) (3) : R/B No. 1 (See page 20)

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		91	94	156	126	58 121 143	58	152	91	82			94	82										98 108 112																						
					Parts		Code or Location		CB or Fuse		Front Wiper and Washer SW [Comb. SW]		Rear Wiper and Washer SW [Comb. SW]		Cooling Fan (Radio and Player)		Cruise Control ECU		Data Link Connector 1		Data Link Connector 3		Diff. Lock Control SW		Diff. Lock ECU		Diode (Front Washer)		Diode (Interior Light)			Diode (Rear Washer)		Door Courtesy Light Front LH		Door Courtesy Light Front RH		Door Courtesy Light Rear LH		Door Courtesy Light Rear RH		Door Courtesy SW Front LH		Door Courtesy SW Front RH		Door Courtesy SW Rear LH		Door Courtesy SW Rear RH	
								C15	C16	C17	D1	D3	D4	D5	D6	D8	D9	D10	D11	D12	D13	D14	D15	D16	D17	D18	D19	D22																					
①	7.5A	CHARGE						●																																									
	15A	EFI																																															
	15A	HEAD (LH)																																															
	15A	HEAD (RH)																																															
	15A	HAZ-HORN																																															
	10A	DOME												●	●	●		●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●				
	60A	ABS																																															
②	15A	CIG																																															
	15A	TAIL																																															
	10A	STOP					●																																										
	20A	DEFOG																																															
	20A	WIPER	●	●								●					●																																
	10A	GAUGE			●	●	●					●																																	●				
	7.5A	TURN																																															
	15A	ECU-IG				●																																											
	20A	REAR-HTR																																															
	7.5A	IGN																																															
	10A	A.C.																																															
	30A	DIFF									●	●																																					
	30A	FL POWER																																											●				
	40A	FL HEATER																																															
	10A	ECU-B				●	●		●																																								
	15A	OBD							●																																								

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : R/B No. 2 (See page 18) (2) : Fuse Block (F11 See page 20) (3) : R/B No. 1 (See page 20)

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		97	78 86	78 168	168	74	58	82	106	88	72	58	98	82	98	162			78 130	76 130 150																									
					Parts		Code or Location		CB or Fuse		Horn LH		Horn RH		Hazard SW		Heater Control SW and A/C SW		High Mounted Stop Light		Idle Air Control Valve		Ignition Key Cylinder Light		Ignition Key Cylinder Light Relay		Ignition SW, Unlock Warning SW and Key Interlock Solenoid		Light Retainer Relay		License Plate Light		Mass Air Flow Meter		Moon Roof Control Relay		Moon Roof Control SW and Personal Light		Moon Roof Limit SW and Motor		Noise Filter (Oil Pressure Sender)		Oil Level Warning SW		Oil Pressure Sender		O/D Main SW	
								H7	H8	H9	H10	H11	H12	I1	I10	I11	I12	L1	L2	M1	M2	M3	M4	N2	O1	O2	O4	P1																				
①	7.5A	CHARGE																																														
	15A	EFI									●						●																															
	15A	HEAD (LH)																																														
	15A	HEAD (RH)																																														
	15A	HAZ—HORN	●	●	●																																											
	10A	DOME										●	●						●																													
	60A	ABS																																														
②	15A	CIG											●																																			
	15A	TAIL			●	●										●								●																								
	10A	STOP							●																																							
	20A	DEFOG																																														
	20A	WIPER																																														
	10A	GAUGE				●	●														●	●	●	●	●																							
	7.5A	TURN			●																																											
	15A	ECU-IG													●																																	
	20A	REAR-HTR																																														
	7.5A	IGN																																														
	10A	A.C.					●																																									
	30A	DIFF																																														
	30A	FL POWER															●			●																												
	40A	FL HEATER																																														
	10A	ECU-B													●																																	
	15A	OBD																																														

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : R/B No. 2
(See page 18)

(2) : Fuse Block
(F11 See page 20)

(3) : R/B No. 1
(See page 20)

[illegible]

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems	76	86	74	72	76	86	74	72	152	160	82	137	94	104		140	78 156	58 106 126	74 121 130	106	
			Parts																					
			Code or Location																					
CB or Fuse			Back-Up Light LH [Rear Comb. Light LH]	Rear Turn Signal Light LH [Rear Comb. Light LH]	Stop Light LH [Rear Comb. Light LH]	Tailight LH [Rear Comb. Light LH]	Back-Up Light RH [Rear Comb. Light RH]	Rear Turn Signal Light RH [Rear Comb. Light RH]	Stop Light RH [Rear Comb. Light RH]	Tailight RH [Rear Comb. Light RH]	Rear Diff. Lock Position SW	Rear Heater	Rear Heater Relay	Rear Interior Light	Rear Window Defogger	Rear Wiper Motor	Rear Wiper Relay	Remote Control Mirror LH	Remote Control Mirror RH	Seat Belt Warning Relay	Stereo Component Amplifier	Stop Light SW	Shift Lock ECU	
			R8				R9				R11	R14	R15	R16	R17	R19	R20	R21	R22	S3	S11	S13	S14	
①	7.5A	CHARGE																						
	15A	EFI																						
	15A	HEAD (LH)																						
	15A	HEAD (RH)																						
	15A	HAZ-HORN		●																				
	10A	DOME													●					●	●			
	60A	ABS																						
②	15A	CIG					●											●	●		●			●
	15A	TAIL				●					●										●			
	10A	STOP			●				●														●	●
	20A	DEFOG													●									
	20A	WIPER														●	●							
	10A	GAUGE	●				●				●	●								●				
	7.5A	TURN		●				●																
	15A	ECU-IG																						●
	20A	REAR-HTR										●	●											
	7.5A	IGN																						
	10A	A.C.																						
	30A	DIFF																						
	30A	FL POWER																						
	40A	FL HEATER																						
	10A	ECU-B																						
	15A	OBD																						

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : R/B No. 2
(See page 18)

(2) : Fuse Block
(F11 See page 20)

(3) : R/B No. 1
(See page 20)

