


BACK-UP LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 52)

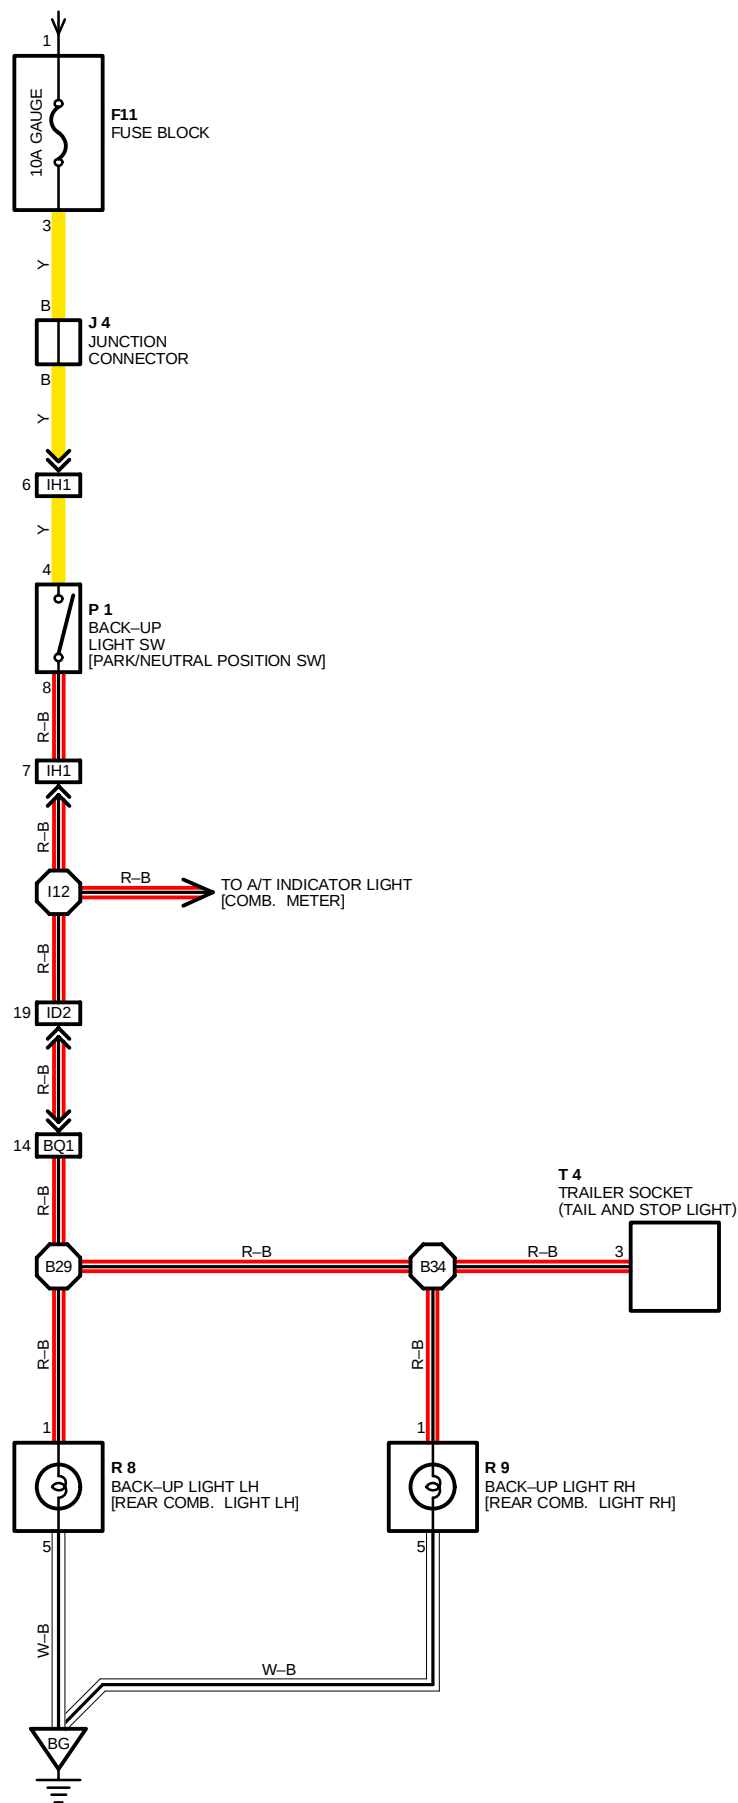

SERVICE HINTS

P 1 BACK-UP LIGHT SW [PARK/NEUTRAL POSITION SW]
 4-8 : CLOSED WITH SHIFT LEVER IN R POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F11	25	P 1	23	R 9	27
J 4	25	R 8	27	T 4	27

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ID2	32	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
IH1	32	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)
BQ1	34	FLOOR NO. 3 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BG	34	LOWER BACK PANEL CENTER

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I12	32	COWL WIRE	B34	36	FLOOR NO. 3 WIRE
B29	36	FLOOR NO. 3 WIRE			

F11


J 4 BLUE

P 1 GRAY

R 8, R 9

T 4 BLACK

(SEE PAGE 20)

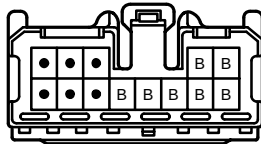

(HINT : SEE PAGE 7)

