



ILLUMINATION

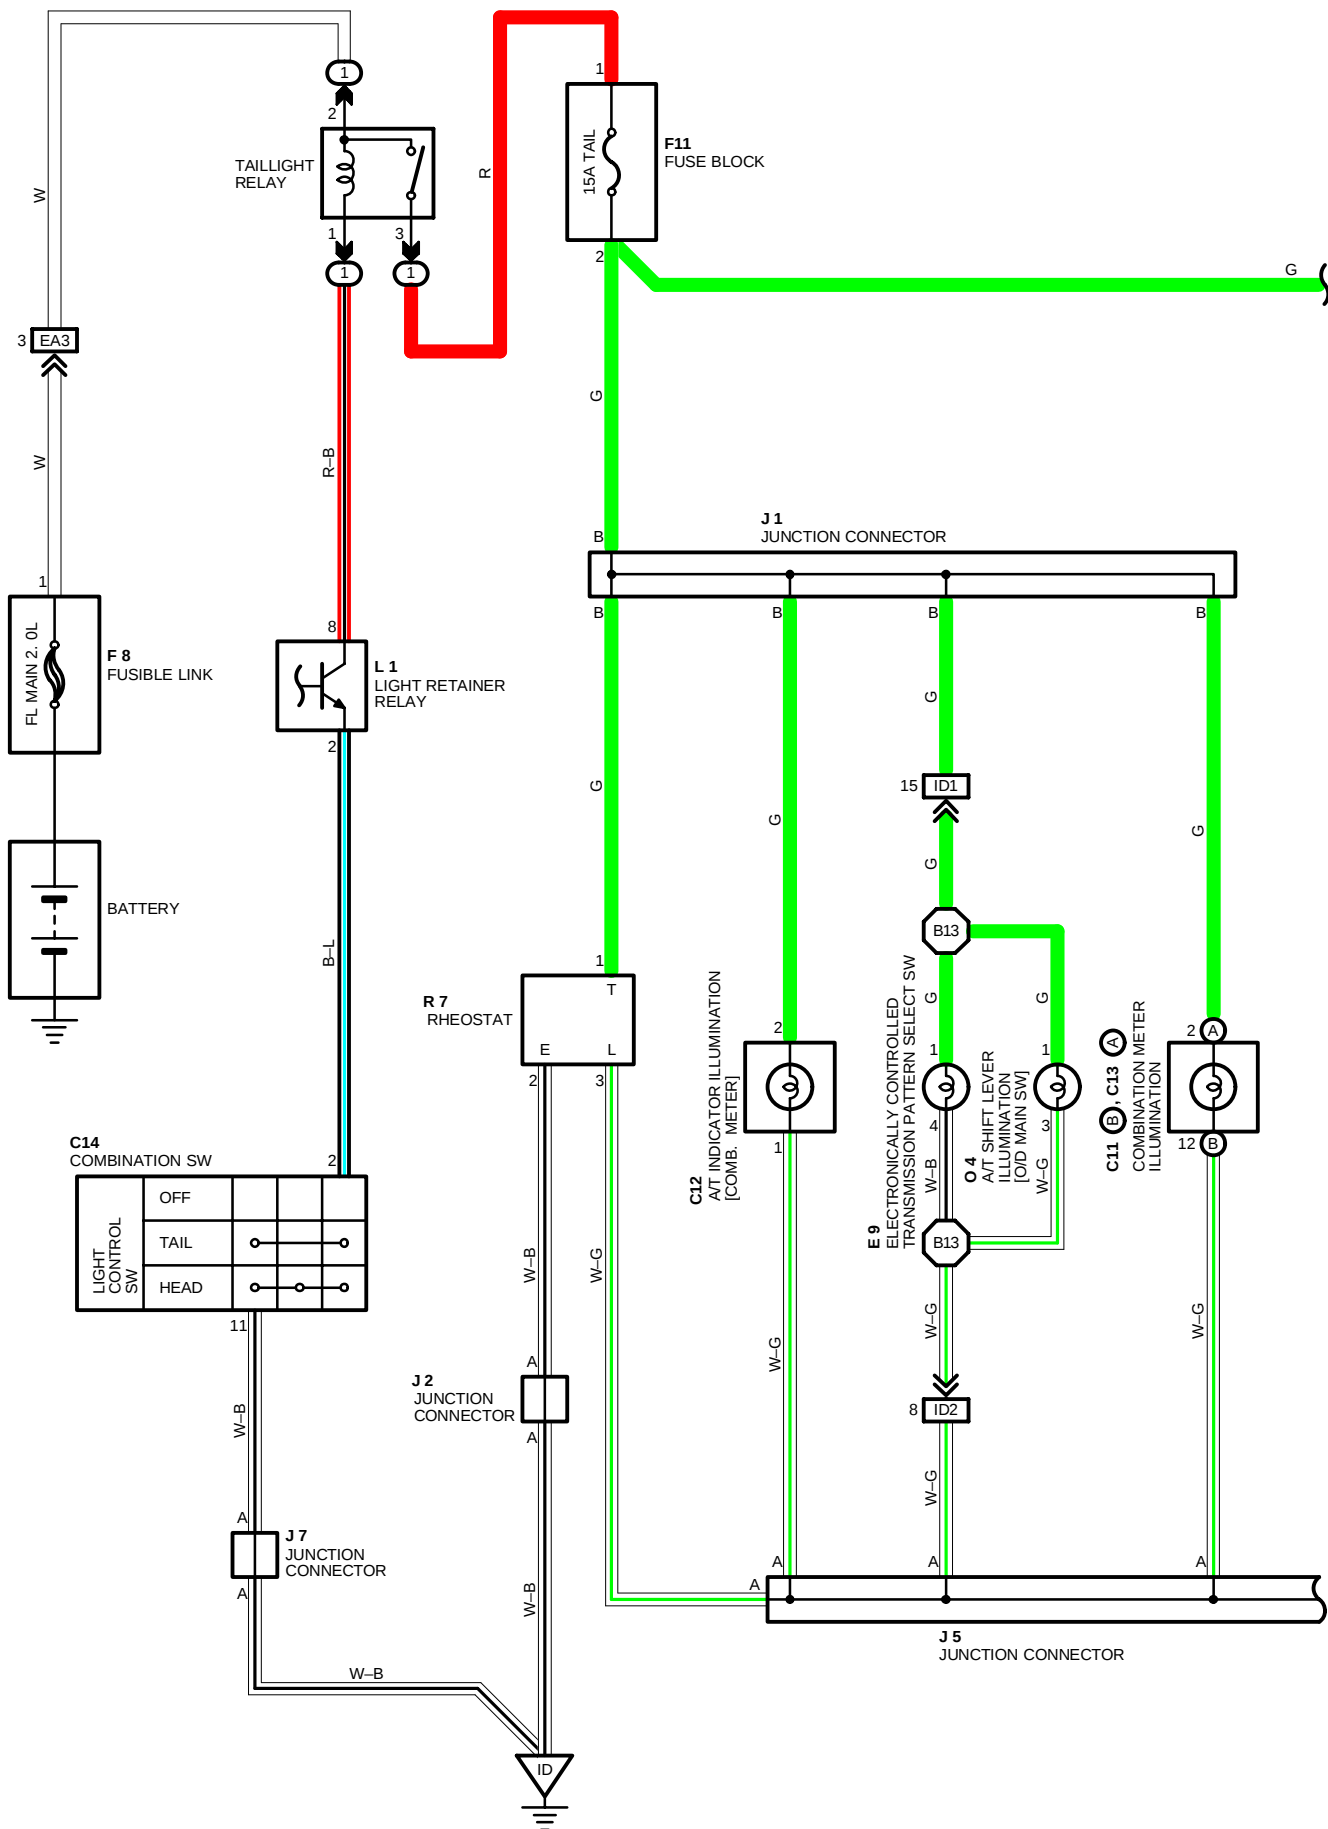

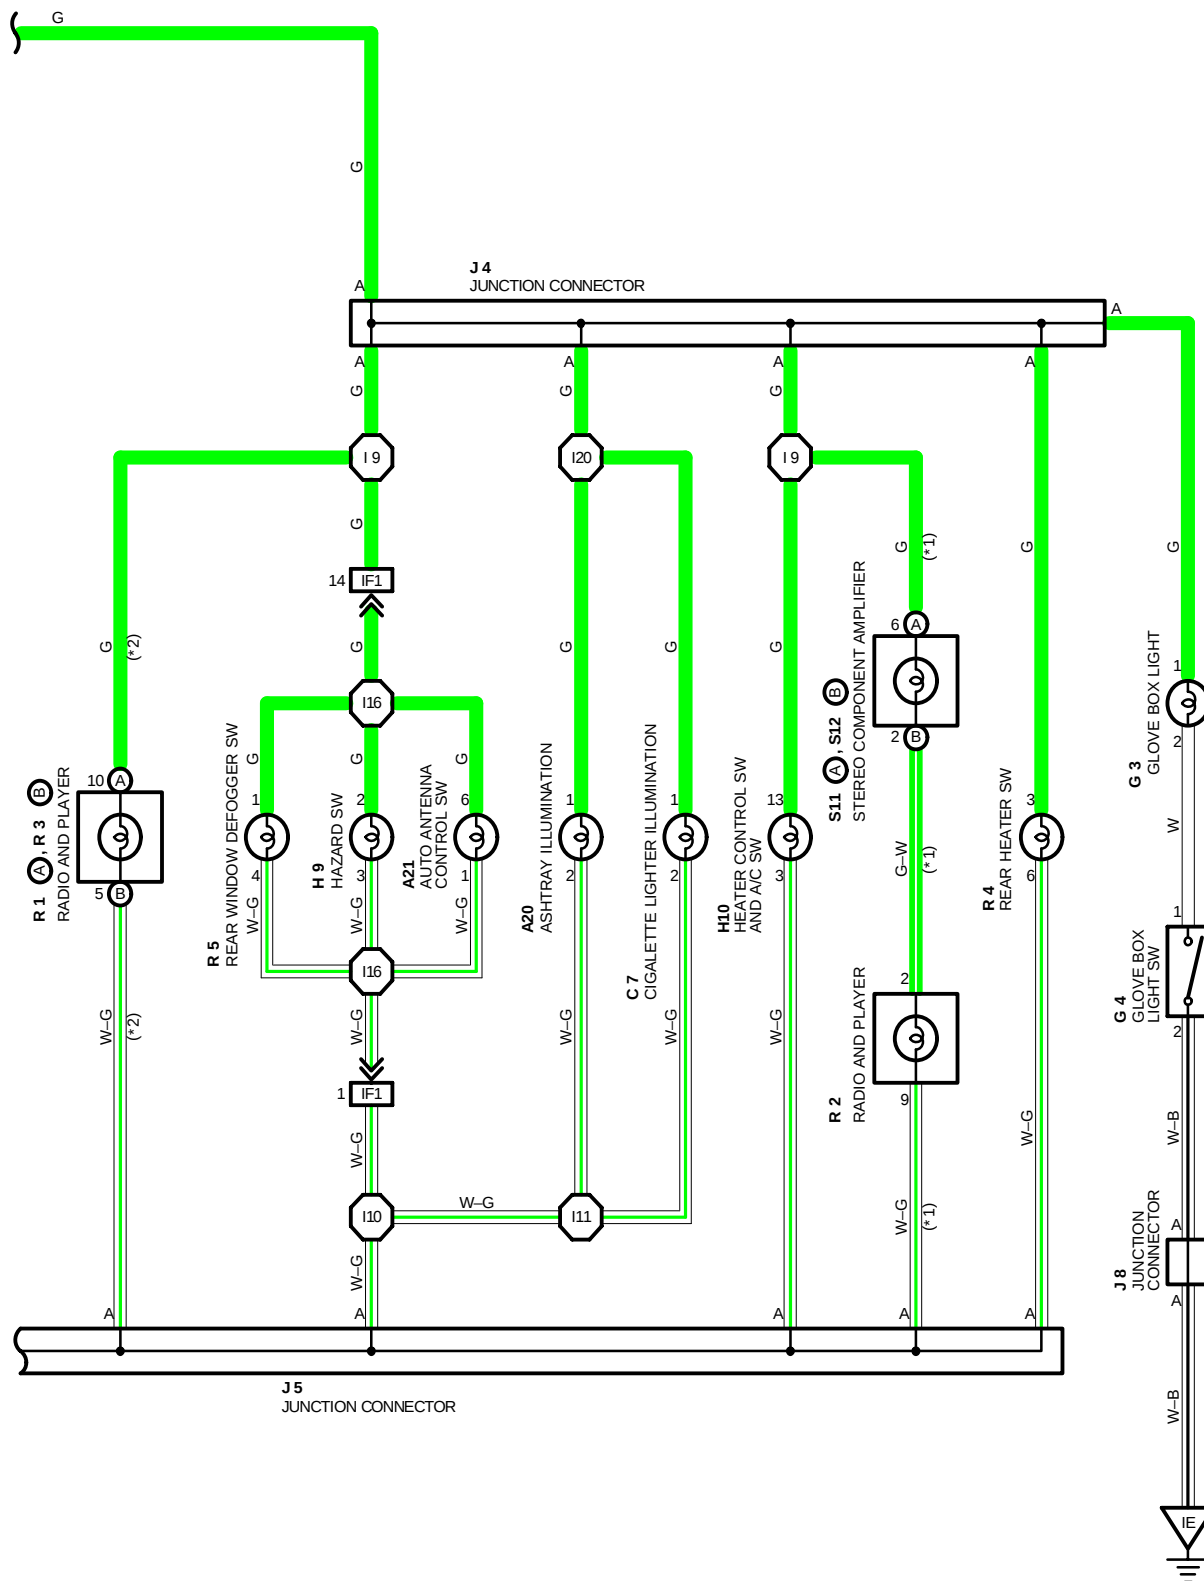

ILLUMINATION

SERVICE HINTS

TAILLIGHT RELAY

(1) 2 – (1) 3 : CLOSED WITH THE LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION (WHEN LIGHT AUTO TURN OFF SYSTEM IS OFF)

R 7 RHEOSTAT

1–2 : APPROX. **12** VOLTS WITH RHEOSTAT FULLY TURNED COUNTERCLOCKWISE AND **0** VOLTS WITH FULLY TURNED CLOCKWISE



: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A20	24	G 3	25	L 1	25
A21	24	G 4	25	O 4	27
C 7	24	H 9	25	R 1	A 25
C11	B 24	H10	25	R 2	25
C12	24	J 1	25	R 3	B 25
C13	A 24	J 2	25	R 4	25
C14	24	J 4	25	R 5	25
E 9	26	J 5	25	R 7	25
F 8	22	J 7	25	S11	A 25
F11	25	J 8	25	S12	B 25



: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT KICK PANEL)



: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA3	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
ID1	32	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
ID2		
IF1	32	COWL WIRE AND INSTRUMENT PANEL WIRE (INSTRUMENT PANEL CENTER)



: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	32	LEFT KICK PANEL
IE	32	RIGHT KICK PANEL



: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 9	32	COWL WIRE	I16	32	INSTRUMENT PANEL WIRE
I10			I20	32	COWL WIRE
I11			B13	36	FLOOR WIRE

