


POWER SOURCE

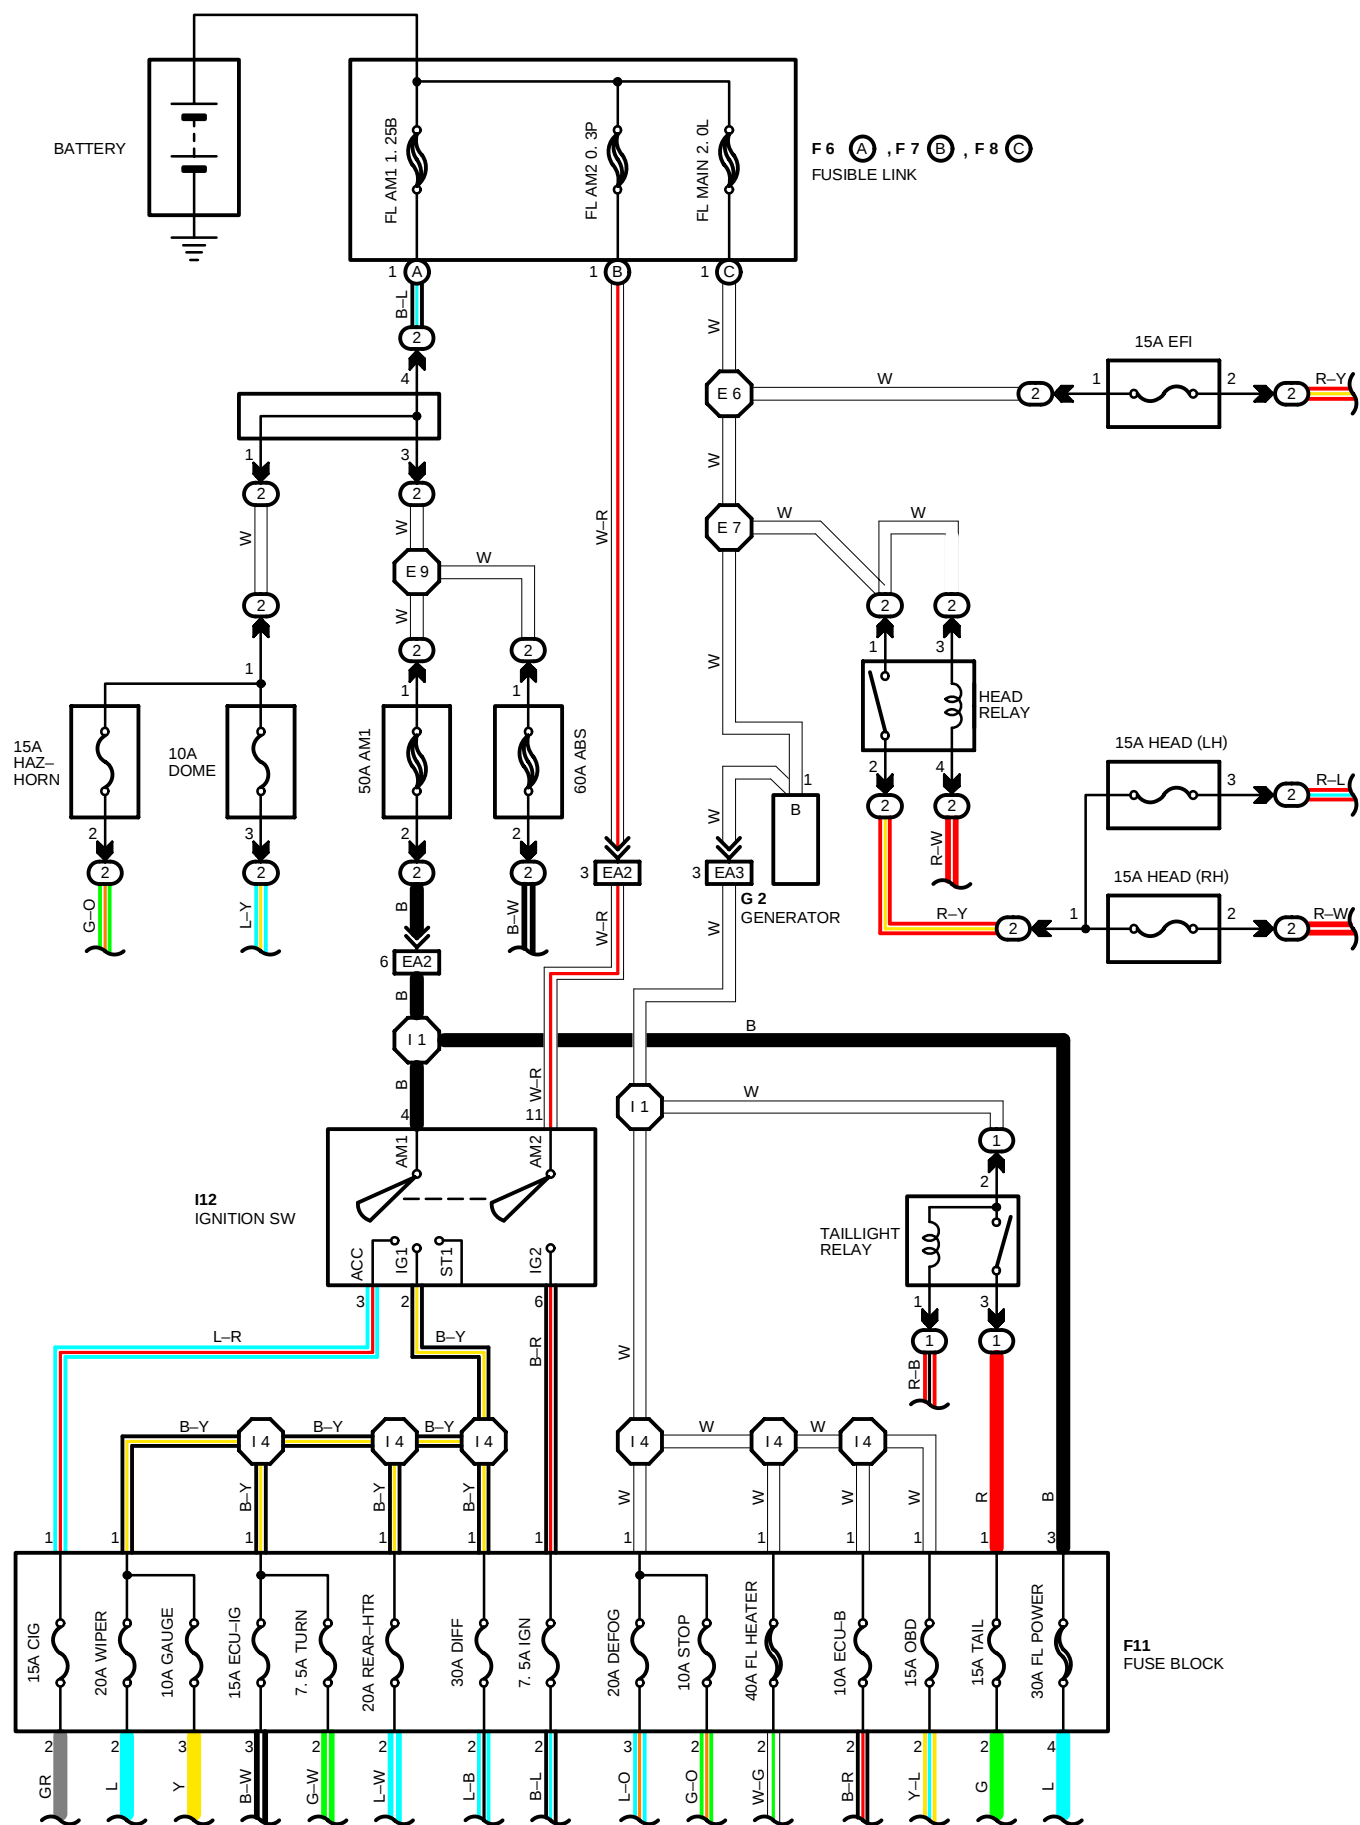

SERVICE HINTS

HEAD RELAY

(2) 1- (2) 2: CLOSED WITH THE LIGHT CONTROL SW AT **HEAD** POSITION OR DIMMER SW AT **FLASH** POSITION

I12 IGNITION SW

4-3 : CLOSED WITH THE IGNITION SW AT **ACC** OR **ON** POSITION

4-2 : CLOSED WITH THE IGNITION SW AT **ON** OR **ST** POSITION

11-6: CLOSED WITH THE IGNITION SW AT **ON** OR **ST** POSITION

TAILLIGHT RELAY

(1) 2- (1) 3: CLOSED WITH THE LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

○ : PARTS LOCATION

CODE		SEE PAGE	CODE		SEE PAGE	CODE		SEE PAGE
F 6	A	22	F 8	C	22	G 2		22
F 7	B	22	F11		25	I12		25

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT KICK PANEL)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)


□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA2	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
EA3		

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 6	30	ENGINE ROOM MAIN WIRE	I 1	32	COWL WIRE
E 7			I 4		
E 9					

 F 6 (A) , F 8 (C)




F 7 (B) GRAY



F11

(SEE PAGE 20)

 G 2



I12 BLACK

