


RADIO AND PLAYER

FROM POWER SOURCE SYSTEM (SEE PAGE 52)

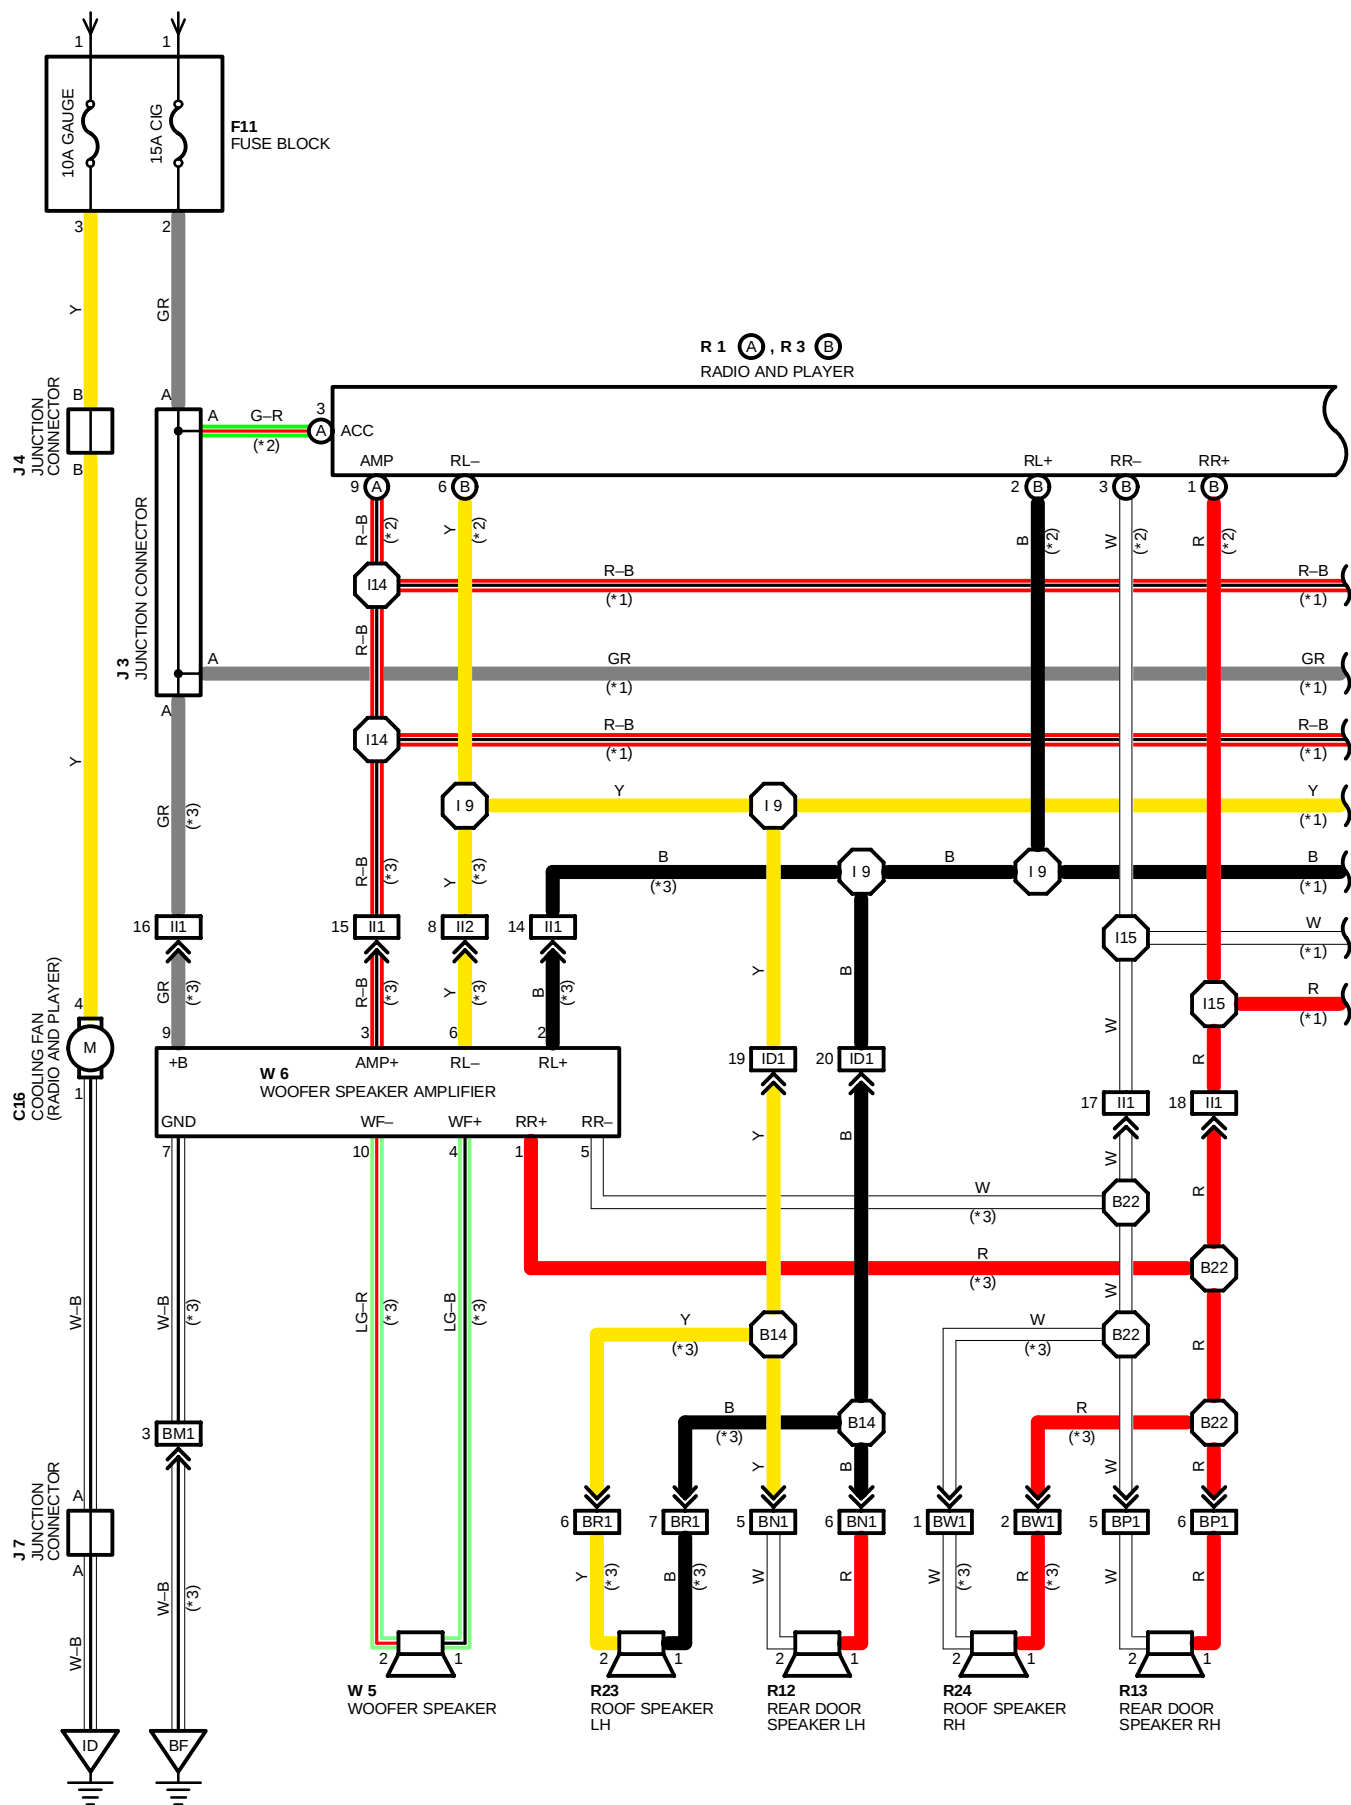



RADIO AND PLAYER

SERVICE HINTS

R 1(A) RADIO AND PLAYER

(A) 4-GROUND : ALWAYS APPROX. 12 VOLTS

(A) 3-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT **ACC** OR **ON** POSITION

(A) 7-GROUND : ALWAYS CONTINUITY

S11(A) STEREO COMPONENT AMPLIFIER

(A) 1-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT **ACC** OR **ON** POSITION

(A)10-GROUND : ALWAYS APPROX. 12 VOLTS

(A) 9-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C16	24	J 4	25	R23	27
F 9	25	J 7	25	R24	27
F10	25	R 1	25	S11	25
F11	25	R 2	25	S12	25
F14	26	R 3	25	W 5	27
F15	26	R12	27	W 6	27
J 3	25	R13	27		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA3	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
ID1	32	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
II1	32	COWL WIRE AND FLOOR NO. 2 WIRE (RIGHT KICK PANEL)
II2	32	COWL WIRE AND FLOOR NO. 2 WIRE (RIGHT KICK PANEL)
BJ1	34	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
BK1	34	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
BM1	34	FLOOR NO. 2 WIRE AND FLOOR NO. 1 WIRE (UNDER THE CENTER CONSOLE)
BN1	34	REAR DOOR LH WIRE AND FLOOR NO. 1 WIRE (LEFT CENTER PILLAR)
BP1	34	REAR DOOR RH WIRE AND FLOOR NO. 2 WIRE (RIGHT CENTER PILLAR)
BR1	34	LUGGAGE ROOM NO. 1 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)
BW1	36	ROOF NO. 2 WIRE AND FLOOR NO. 2 WIRE (RIGHT QUARTER PANEL INNER)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	32	LEFT KICK PANEL
IE	32	RIGHT KICK PANEL
BF	34	UNDER THE CENTER CONSOLE BOX

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 9			I15	32	COWL WIRE
I10	32	COWL WIRE	B14	36	FLOOR WIRE
I14			B22	36	FLOOR NO. 2 WIRE



F11
(SEE PAGE 20)

