


REAR HEATER

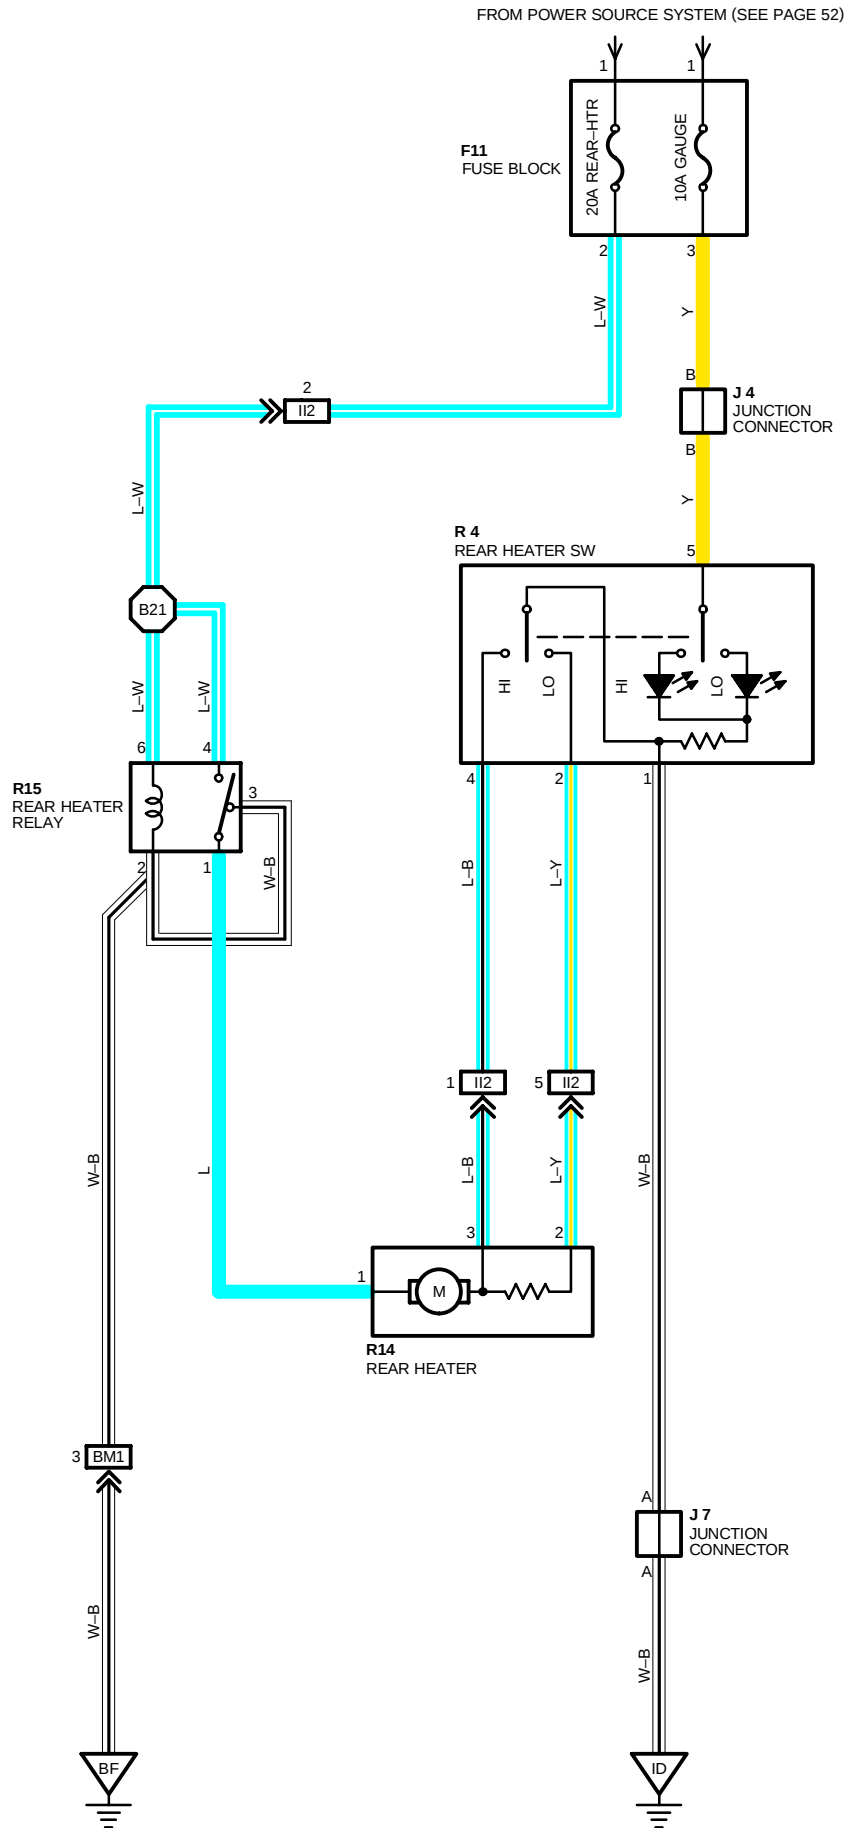

SERVICE HINTS

R 4 REAR HEATER SW

2-1 : CLOSED WITH THE IGNITION SW AT ON AND REAR HEATER SW AT **LO** POSITION

4-1 : CLOSED WITH THE IGNITION SW AT ON AND REAR HEATER SW AT **HI** POSITION

R15 REAR HEATER RELAY

4-1 : CLOSED WITH THE IGNITION SW AT **ON** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F11	25	J 7	25	R14	27
J 4	25	R 4	25	R15	27

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
II2	32	COWL WIRE AND FLOOR NO. 2 WIRE (RIGHT KICK PANEL)
BM1	34	FLOOR NO. 2 WIRE AND FLOOR NO. 1 WIRE (UNDER THE CENTER CONSOLE)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	32	LEFT KICK PANEL
BF	34	UNDER THE CENTER CONSOLE BOX


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B21	36	FLOOR NO. 2 WIRE			

F11


(SEE PAGE 20)

J 4 BLUE

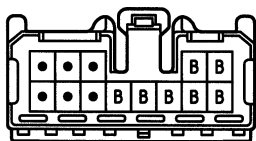

(HINT:SEE PAGE 7)

 J 7 BLUE



(HINT:SEE PAGE 7)

R 4 BLACK



R14



R15

