


REAR WINDOW DEFOGGER

FROM POWER SOURCE SYSTEM (SEE PAGE 52)

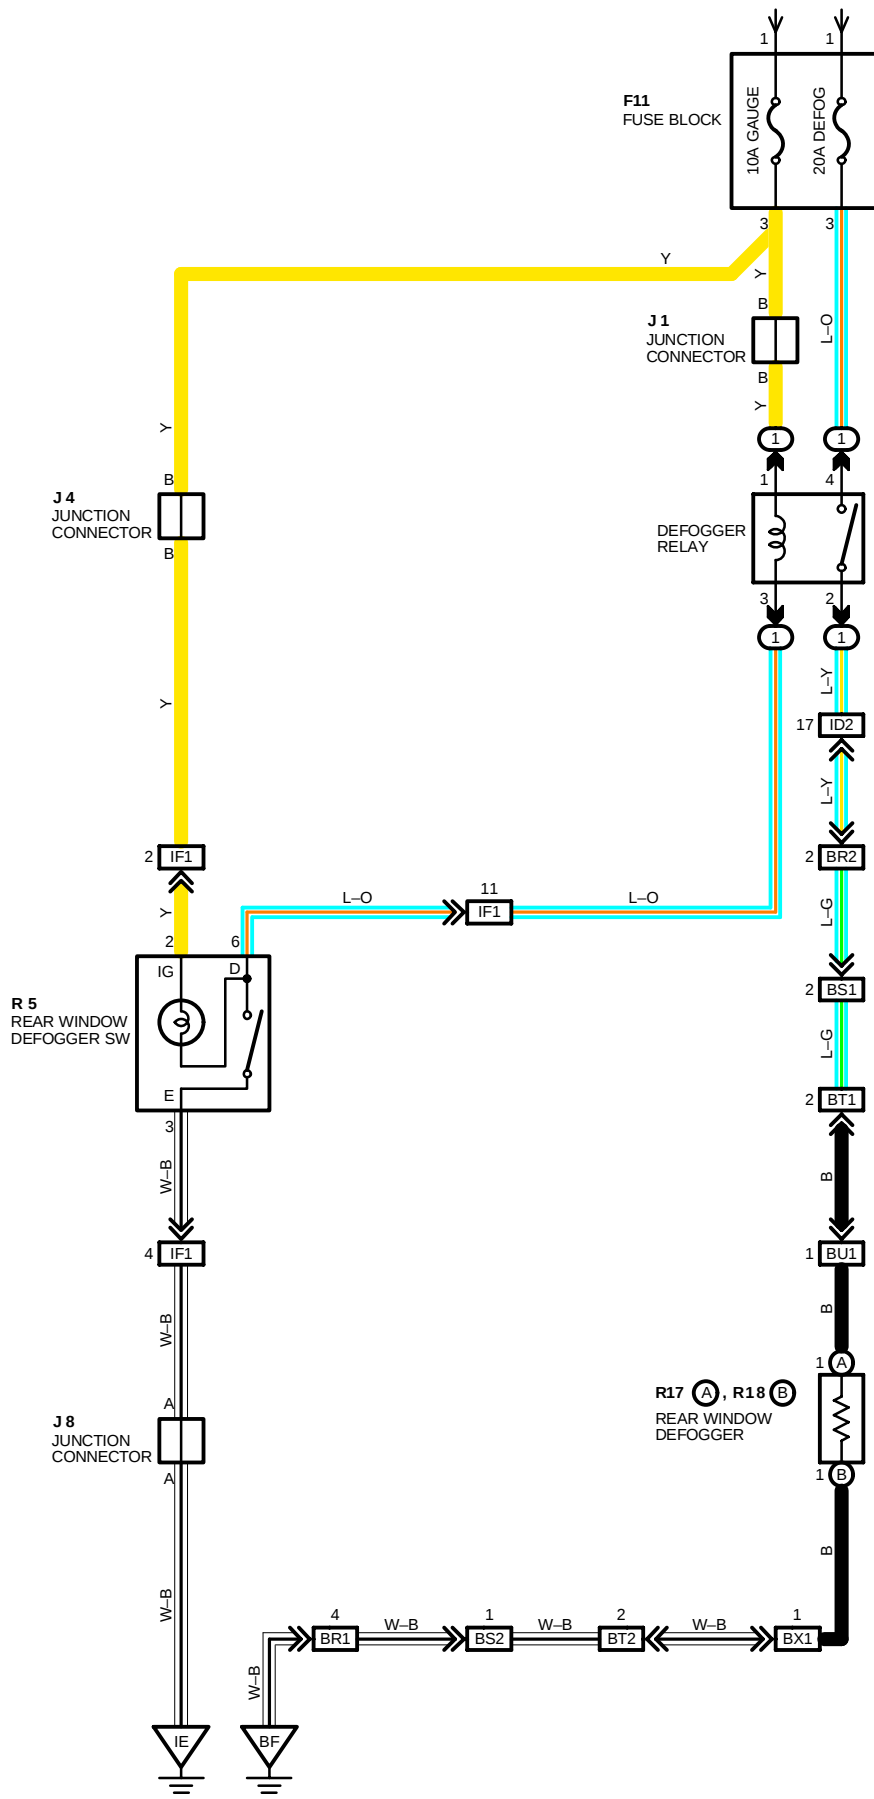

SERVICE HINTS

DEFOGGER RELAY

(1) 4 –(1) 2 : CLOSED WITH THE IGNITION SW ON AND THE REAR WINDOW DEFOGGER SW ON

R 5 REAR WINDOW DEFOGGER SW

2, 6 – GROUND: APPROX. 12 VOLTS WITH THE IGNITION SW AT **ON** POSITION

3– GROUND: ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F11	25	J 8	25	R18	B 27
J 1	25	R 5	25		
J 4	25	R17	A 27		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT KICK PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ID2	32	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
IF1	32	COWL WIRE AND INSTRUMENT PANEL WIRE (INSTRUMENT PANEL CENTER)
BR1	34	LUGGAGE ROOM NO. 1 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)
BR2		
BS1	34	BACK DOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 1 WIRE (LEFT REAR SIDE OF ROOF)
BS2		
BT1	36	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)
BT2		
BU1	36	REAR WINDOW NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)
BX1	36	REAR WINDOW NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR RIGHT)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	32	RIGHT KICK PANEL
BF	34	UNDER THE CENTER CONSOLE BOX

F11


(SEE PAGE 20)

J 1 BLUE

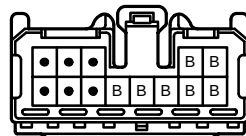


(HINT : SEE PAGE 7)

J 4 BLUE

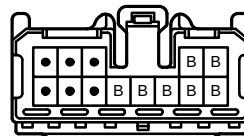

(HINT : SEE PAGE 7)

 J 8 BLUE



(HINT : SEE PAGE 7)

R 5 BLACK

R17 (A), R18 (B) BLACK

