


TURN SIGNAL AND HAZARD WARNING LIGHT

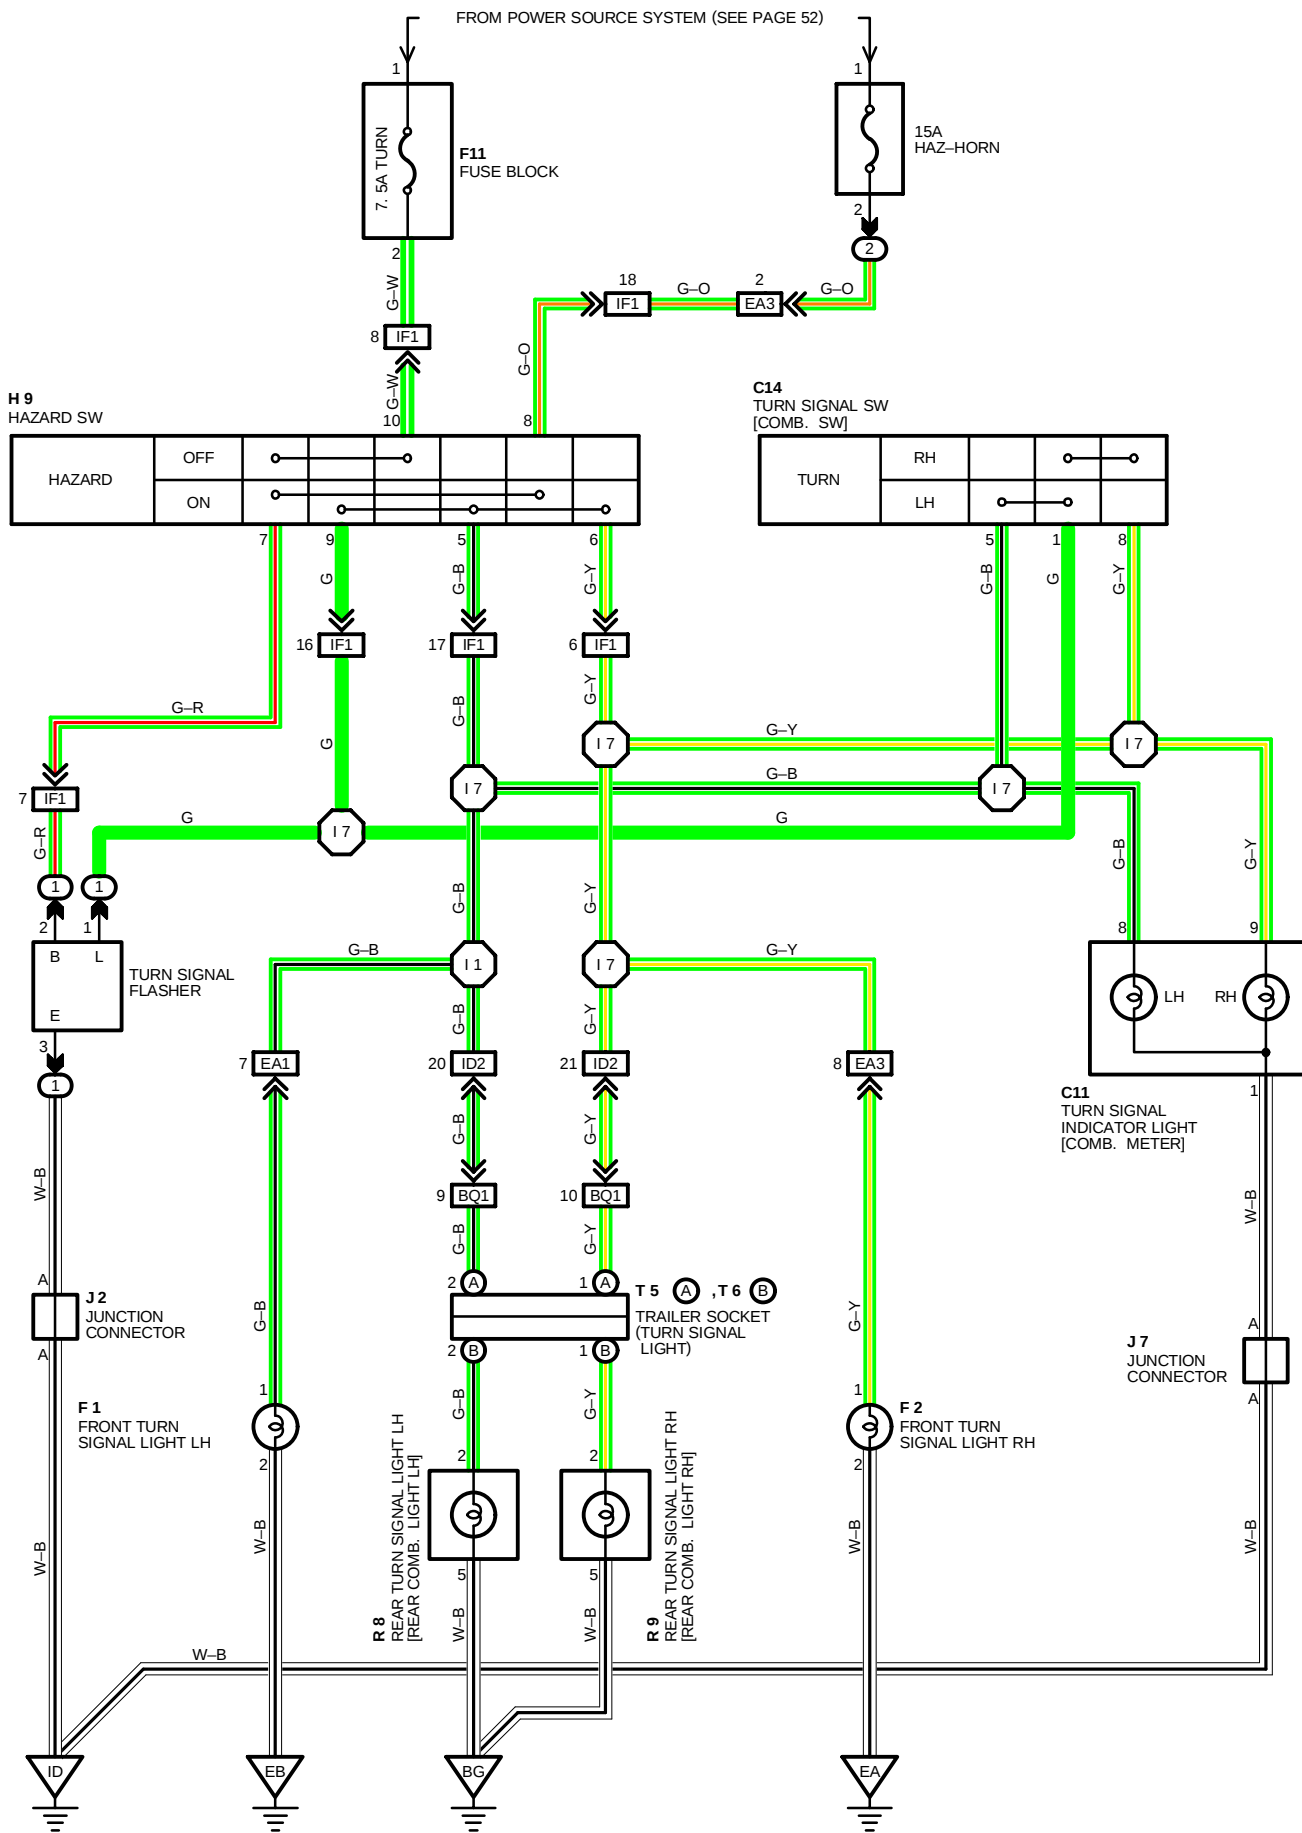

SERVICE HINTS

TURN SIGNAL FLASHER

- (1) 2-GROUND : APPROX. 12 VOLTS WITH IGNITION SW OR HAZARD SW ON
- (1) 1-GROUND : CHANGES FROM 12 TO 0 VOLTS WITH THE IGNITION SW ON AND TURN SIGNAL SW LEFT OR RIGHT, AND WITH THE HAZARD SW ON
- (1) 3-GROUND: ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C11	24	F11	25	R 8	27
C14	24	H 9	25	R 9	27
F 1	22	J 2	25	T 5	A 27
F 2	22	J 7	25	T 6	B 27

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT KICK PANEL)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
EA3		
ID2	32	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
IF1	32	COWL WIRE AND INSTRUMENT PANEL WIRE (INSTRUMENT PANEL CENTER)
BQ1	34	FLOOR NO. 3 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	30	FRONT SIDE OF RIGHT FENDER
EB	30	FRONT SIDE OF LEFT FENDER
ID	32	LEFT KICK PANEL
BG	34	LOWER BACK PANEL CENTER


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 1	32	COWL WIRE	I 7	32	COWL WIRE


C11 BLUE

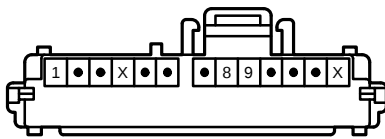

C14 BLACK

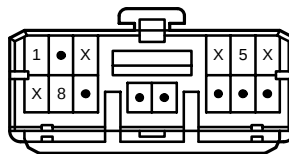


F 1, F 2 GRAY

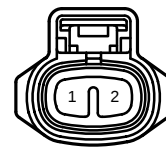


F11

(SEE PAGE 20)

 H 9 BLACK




J 2 BLUE

 


(HINT : SEE PAGE 7)

 J 7 BLUE



(HINT : SEE PAGE 7)

R 8, R 9

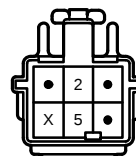

T 5 A BLACK



T 6 B BLACK

