


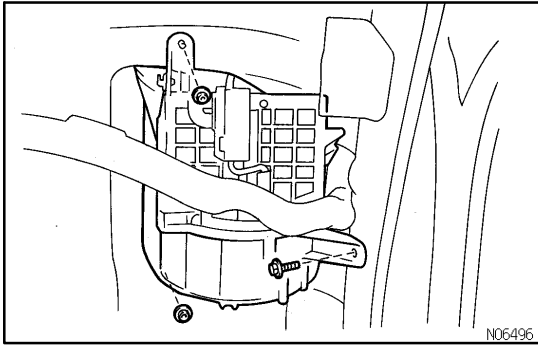

BLOWER UNIT REMOVAL

AC2R1-03

1. REMOVE INSTRUMENT PANEL AND REINFORCEMENT (See page [BO-76](#))
2. REMOVE COOLING UNIT (See page [AC-24](#))
3. REMOVE BLOWER UNIT
 - (a) Disconnect the connectors.
 - (b) Remove the bolt and 2 nuts, then remove the blower unit.