

REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

HINT:

At the time of installation, refer to the following procedure.

- Evacuate air from refrigeration system.
- Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount:

850 ± 50 g (29.98 ± 1.76 oz.)

2. REMOVE THESE PARTS:

- (a) Hood lock brace
- (b) Center brace

3. DISCONNECT DISCHARGE HOSE AND LIQUID TUBE


Torque: 10 N·m (100 kgf·cm, 7 ft·lbf)

NOTICE:

Cap the open fittings immediately to keep moisture or dirt out of the system.

HINT:

At the time of installation, lubricate 2 new O-rings with compressor oil to compressor.

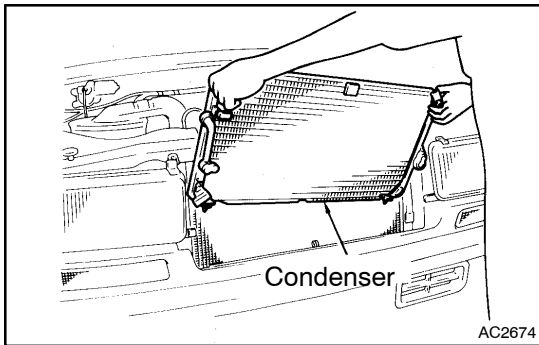

4. REMOVE CONDENSER

- (a) Remove 2 condenser mounting bolts.
- (b) Pull out the condenser between the radiator and the body.

HINT:

If condenser was replaced, add compressor oil to compressor.

Add 40 cc (1.4 fl.oz.)

Compressor oil:

ND-OIL 8 or equivalent