

DISASSEMBLY

1. REMOVE A/C AMPLIFIER
2. REMOVE RELAY
3. REMOVE WIRE HARNESS
4. REMOVE BLOWER RESISTOR

Remove the 2 screws and blower resistor.

5. SEPARATE UPPER AND LOWER UNIT CASES

- (a) Using a knife, cut off the each packing.
- (b) Remove 3 clips and 4 screws.
- (c) Separate the upper and lower unit cases.

6. REMOVE EVAPORATOR FROM LOWER UNIT CASE

HINT:

If the evaporator was replaced, add compressor oil to the compressor.


Add 40 cc (1.4 fl.oz.)

Compressor oil:

ND-OIL 8 or equivalent

7. REMOVE THERMISTOR

Pull out the thermistor from the evaporator.

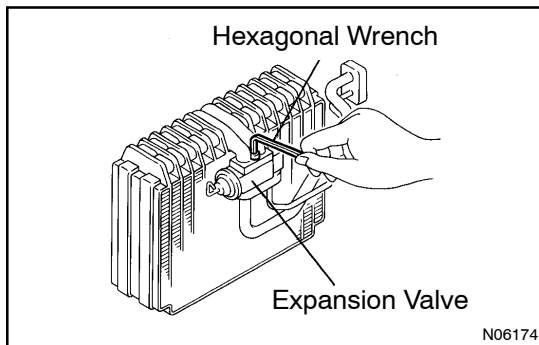

8. REMOVE EXPANSION VALVE

Using a hexagon wrench, remove the 2 bolts and separate the expansion valve and evaporator.

Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

HINT:

At the time of reassembly, lubricate 4 new O-rings with compressor oil and install the tubes.