


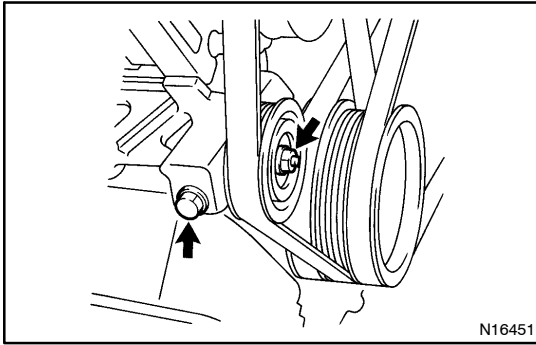

REMOVAL

1. **LOOSEN IDLE PULLEY LOCK NUT**
Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)
2. **REMOVE COMPRESSOR DRIVE BELT**

Loosen the adjusting bolt and remove the drive belt.