


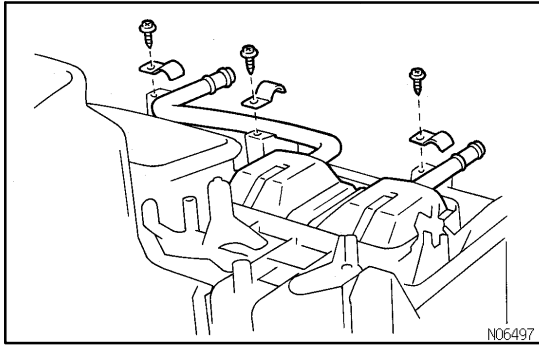

HEATER RADIATOR INSPECTION

AC3JM-01

1. **REMOVE HEATER UNIT** (See page [AC-28](#))

2. **REMOVE HEATER RADIATOR**

(a) Remove the screws and plates.

(b) Pull the heater radiator out.

3. **INSPECT FINS FOR BLOCKAGE**

If the fins are clogged, clean them with compressed air.

4. **INSTALL HEATER RADIATOR**