


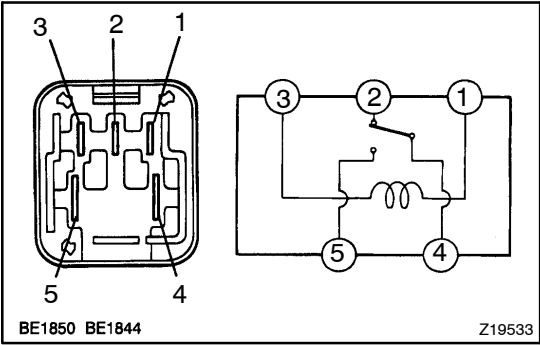

HEATER MAIN RELAY INSPECTION

AC2SE-03

INSPECT HEATER MAIN RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 3 2 – 4	Continuity
Apply B+ between terminals 3 and 5.	4 – 5	Continuity

If continuity is not as specified, replace the relay.