


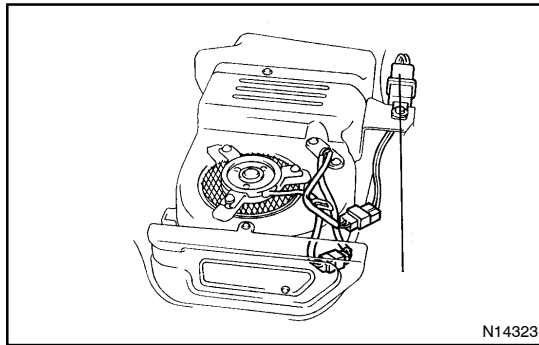


## REAR BLOWER MOTOR REMOVAL

AC250-02


### 1. REMOVE FRONT RH SEAT

### 2. REMOVE BLOWER MOTOR

- (a) Disconnect the connectors from the blower motor and rear heater relay.
- (b) Remove the bolt and rear heater relay.

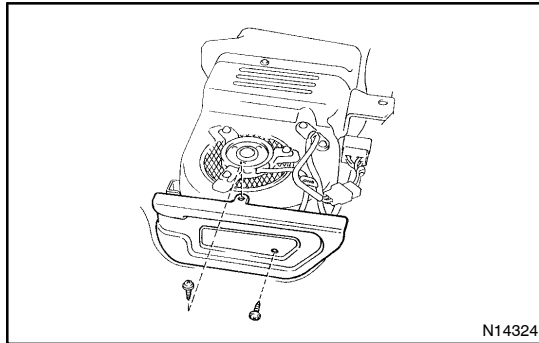

- (c) Remove the 2 screws and side cover.

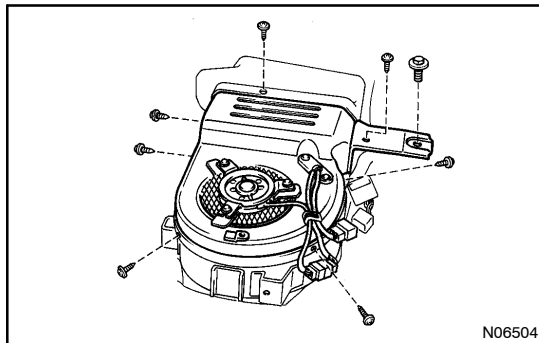

- (d) Remove the bolt and 7 screws, then remove the upper cover with the blower motor.
- (e) Remove the 3 screws and the blower motor.