

REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

HINT:

At the time of installation, refer to the following procedure.

- Evacuate air from refrigeration system.
- Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount:

850 ± 50 g (29.98 ± 1.76 oz.)

2. DISCONNECT 2 LIQUID TUBES FROM RECEIVER

Remove the 2 bolts and both tubes.


Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

NOTICE:

Cap the open fittings immediately to keep moisture or dirt out of the system.

HINT:

At the time of installation, lubricate 2 new O-rings with compressor oil and install the tubes.

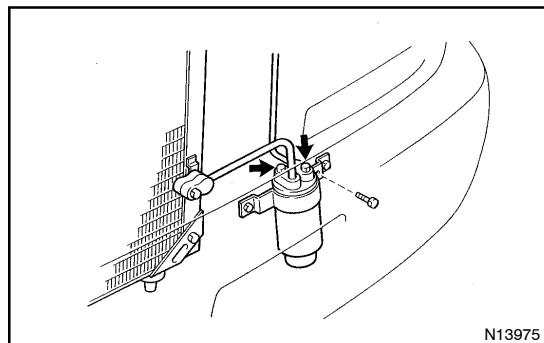

3. REMOVE RECEIVER FROM RECEIVER HOLDER

Remove the holder bolt and pull the receiver down ward.

HINT:

If receiver was replaced, add compressor oil to compressor.

Add 10 cc (0.35 fl.oz.)

Compressor oil:

ND-OIL 8 or equivalent