



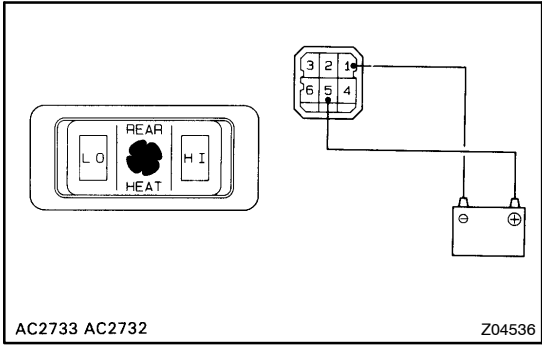

REAR HEATER SWITCH INSPECTION

AC280-04

1. REMOVE INSTRUMENT CLUSTER FINISH CENTER PANEL WITH A/C CONTROL ASSEMBLY
 2. REMOVE REAR HEATER SWITCH
 3. INSPECT INDICATOR OPERATION
 - (a) Connect the positive (+) lead from the battery to terminal 5 and the negative (-) lead to terminal 1.
 - (b) Push each of the rear heater switch knob in and check that their indicators lights up.
- If operation is not as specified, replace the switch.

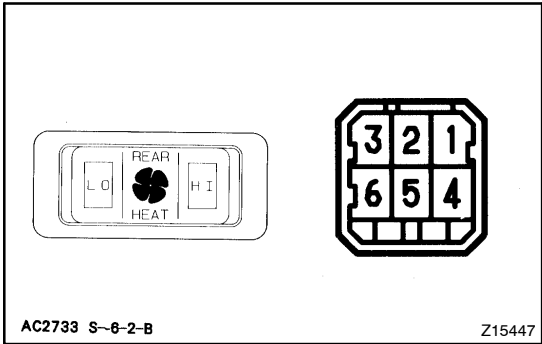

4. INSPECT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
HI	1 - 4	Continuity
OFF	-	No Continuity
LO	1 - 2	Continuity
Illumination circuit	3 - 6	Continuity

If continuity is not as specified, replace the switch.