

PROBLEM SYMPTOMS TABLE

IGNITION SWITCH AND KEY UNLOCK WARNING SWITCH

Symptom	Suspect Area	See page
Ignition switch is not set to each position.	5. Ignition Switch	BE-11
"Key unlock warning system" does not operate.	1. GAUGE Fuse (I/P F/B)	–
	2. Key Unlock Warning Switch	BE-11
	3. Door Courtesy Switch	BE-21
	4. Wire Harness	–

HEADLIGHT AND TAILLIGHT SYSTEM

Symptom	Suspect Area	See page
Headlight does not light up. (Taillight is normal.)	1. Headlight Bulb	–
	2. MAIN FL	–
	3. HEAD (LH) Fuse (No.2 R/B)	–
	4. HEAD (RH) Fuse (No.2 R/B)	–
	5. Light Control Switch	BE-14
	6. Headlight Dimmer Switch	BE-14
	7. Wire Harness	–
Headlight does not light up. (Taillight does not light up.)	1. Headlight Bulb	–
	2. Light Control Switch	BE-14
	3. Headlight Dimmer Switch	BE-14
	4. Wire Harness	–
Only one light comes ON.	1. Headlight Bulb	–
	2. HEAD (LH) Fuse (No.2 R/B)	–
	3. HEAD (RH) Fuse (No.2 R/B)	–
	4. Wire Harness	–
"Lo-Beam" does not light up.	1. Headlight Bulb	–
	2. Headlight Control Relay (No.2 R/B)	–
	3. Headlight Dimmer Switch	BE-14
	4. Wire Harness	–
"Hi-Beam" does not light up.	1. Headlight Bulb	–
	2. Headlight Control Relay (No.2 R/B)	–
	3. Headlight Dimmer Switch	BE-14
	4. Wire Harness	–
"Flash" does not light up.	1. Headlight Bulb	–
	2. Headlight Control Relay (No.2 R/B)	–
	3. Headlight Dimmer Switch	BE-14
	4. Wire Harness	–
Taillight does not light up. (Headlight is normal.)	1. Taillight Bulb	–
	2. TAIL Fuse (I/P F/B)	–
	3. Light Control Switch	BE-14
	4. Taillight Control Relay (No.2 R/B)	BE-14
	5. Wire Harness	–
Taillight does not light up. (Headlight does not light up.)	1. Taillight Bulb	–
	2. MAIN FL	–
	3. TAIL Fuse (I/P F/B)	–
	4. Light Control Switch	BE-14
	5. Wire Harness	–
Headlight and Taillight does not light.	1. Light Control Switch	BE-14
	2. Wire Harness	–

BODY ELECTRICAL – BODY ELECTRICAL SYSTEM

Only one side taillight does not light.	1. Taillight Bulb 2. Wire Harness	– –
Taillight does not light. (Headlight is normal.)	1. Taillight Bulb 2. TAIL Fuse (No.2 R/B) 3. Taillight Control Relay (No.2 R/B) 4. Light Control Switch 5. Wire Harness	– BE-14 BE-14 BE-14 –

TURN SIGNAL AND HAZARD WARNING SYSTEM

Symptom	Suspect Area	See page
"Hazard" and "Turn" do not light up.	1. Hazard Warning Switch 2. Turn Signal Flasher (No.1 R/B) 3. Wire Harness	BE-19 BE-19 –
None of blinks for hazard. (Turn is normal.)	1. Bulb 2. Turn Signal Flasher (No.1 R/B) 3. Wire Harness	– BE-19 –
Hazard warning light does not light up. (Turn is normal.)	1. HAZ – HORN Fuse (No.2 R/B) 2. Wire Harness	BE-19 –
Hazard warning light does not light up in one direction.	1. Hazard Warning Switch 2. Wire Harness	BE-19 –
The flashing frequency is abnormal.	1. Bulb 2. Turn Signal Flasher (No.1 R/B) 3. Wire Harness	– BE-19 –
Turn signal does not light up in one direction.	1. Turn Signal Switch 2. Wire Harness	BE-19 –
Only one bulb does not light up for hazard turn.	1. Bulb 2. Wire Harness	– –
Turn signal does not light up. (Combination meter, wiper and washer do not operate.)	1. Ignition Switch 2. TURN Fuse (I/P F/B) 3. Turn Signal Switch 4. Wire Harness	BE-11 BE-19 BE-19 –
Turn signal does not light up. (Combination meter, wiper and washer are normal.)	1. TURN Fuse (I/P F/B) 2. Turn Signal Switch 3. Wire Harness	BE-19 BE-19 –

INTERIOR LIGHT SYSTEM

Symptom	Suspect Area	See page
Room light does not light up.	1. DOME Fuse (No.2 R/B) 2. Door Courtesy Switch 3. Front Personal Light 4. Room Light Assembly 5. Bulb 6. Wire Harness	– BE-21 BE-21 BE-21 – –
Room light remains always on.	1. Door Courtesy Switch 2. Wire Harness	BE-21 –

BACK-UP LIGHT SYSTEM

Symptom	Suspect Area	See page
Back-Up light does not light up.	1. GAUGE Fuse (I/P F/B) 2. Ignition Switch 3. Park/Neutral Position Switch (A/T) 4. Bulb 5. Wire Harness	– BE-11 – – –

Back-Up light remains on.	1. Park/Neutral Position Switch (A/T)	–
	2. Wire Harness	–
Only one light does not light up.	1. Bulb	–
	2. Wire Harness	–

STOP LIGHT SYSTEM

Symptom	Suspect Area	See page
Stop light does not light up.	1. STOP Fuse (I/P F/B)	–
	2. Stop Light Switch	BE-25
	3. Bulb	–
	4. Wire Harness	–
Stop light remains always on.	1. Stop Light Switch	BE-25
	2. Wire Harness	–
Only one light does not light up.	1. Wire Harness	–
	2. Bulb	–

WIPER AND WASHER SYSTEM

Symptom	Suspect Area	See page
Wipers do not operate or return to off position.	1. WIPER Fuse (I/P F/B)	BE-27
	2. Wiper Switch	BE-27
	3. Wiper Motor	BE-27
	4. Wiper Relay	BE-27
	5. Wire Harness	–
Wipers do not operate in MIST.	1. Wiper Switch	BE-27
	2. Wiper Motor	BE-27
	3. Wiper Relay	BE-27
	4. Wire Harness	–
Wipers do not operate in INT.	1. Wiper Switch	BE-27
	2. Wiper Motor	BE-27
	3. Wiper Relay	BE-27
	4. Wire Harness	–
Washer does not operate.	1. Washer Hose or Nozzle Clogged	–
	2. Washer Switch	BE-27
	3. Washer Motor	BE-27
	4. Wire Harness	–

**METER, GAUGES AND ILLUMINATION:
COMBINATION METER**

Symptom	Suspect Area	See page
Tachometer, speedometer, engine coolant temperature gauge and fuel gauge do not operate.	1. GAUGE Fuse (I/P F/B)	–
	2. Meter Circuit	BE-32
	3. Wire Harness	–
Speedometer does not operate.	1. No.1 Vehicle Speed Sensor	BE-34
	2. Speedometer Driven Gear and Drive Gear	–
	3. Meter Circuit	BE-32
	4. Wire Harness	–
Tachometer does not operate.	1. Meter Circuit	BE-32
	2. Igniter	–
	3. Wire Harness	–
Tachometer does not operate.	1. Meter Circuit	BE-32
	2. Igniter	–
	3. Wire Harness	–
Voltmeter does not operate.	1. Voltmeter Receiver Gauge	AT-6
	2. Wire Harness	–

BODY ELECTRICAL – BODY ELECTRICAL SYSTEM

Fuel gauge does not operate or abnormal operation.	1. Fuel Receiver Gauge 2. Fuel Sender Gauge 3. Meter Circuit 4. Wire Harness	BE-34 BE-34 BE-32 –
Engine coolant temperature gauge does not operation or abnormal operate.	1. Engine Coolant Temperature Receiver Gauge 2. Engine Coolant Temperature Sender Gauge 3. Meter Circuit 4. Wire Harness	BE-34 BE-34 BE-32 –
Oil pressure gauge does not operate or abnormal operation.	1. Oil Pressure Receiver Gauge 2. Oil Pressure Sender Gauge 3. Meter Circuit 4. Wire Harness	BE-34 BE-34 BE-34 –
All illumination lights do not light up.	1. TAIL Fuse (I/P F/B) 2. Light Control Rheostat 3. Wire Harness	– BE-34 –
Brightness does not change even when rheostat turned.	1. Bulb 2. Wire Harness	– –
Only one illumination light does not light up.	1. Bulb 2. Wire Harness	– –

WARNING LIGHTS:**COMBINATION METER**

Symptom	Suspect Area	See page
Warning lights do not lights up. (Except discharge, SRS and door open)	1. GAUGE Fuse (I/P F/B) 2. Meter Circuit 3. Wire Harness	– BE-32 –
Brake warning light does not light up.	1. Bulb 2. Brake Fluid Level Switch 3. Parking Brake Switch 4. Meter Circuit 5. Wire Harness	– BE-34 BE-34 BE-32 –
Open door warning light does not light up.	1. Bulb 2. Door Courtesy Switch 3. DOME Fuse (No.2 R/B) 4. Meter Circuit 5. Wire Harness	– BE-21 BE-21 – – –
SRS warning light does not light up	1. Bulb 2. Airbag Sensor Assembly 3. ECU-B Fuse (I/P F/B) 4. Meter Circuit 5. Wire Harness	– – – BE-32 –
Discharge warning light does not light up.	1. Bulb 2. IGN Fuse (No.1 J/B) 3. Generator 4. Meter Circuit 5. Wire Harness	– – – BE-32 –
Seat belt warning light does not light up.	1. Bulb 2. Seat Belt Buckle Switch 3. Seat Belt Warning Relay (I/P F/B) 4. Meter Circuit 5. Wire Harness	– BE-34 – BE-32 –

Engine oil level warning light does not light up.	1. Bulb 2. Meter Circuit 3. Engine Oil Level Warning Switch 4. Wire Harness	– BE-32 BE-34 –
Low oil pressure warning light does not light up.	1. Bulb 2. Low Oil Pressure Warning Switch 3. Meter Circuit 4. Wire Harness	– BE-32 BE-34 –
Fuel level warning light does not light up.	1. Bulb 2. Fuel Level Warning Switch 3. Meter Circuit 4. Wire Harness	– BE-34 BE-32 –

INDICATOR LIGHTS: COMBINATION METER

Symptom	Suspect Area	See page
High beam indicator light does not light up.	1. Bulb 2. Headlight and Taillight System 3. Meter Circuit 4. Wire Harness	– BE-19 BE-32 –
Shift indicator lights do not light up. (ALL)	1. Shift Position Indicator Wiring Circuit 2. Park/Neutral Position Switch 3. Wire Harness 4. Bulb	– BE-34 AT-6 –
Shift indicator lights do not light up. (L, 2, D)	1. Bulb 2. Shift Position Indicator Wiring Circuit 3. Park/Neutral Position Switch 4. Light Control Rheostat 5. Wire Harness	– BE-34 AT-6 BE-34 –
Shift indicator lights do not light up. (PWR)	1. Bulb 2. Shift Position Indicator Wiring Circuit 3. Pattern Select Switch 4. Wire Harness	– BE-34 AT-6 –
Shift indicator lights do not light up. (2nd START)	1. Bulb 2. Shift Position Indicator Wiring Circuit 3. ECM 4. Wire Harness	– AT-6 – –
Only one shift indicator does not light up.	1. Bulb 2. Shift Position Indicator Wiring Circuit	– BE-34
Indicator lights do not light up. (Except Turn, Hi-beam)	1. GAUGE Fuse (I/P F/B) 2. Wire Harness	– –
O/D OFF indicator light does not light up.	1. Bulb 2. O/D Main Switch 3. Meter Circuit 4. Wire Harness	– – BE-32 –
Malfunction indicator light does not light up.	1. Bulb 2. ECM 3. Wire Harness	– – –
Cruise control indicator light does not light up.	1. Bulb 2. Cruise Control ECU 3. Meter Circuit 4. Wire Harness	– – BE-32 –

DEFOGGER SYSTEM

Symptom	Suspect Area	See page
Defogger system does not operate.	1. DEFOG Fuse (I/P F/B) 2. GAUGE Fuse (I/P F/B) 3. Defogger Switch 4. Defogger Relay (No.1 R/B) 5. Defogger Wire 6. Wire Harness	– – BE-43 BE-43 – –

POWER WINDOW CONTROL SYSTEM

Symptom	Suspect Area	See page
Power window does not operate (ALL). (Power door lock does not operate.)	1. POWER Fuse (I/P F/B) 2. GAUGE Fuse (I/P F/B) 3. Power Main Relay (No.1 R/B) 4. Wire Harness	– – – –
Power window does not operate (ALL). (Power door lock is normal.)	1. Ignition Switch 2. Power Main Relay (No.1 R/B) 3. Power Window Master Switch 4. Wire Harness	BE-11 – BE-46 –
"One touch power window system" does not operate.	1. Power Window Master Switch	BE-46
Only one window glass does not operate.	1. Power Window Master Switch 2. Power Window Switch 3. Power Window Motor 4. Wire Harness	BE-46 BE-46 BE-46 –

POWER DOOR LOCK CONTROL SYSTEM

Symptom	Suspect Area	See page
Power door lock control system does not operate (ALL).	1. POWER Fuse (I/P F/B) 2. Power Main Relay (No.1 R/B) 3. Wire Harness	– – –
Power door lock control system does not operate by door lock control switch.	1. Door Lock Control Switch 2. Power Main Relay (No.1 R/B) 3. Wire Harness	BE-51 – –
Power door lock control system does not operate by door key.	1. Door Key Lock and Unlock Switch 2. Power Main Relay (No.1 R/B) 3. Wire Harness	BE-11 – –
Only one door does not operate.	1. Door Lock Motor 2. Door Lock Link Disconnected 3. Wire Harness	BE-51 – –
Fault in key confine prevention operation.	1. Power Main Relay (No.1 R/B) 2. Key Unlock Warning Switch 3. Door Courtesy Switch 4. Wire Harness	– BE-11 BE-21 –

SLIDING ROOF SYSTEM

Symptom	Suspect Area	See page
Sliding roof system does not operate. (Door lock does not operate.)	1. GAUGE Fuse (I/P F/B) 2. Ignition Switch 3. POWER Fuse (No.1 J/B) 4. Power Main Relay (No.1 R/B) 5. Sliding Roof Control Switch 6. Sliding Roof Control Relay 7. Sliding Roof Motor 8. Wire Harness	– BE-11 – – BE-58 BE-58 BE-58 –

Sliding roof system operates abnormally.	1. Limit Switch 2. Sliding Roof Control Switch 3. Sliding Roof Control Relay	BE-58 BE-58 BE-58
Sliding roof system stops operation half way.	1. Sliding Roof Control Relay 2. Sliding Roof Limit Switch 3. Sliding Roof Control Switch 4. Sliding Roof Motor (Stones to foreign material trapped in motor assembly)	BE-58 BE-58 BE-58 BE-58
"Key-off sliding roof" operation does not operate.	1. POWER Fuse (I/P F/B) 2. Door Lock Control Relay 3. GAUGE Fuse (I/P F/B) 4. Ignition Switch 5. Door Courtesy Switch 6. Wire Harness	– BE-51 – BE-11 BE-21 –

POWER MIRROR SYSTEM

Symptom	Suspect Area	See page
Power mirror system does not operate.	1. CIG Fuse (I/P J/B) 2. Mirror Control Switch 3. Mirror Motor 4. Wire Harness	– BE-69 BE-69 –
Power mirror operate abnormally.	1. Mirror Control Switch 2. Mirror Motor 3. Wire Harness	BE-69 BE-69 –

POWER SEAT CONTROL SYSTEM

Symptom	Suspect Area	See page
Power seat does not operate.	1. POWER Fuse (I/P F/B) 2. Power Seat Switch 3. Wire Harness	– BE-62 –
"Sliding operation" does not operate.	1. Slide Motor 2. Power Seat Switch 3. Wire Harness	BE-62 BE-62 –
"Reclining operation" does not operate.	1. Reclining Motor 2. Power Seat Switch 3. Wire Harness	BE-62 BE-62 –
"Rear vertical operation" does not operate.	1. Rear Vertical Motor 2. Power Seat Switch 3. Wire Harness	BE-62 BE-62 –
"Lumber support operation" does not operate.	1. Lumber Support Motor 2. Lumber Support Switch 3. Wire Harness	BE-62 BE-62 –