

CLOCK

TROUBLESHOOTING


BE1MT-01

HINT:


Troubleshoot the lock according to the table below.

Clock will not operate	1
Clock loses or gains time	2

1.5 seconds/day

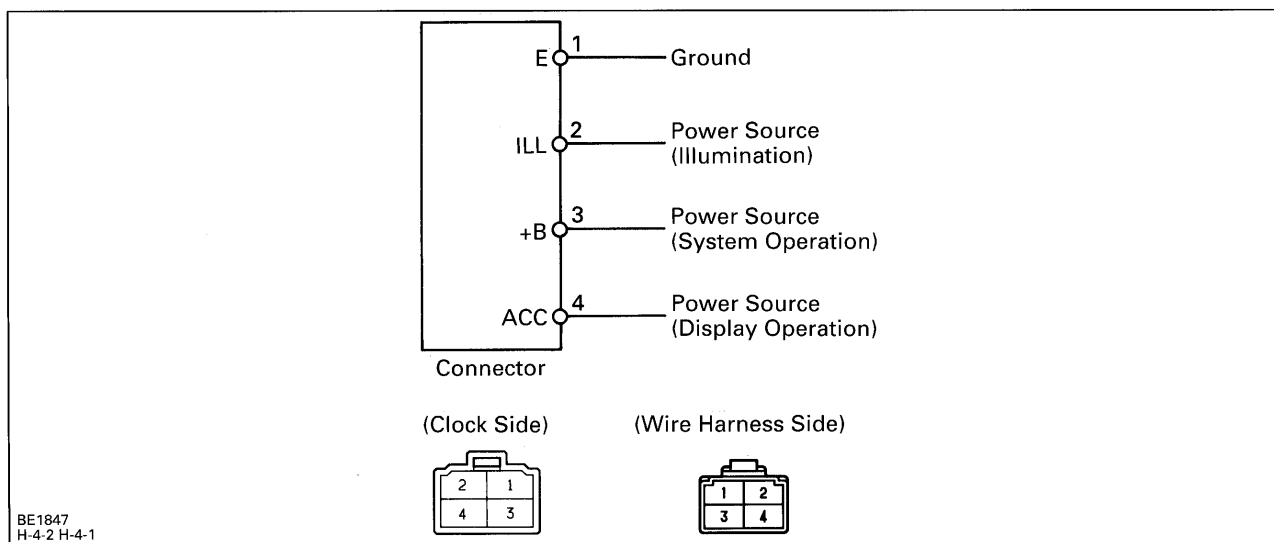


1 CLOCK WILL NOT OPERATE

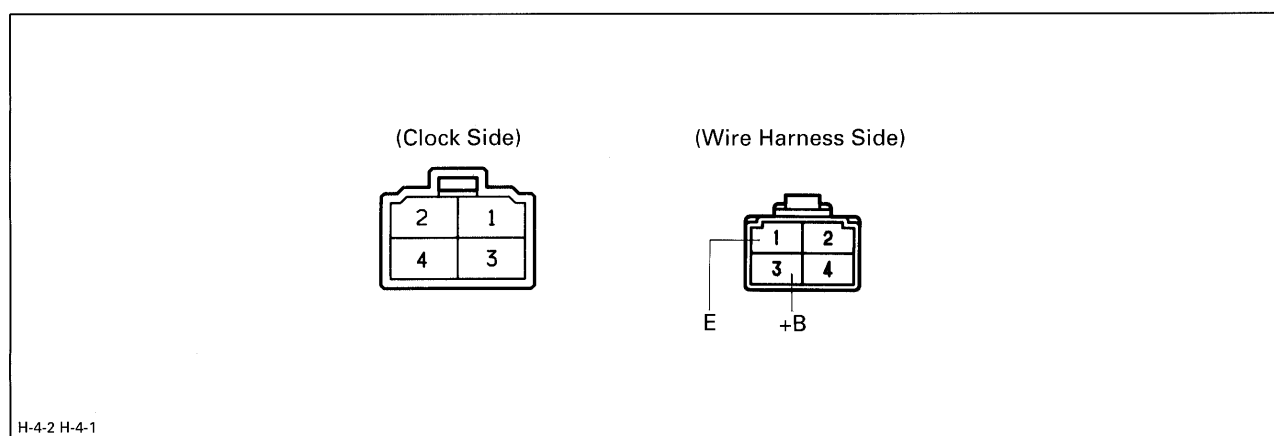

- Check that the battery positive voltage is 10 – 16 V. if voltage is not as specified, replace the battery.
- Check that the DOME fuse is not blown. If the fuse is blown, replace the fuse and check for short.
- Troubleshoot the clock as follows.
HINT: Inspect the connector on the wire harness side.

V06493

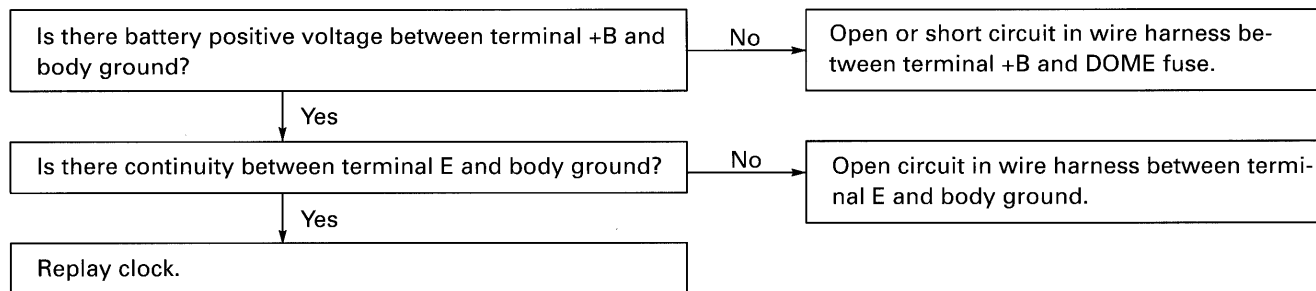

2 CLOCK LOSES OR GAINS TIME

- Check the the battery positive voltage is 10 – 16 V.
If voltage is not as specified, replace the battery.
- Inspect the error of the clock.
Allowable error (per day): ± 1.5 seconds
- Check that the clock adjusting button is sticking in position and has failed to return.
If the button is not returned, repair or replace the clock.
- Troubleshoot the clock as follows.
HINT: Inspect the connector on the wire harness side.

