


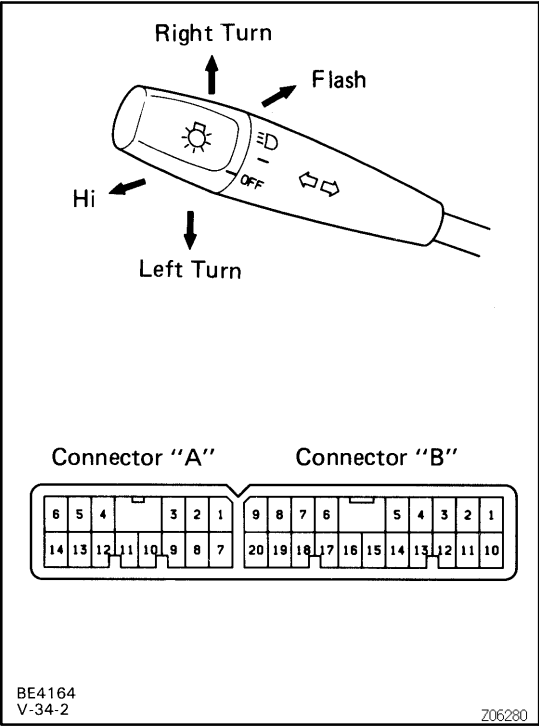

INSPECTION

1. INSPECT LIGHT CONTROL SWITCH CONTINUITY


Switch position	Tester connection	Specified condition
OFF	-	No continuity
TAIL	A2 - A11	Continuity
HEAD	A2 - A11 - A13	Continuity

If continuity is not as specified, replace the switch.

2. INSPECT HEADLIGHT DIMMER SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Flash	A9 - A12 - A14	Continuity
Low beam	A3 - A9	Continuity
High beam	A9 - A12	Continuity


If continuity is not as specified, replace the switch.

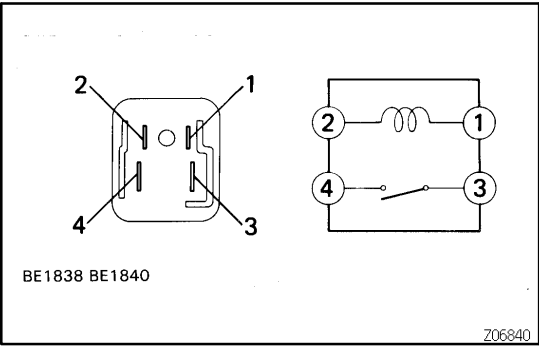

3. INSPECT HEADLIGHT CONTROL RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 2	Continuity
Apply B+ between terminals 1 and 2.	3 - 4	Continuity


If continuity is not as specified, replace the relay.

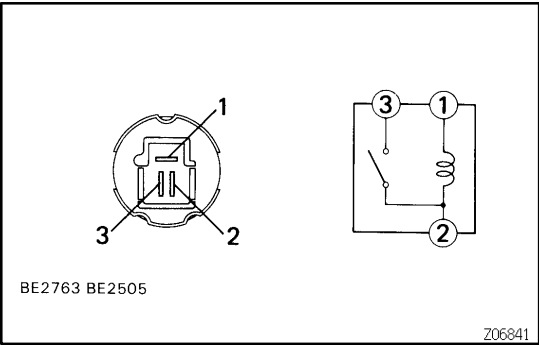


4. INSPECT TAILLIGHT CONTROL RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 2	Continuity
Apply B+ between terminals 1 and 2.	2 - 3	Continuity

If continuity is not as specified, replace the relay.

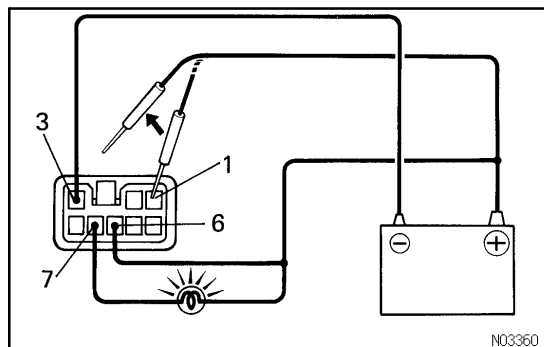
**5. INSPECT HEADLIGHT RETAINER CIRCUIT**

- (a) Connect the positive (+) leads from the battery to terminals 1 and 6, and the negative (-) lead to terminal 3.
- (b) Connect the 3.4 W test bulb between terminal 7 and the positive (+) lead from the battery.
- (c) Disconnect the positive (+) lead from terminal 1, and check that the test bulb is lighting.

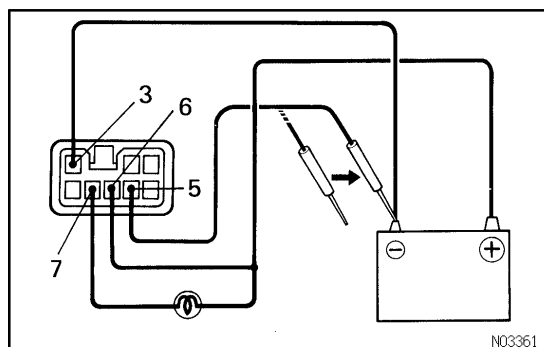


- (d) Connect the negative (-) lead to terminal 5, and check that the test bulb goes out.

If operation is not as specified, replace the relay.

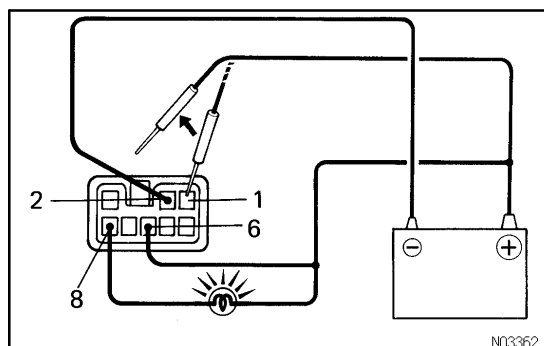**6. INSPECT TAILLIGHT CIRCUIT**

- (a) Connect the positive (+) leads from the battery to terminals 1 and 6, and the negative (-) lead to terminal 2.
- (b) Connect the 3.4 W test bulb between terminal 8 and the positive (+) lead from the battery.
- (c) Disconnect the positive (+) lead from terminal 1, and check that the test bulb is lighting.

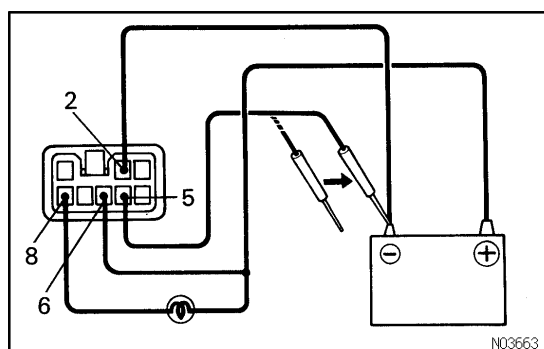

- (d) Connect the negative (-) lead to terminal 5, and check that the test bulb goes out.

If operation is not as specified, replace the relay.