


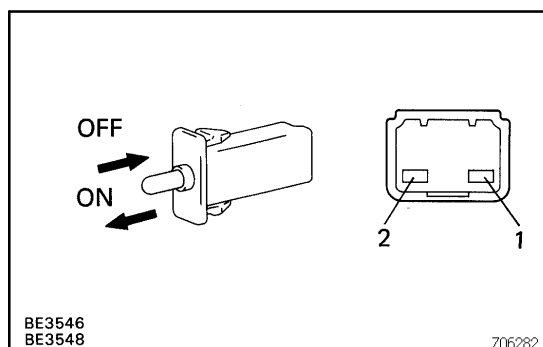


INSPECTION

1. INSPECT GLOVE BOX LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF (Closed)	-	No continuity
ON (Opened)	1 - 2	Continuity


If continuity is not as specified, replace the switch.

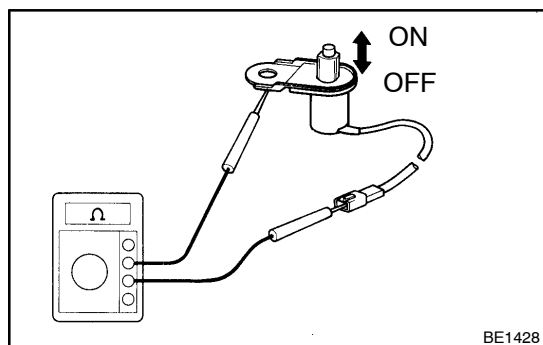

2. INSPECT DOOR COURTESY SWITCH CONTINUITY

- Check that there is continuity between terminal and the switch body with the switch ON (switch pin released: opened door).
- Check that there is no continuity between terminal and the switch body with the switch OFF (switch pin pushed in: closed door).


If operation is not as specified, replace the switch.

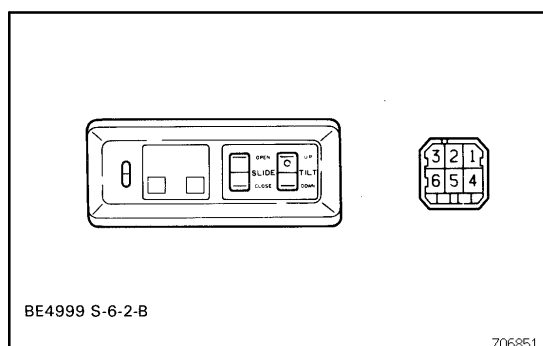

3. INSPECT FRONT PERSONAL LIGHT CONTINUITY


Switch position	Tester connection	Specified condition
OFF	-	No continuity
ON	5 - 6	Continuity

If continuity is not as specified, replace the personal light.

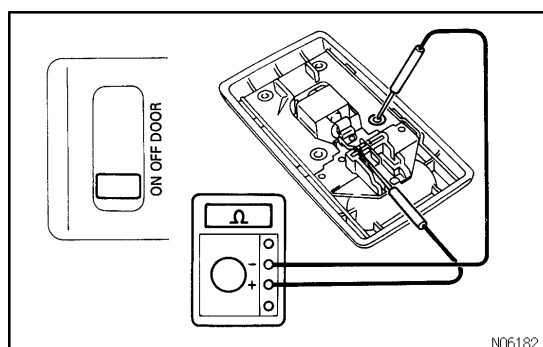

4. INSPECT ROOM LIGHT ASSEMBLY

- Disconnect the connector from room light assembly.
- Turn the room light switch ON, check that there is continuity between terminal 2 and body ground.

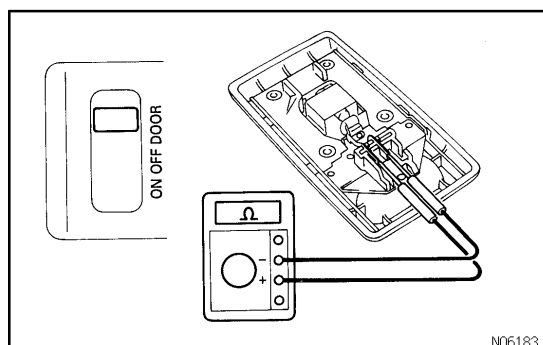

- Turn the room light switch DOOR, and check that there is continuity between terminal 1 and 2.

If operation is not as specified, replace the switch.