


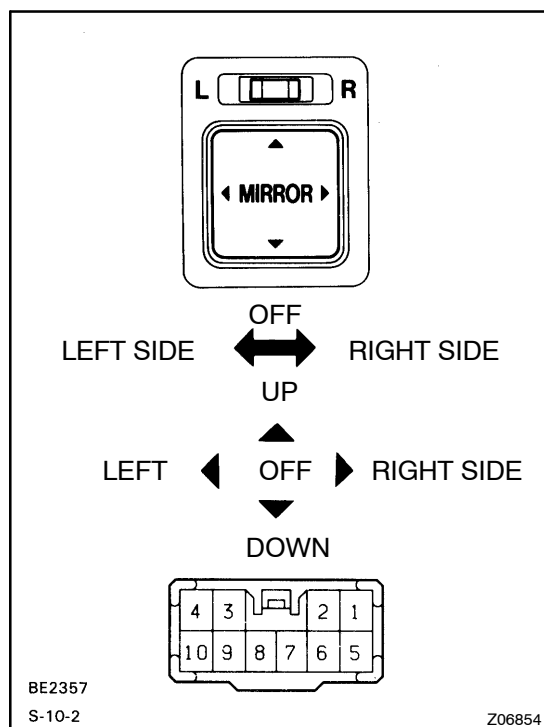

INSPECTION

1. Left side: INSPECT MIRROR SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	–	No continuity
UP	1 – 10, 3 – 4	Continuity
DOWN	1 – 3, 4 – 10	Continuity
LEFT	1 – 9, 3 – 4	Continuity
RIGHT	1 – 3, 4 – 9	Continuity


2. Off: INSPECT MIRROR SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	–	No continuity
UP	3 – 4	Continuity
DOWN	1 – 3	Continuity
LEFT	3 – 4	Continuity
RIGHT	1 – 3	Continuity

3. Right side: INSPECT MIRROR SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	–	No continuity
UP	1 – 6, 3 – 4	Continuity
DOWN	1 – 3, 4 – 6	Continuity
LEFT	1 – 2, 3 – 4	Continuity
RIGHT	1 – 3, 2 – 4	Continuity

If continuity is not as specified, replace the switch.

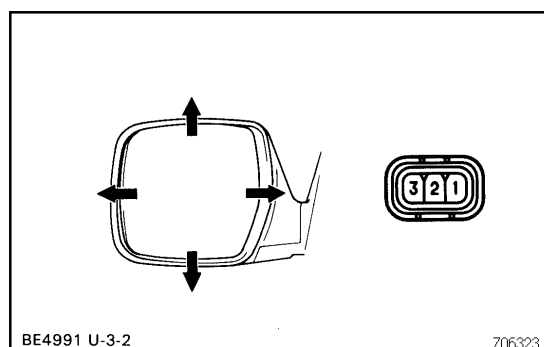

4. INSPECT MIRROR MOTOR OPERATION

Connect the positive (+) lead from the battery to terminal in column "A" and the negative (–) lead to terminal in column "B", check that the mirror operates in column "C".

Switch position	Tester connection	Specified condition
A (+)	B (–)	C (Operation)
2	3	Mirror turns upward
3	2	Mirror turns downward
1	3	Mirror turns to left side
3	1	Mirror turns to right side

If operation is not as specified, replace the mirror assembly.