


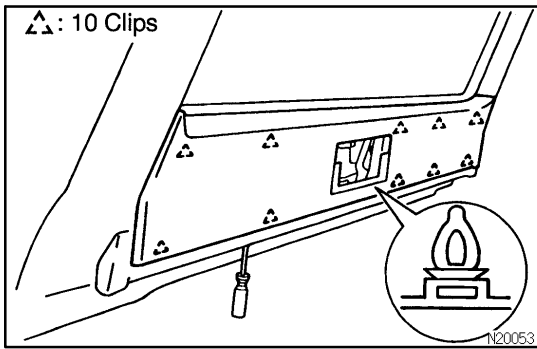


DISASSEMBLY

HINT:

Tape the screwdriver tip before using to pry parts.

1. REMOVE UPPER BACK DOOR

- (a) Remove the pull handle and pull handle bezel.
- (b) Remove the back door trim.
 - (1) Insert a screwdriver, between the retainers and trim to pry it loose.
 - (2) Remove the back door trim.

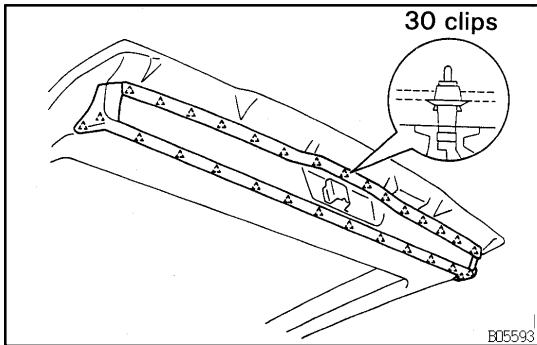

- (c) Remove the door weatherstrip.

NOTICE:


Do not pull strongly on the weatherstrip as it may tear.

- (d) Remove the weatherstrip upper.


NOTICE:

Do not pull strongly off the weatherstrip as it may tear.


- (e) Remove the door inside handle.

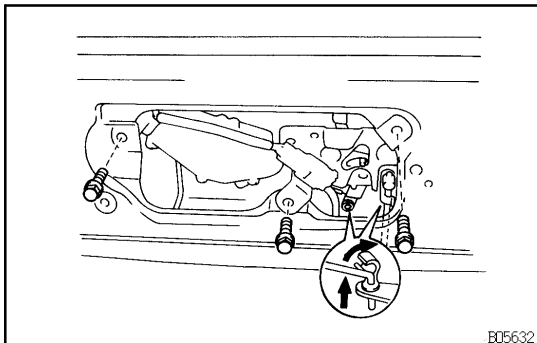

- (f) Remove the door lock control.
- (g) Remove the outside handle.
- (h) Remove the door lock cylinder.
- (i) Remove the wiper arm.

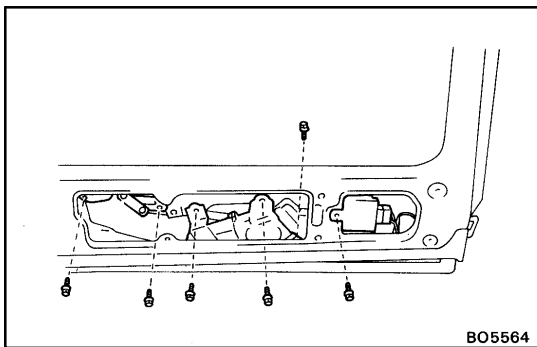


- (j) Remove the wiper motor.
- (k) Remove the wiper control relay.
- (l) Remove the door lock.
- (m) Remove the damper stay.

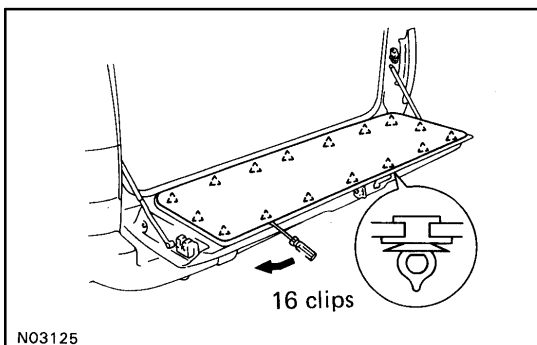

2. REMOVE LOWER BACK DOOR

- (a) Remove the door trim.
 - (1) Insert a screwdriver, between the retainers and door trim to pry it loose.
 - (2) Remove the door trim.

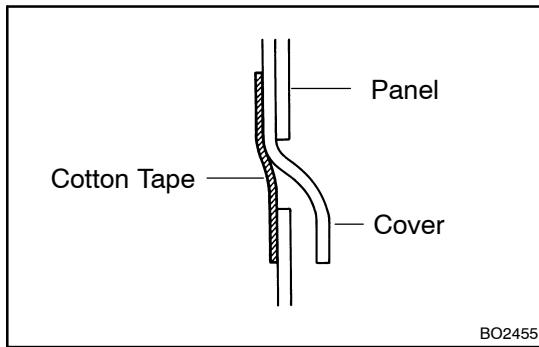

- (b) Remove the service hole cover.
- (c) Remove the door lock control.
- (d) Remove the door lock.
- (e) Remove the license plate light cover.