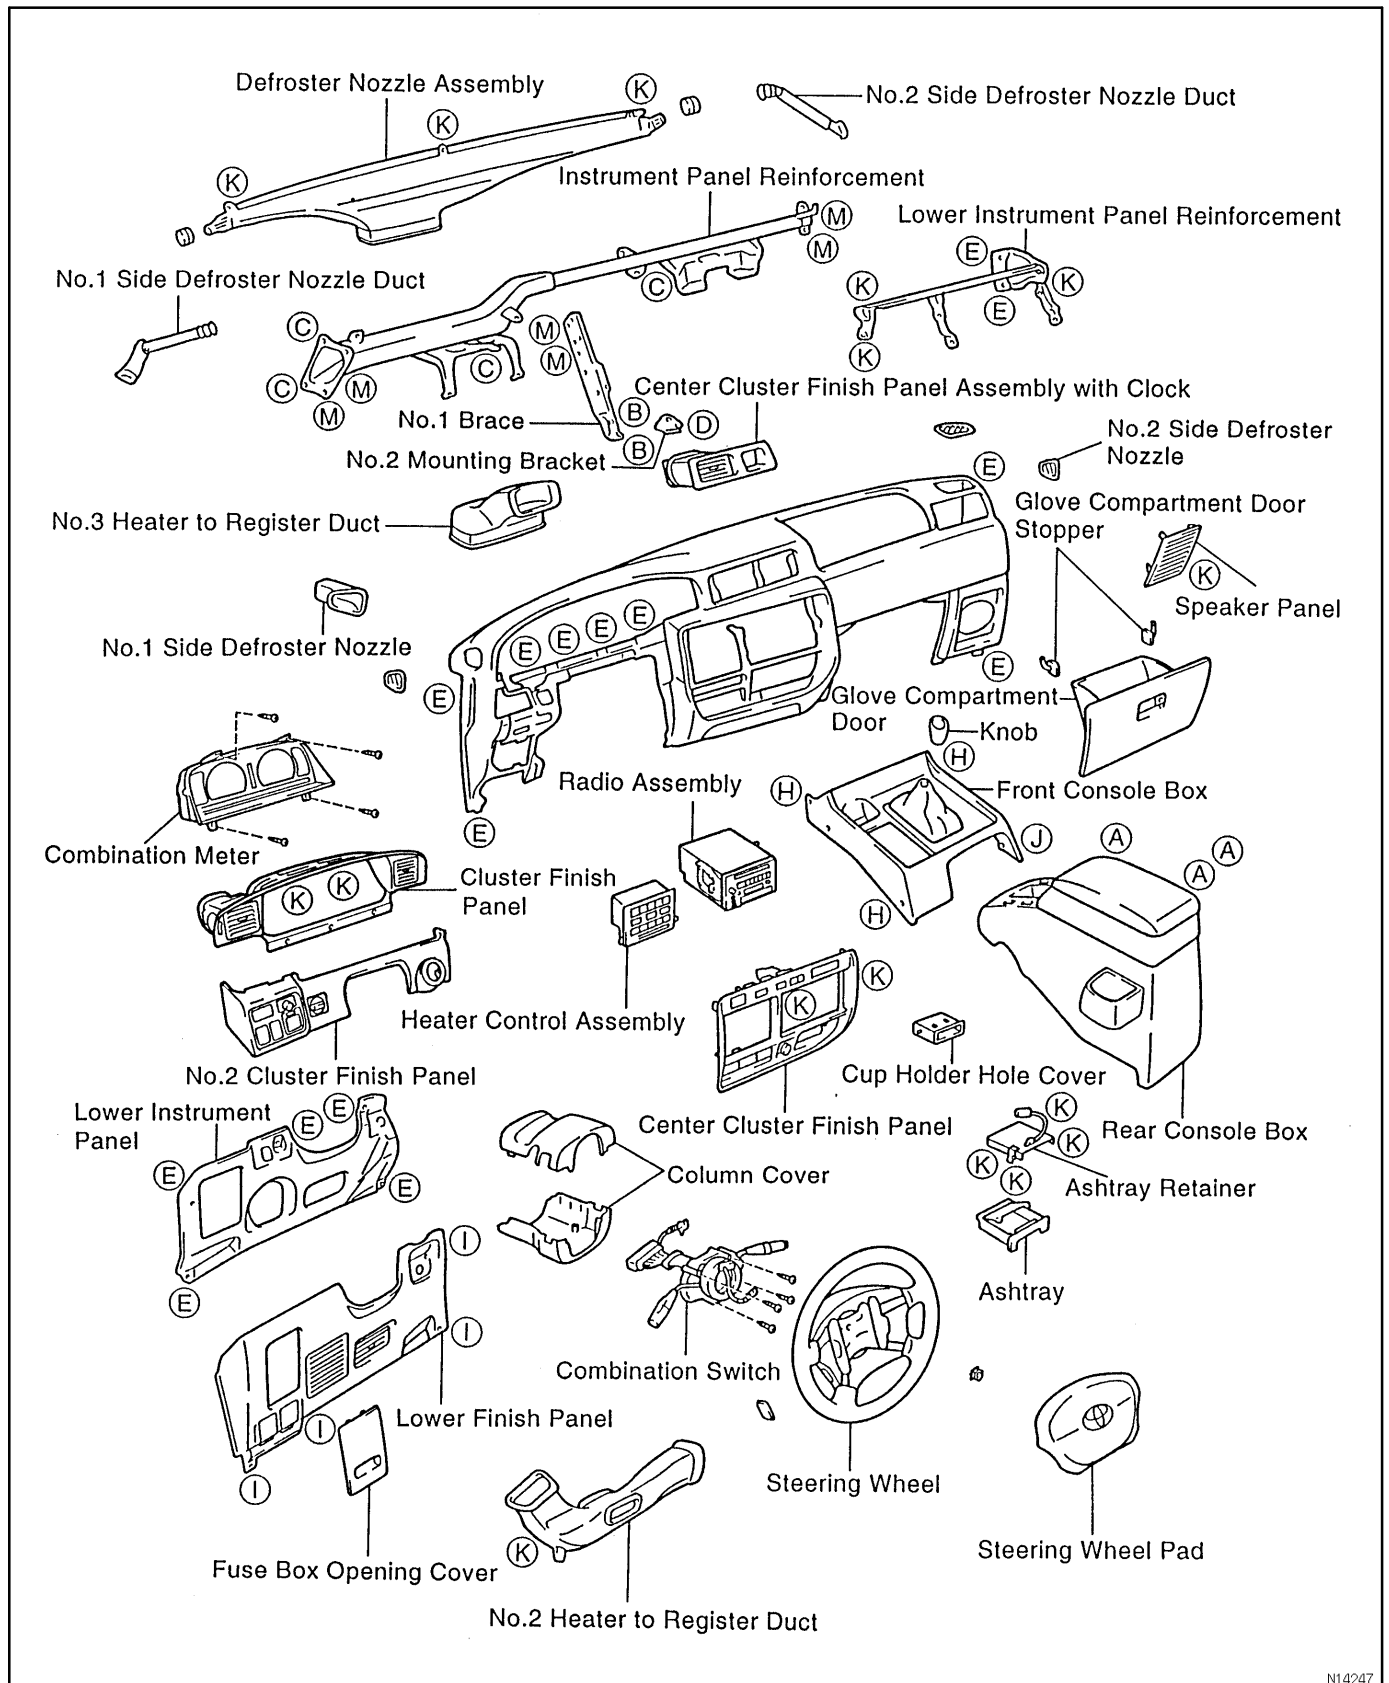
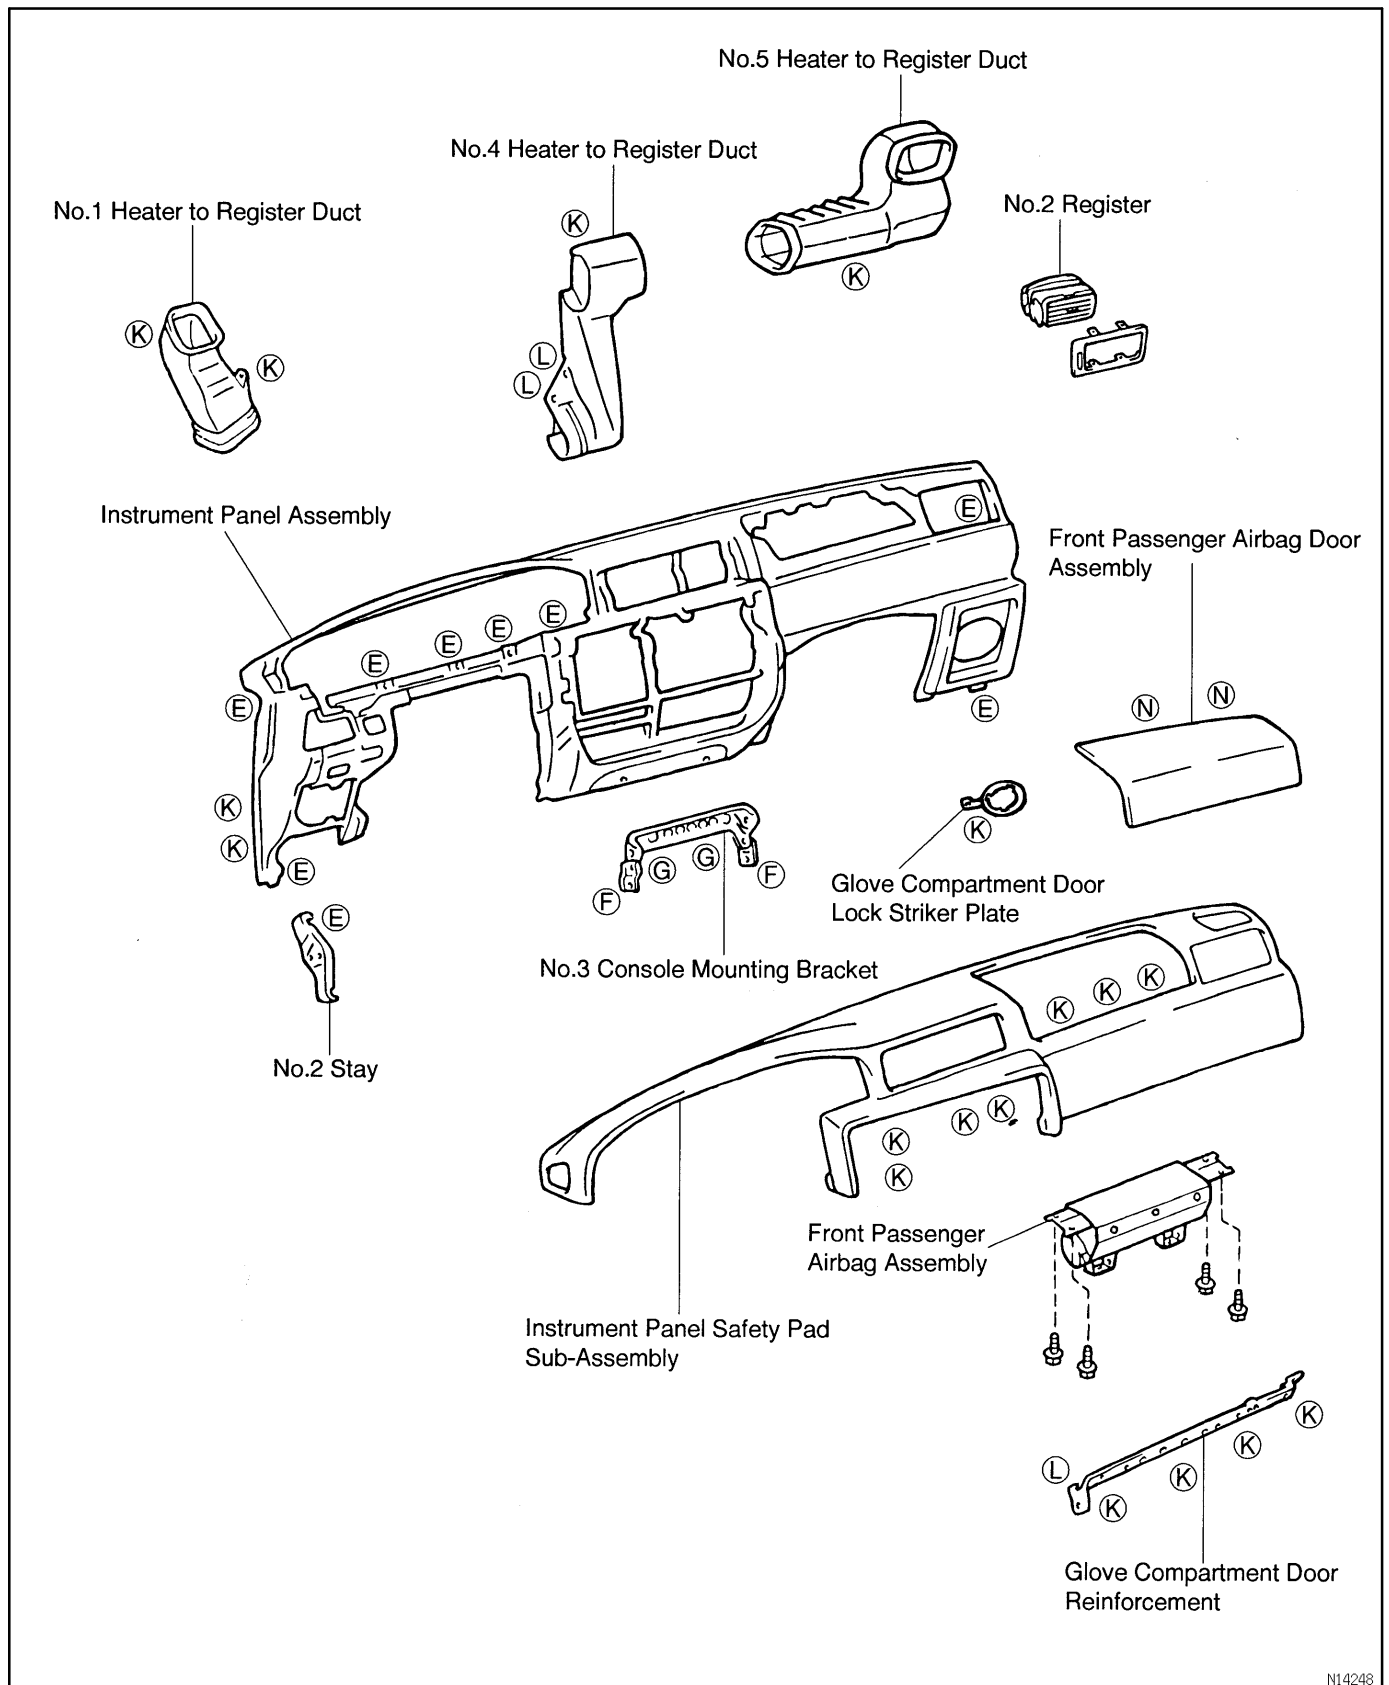


INSTRUMENT PANEL COMPONENTS

BO397-01

 
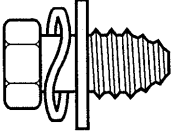
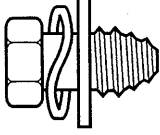
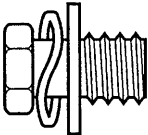
 
 
 
 
 
 
 
 
 
 


N14247



HINT:

Screw shapes and size are indicated in the table below. The code (A - N) correspond to those indicated on the previous page.

mm (in.)								
Code	Shape	Size	Code	Shape	Size	Code	Shape	Size
Ⓐ		$\phi = 8$ (0.31) L = 30 (1.18)	Ⓑ		$\phi = 8$ (0.31) L = 18 (0.71)	Ⓒ		$\phi = 8$ (0.31) L = 16 (0.63)
Ⓓ		$\phi = 8$ (0.31) L = 16 (0.63)	Ⓔ		$\phi = 6$ (0.24) L = 20 (0.79)	Ⓕ		$\phi = 6$ (0.24) L = 18 (0.71)
Ⓖ		$\phi = 5$ (0.20) L = 18 (0.71)	Ⓗ		$\phi = 5$ (0.20) L = 16 (0.63)	Ⓘ		$\phi = 5$ (0.20) L = 18 (0.71)
Ⓙ		$\phi = 5$ (0.20) L = 25 (0.98)	Ⓚ		$\phi = 5$ (0.20) L = 14 (0.55)	Ⓛ		$\phi = 5$ (0.20) L = 14 (0.55)
Ⓜ		$\phi = 8$ (0.31)	Ⓝ		$\phi = 6$ (0.24)			

N14177 V06498