



DISASSEMBLY

1. REMOVE GLOVE COMPARTMENT DOOR REINFORCEMENT
2. REMOVE NO. 4 HEATER TO REGISTER DUCT
3. REMOVE NO. 5 HEATER TO REGISTER DUCT
4. REMOVE NO. 2 REGISTER
5. REMOVE GLOVE COMPARTMENT DOOR LOCK STRIKER PLATE

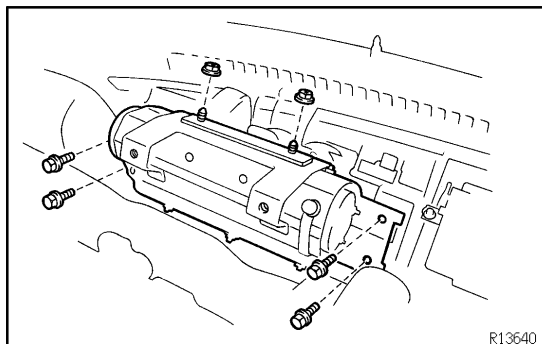

6. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY
(See page RS-22)
- (a) Remove the 4 bolts and 2 nuts, and remove front passenger airbag assembly.

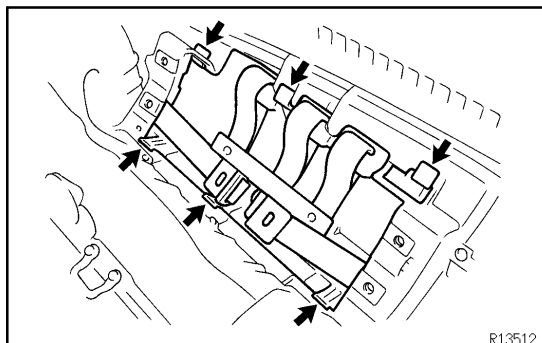

- (b) Pry up the 6 clips shown in the illustration and remove the airbag door.

CAUTION:

- Do not store the front passenger airbag assembly with the airbag deployment direction facing down.
 - Never disassemble the front passenger airbag assembly.
7. REMOVE NO. 3 CONSOLE MOUNTING BRACKET
 8. REMOVE NO. 1 HEATER TO REGISTER DUCT
 9. REMOVE NO. 2 STAY