



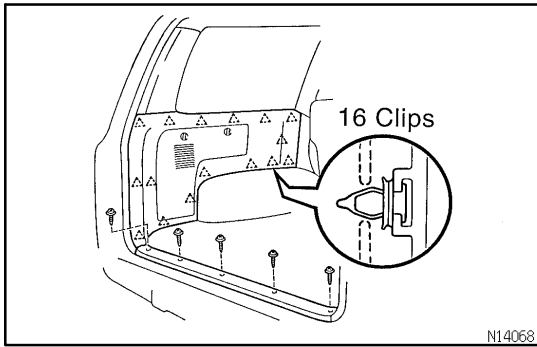


REMOVAL


1. w/ No. 2 rear seat:
NO. 2 REAR SEAT
2. REMOVE BACK DOOR SCUFF PLATE
3. REMOVE QUARTER TRIM

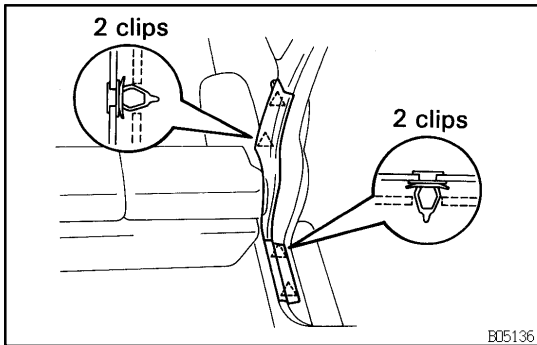

4. REMOVE REAR SEAT SIDE GARNISH
5. REMOVE REAR DOOR SCUFF PLATE

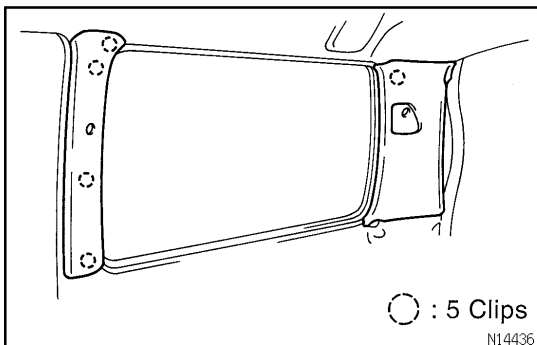


6. REMOVE QUARTER PILLAR GARNISH
7. REMOVE REAR PILLAR GARNISH
8. REMOVE ASSIST GRIPS
9. LOOSEN ROOF HEADLINING

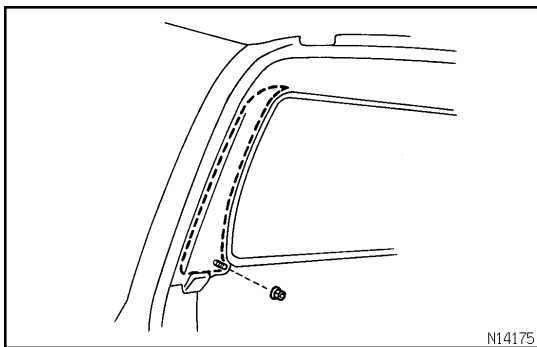

10. REMOVE VENT LOUVER AND QUARTER BELT MOULDING

- (a) Remove the nut from the vent louver.

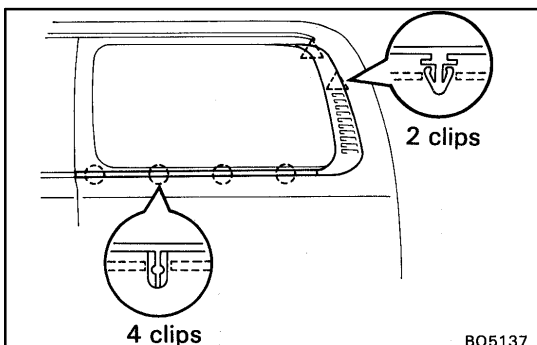


- (b) Insert a screwdriver between the retainers and body to pry it loose.

HINT:

Tape the screwdriver tip before use.

- (c) Pull out the vent louver.
- (d) Pull out the clips from the edge of the panel, and remove the moulding.

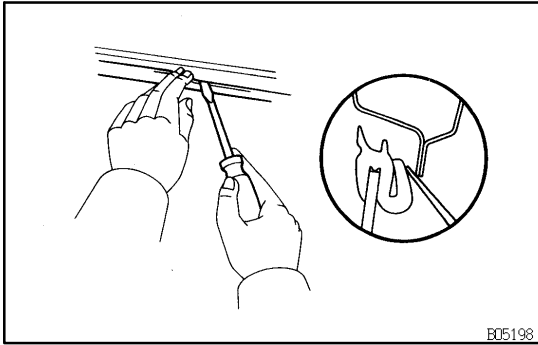
**11. If reusing the weatherstrip:****REMOVE QUARTER WINDOW GLASS**

- (a) Using a screwdriver loosen the weatherstrip from the body.

NOTICE:

Be careful not to damage the body.

- (b) Pry the lip of the weatherstrip outward from the interior part of the body flange.
- (c) Pull the glass outwards and remove it with the weatherstrip.

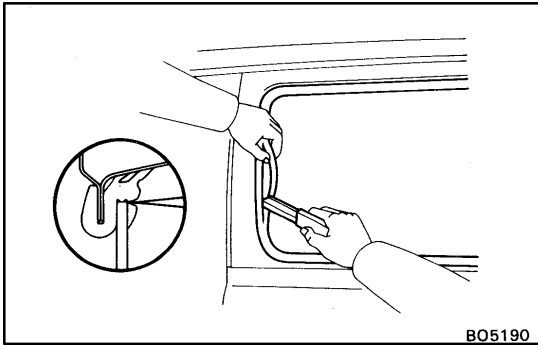**12. If using a new weatherstrip:****REMOVE QUARTER WINDOW GLASS**

- (a) From outside of the vehicle, cut off the weatherstrip lip with a knife.

NOTICE:

Do not damage the body and the glass.

- (b) Push the glass outwards and remove the glass.
- (c) Remove the remaining weatherstrip.