


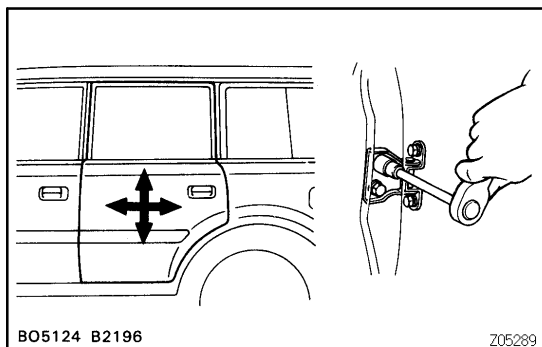

BO5124 B2196


Z05289

ADJUSTMENT

1. ADJUST DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS

Adjust the door by loosening the body side hinge bolts.

Torque: 24 N·m (240 kgf·cm, 17 ft·lbf)

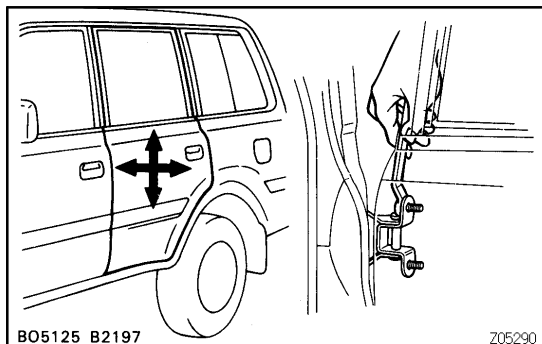


BO5125 B2197

Z05290

2. ADJUST DOOR IN LEFT /RIGHT AND VERTICAL DIRECTIONS

Adjust the door by loosening the door side hinge bolts.

Torque: 24 N·m (240 kgf·cm, 17 ft·lbf)

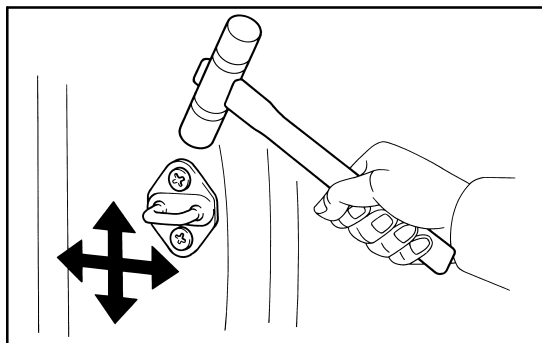

3. ADJUST DOOR LOCK STRIKER

- (a) Check that the door fit and door lock linkages are adjusted correctly.
- (b) Loosen the striker mounting screws to adjust.
- (c) Using a plastic hammer, tap the striker to adjust it.