


INSTALLATION

1. **INSTALL WIPER CONTROL RELAY**
2. **INSTALL WIPER MOTOR**
Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)
3. **INSTALL BACK DOOR TRIM**
4. **INSTALL PULL HANDLE BEZEL**
5. **INSTALL PULL HANDLE**

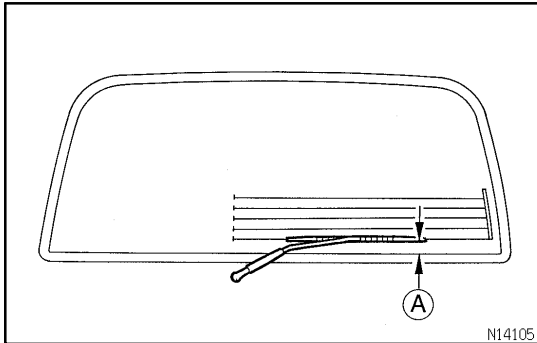

6. **INSTALL REAR WIPER ARM**
 - (a) Install the wiper arm and operate the wipers once and turn the wiper switch OFF.
 - (b) Adjust the installation positions of the wiper arm to the positions shown in the illustration.
A: Approx. 40 mm (1.57 in.)
 - (c) Tighten the nut.
Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)