



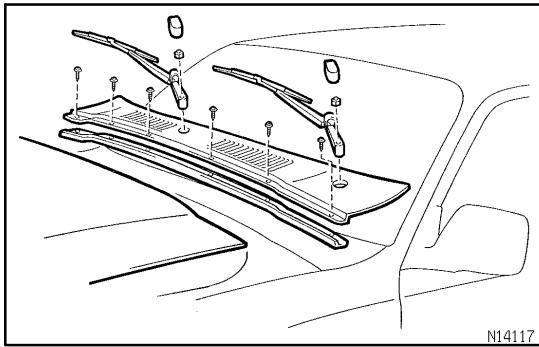

REMOVAL

1. REMOVE HOOD
2. REMOVE WIPER ARMS
3. REMOVE COWL LOUVER
4. REMOVE INNER REAR VIEW MIRROR
5. REMOVE PERSONAL LIGHT ASSEMBLY
6. REMOVE PERSONAL LIGHT COVER
7. REMOVE SUN VISORS AND HOLDERS
8. REMOVE ASSIST GRIPS
9. REMOVE FRONT PILLAR GARNISHES
10. LOOSEN ROOF HEADLINING

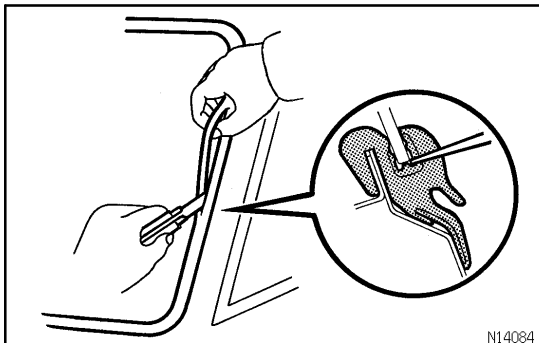


11. REMOVE WINDSHIELD GLASS

- (a) From the outside of the vehicle, cut off the weatherstrip.

NOTICE:

Do not damage the body and the glass.

- (b) Push piano wire through between the body and glass from the interior.

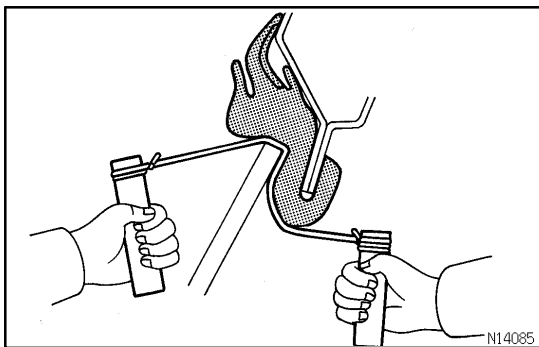


- (c) Tie both wire ends to the wooden blocks or equivalent.

NOTICE:

When separating, take care not to damage the paint or interior ornaments.

To prevent scratching the safety pad when removing the windshield, place a plastic sheet between the piano wire and safety pad.

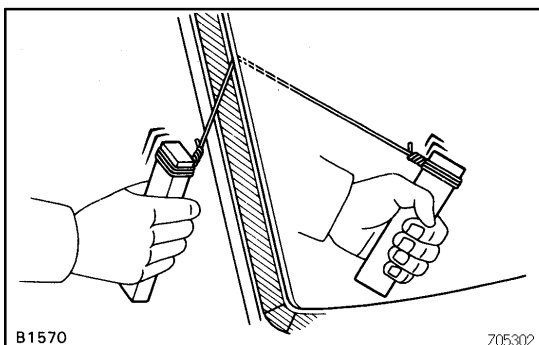

- (d) Cut the adhesive by pulling the piano wire around it.
- (e) Remove the glass.