



INSTALLATION

1. INSTALL FRONT WHEEL OPENING MOULDING

- (a) Install the front wheel opening moulding.

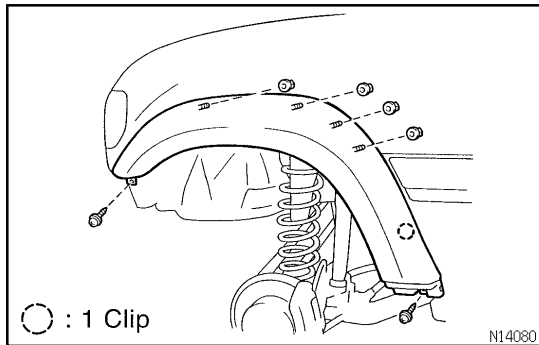


- (b) Install the 4 nuts from the service hole of the engine room inside.
- (c) Install the 2 screws.
- (d) Front bumper extension
- (e) Front mudguard
- (f) Front wheel
- (g) Cool air intake duct
- (h) Air cleaner case assembly
- (i) Charcoal canister

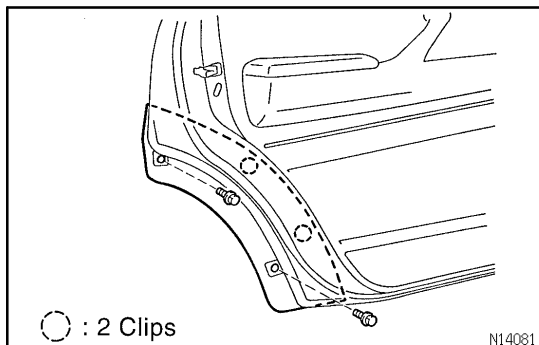

2. INSTALL QUARTER OUTSIDE MOULDING

Install the quarter outside moulding with the 2 bolts.

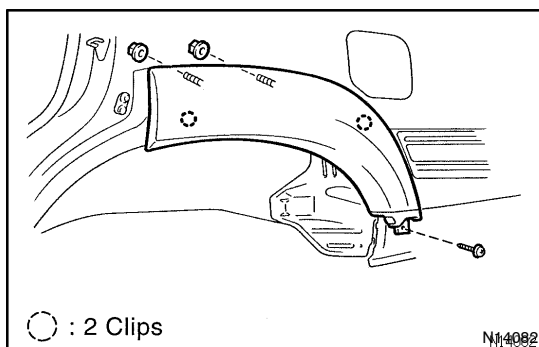

3. INSTALL REAR WHEEL OPENING MOULDING

- (a) Install the rear wheel opening moulding with the 2 nuts.
- (b) Install the screw.
- (c) Install the quarter trim LH.
- (d) Install the quarter trim RH.
- (e) Install the back door scuff plate.
- (f) Install the rear bumper extension.
- (g) Install the rear mudguard.