


INSTALLATION


1. INSTALL BRAKE BOOSTER

- Install the booster and a new gasket.
- Install the clevis to the operating rod.
- Install and torque the booster installation nuts.
Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)
- Install the clevis pin into the clevis and brake pedal, and install the clip to the clevis pin.
- Install the pedal return spring.

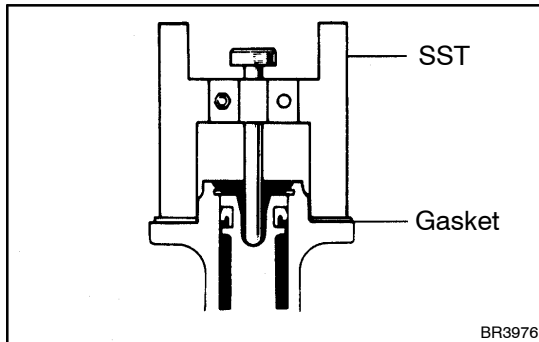

2. ADJUST LENGTH OF BOOSTER PUSH ROD

- Install a new gasket on the master cylinder.
- Set the SST on the gasket, and lower the pin until its tip slightly touches the piston.
SST 09737-00010

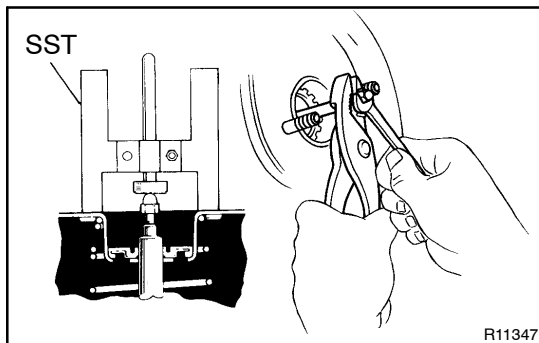

- Turn the SST upside down, and set it on the booster.
SST 09737-00010
 - Measure the clearance between the booster push rod and pin head (SST).
Clearance: 0 mm (0 in.)
 - Adjust the booster push rod length until the push rod lightly touches the pin head.
- INSTALL MASTER CYLINDER** (See page [BR-9](#))
 - CONNECT VACUUM HOSE TO BRAKE BOOSTER**
 - FILL BRAKE RESERVOIR WITH BRAKE FLUID AND BLEED BRAKE SYSTEM** (See page [BR-4](#))
 - CHECK FOR FLUID LEAKAGE**
 - CHECK AND ADJUST BRAKE PEDAL**
(See page [BR-6](#))
 - DO OPERATIONAL CHECK** (See page [BR-17](#))