


REMOVAL

1. **REMOVE MASTER CYLINDER** (See page [BR-9](#))

2. **REMOVE THESE PARTS:**

- Return spring
- Clip and clevis pin
- Clevis
- Vacuum hose

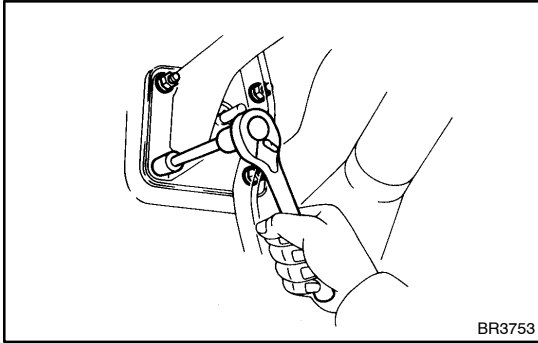

3. **REMOVE BRAKE BOOSTER**

- (a) Remove the 4 booster installation nuts.
- (b) Remove the booster and gasket.