


## INSPECTION

1. **MEASURE PAD LINING THICKNESS**  
(See step 1. on page [BR-27](#))  
Standard thickness: 10.0 mm (0.394 in.)  
Minimum thickness: 1.0 mm (0.039 in.)
2. **MEASURE DISC THICKNESS** (See page [BR-27](#))  
Standard thickness: 18.0 mm (0.709 in.)  
Minimum thickness: 16.0 mm (0.630 in.)
3. **MEASURE DISC RUNOUT** (See page [BR-27](#))  
Maximum disc runout: 0.15 mm (0.0059 in.)

If the runout is greater than the maximum, adjust the disc runout or grind it on a "On-Car" brake lathe.

4. **IF NECESSARY, REPLACE DISC**
  - (a) Remove the torque plate..
  - (b) Remove the hub nuts of the temporarily installed disc and pull off the disc.
  - (c) Install a new disc and and loosely install the hub nuts.

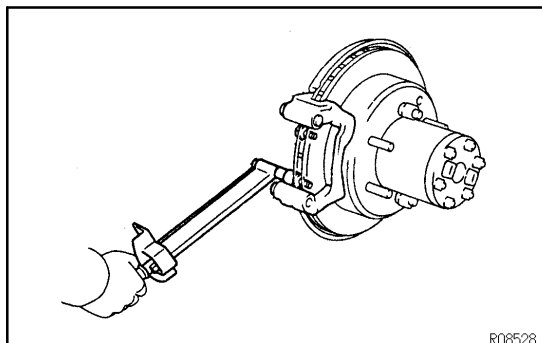

- (d) Install the torque plate and tighten the mounting bolts.  
**Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)**