


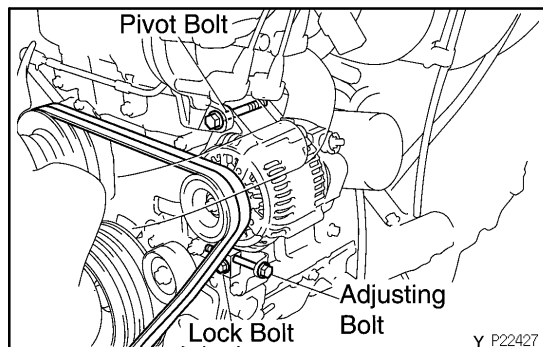


REMOVAL

1. **REMOVE BATTERY AND BATTERY TRAY**
2. **DISCONNECT POWER STEERING (PS) RESERVOIR TANK**


3. **REMOVE DRIVE BELTS**

- (a) Loosen the lock bolt, pivot bolt and adjusting bolt.
- (b) Remove the 2 drive belts.

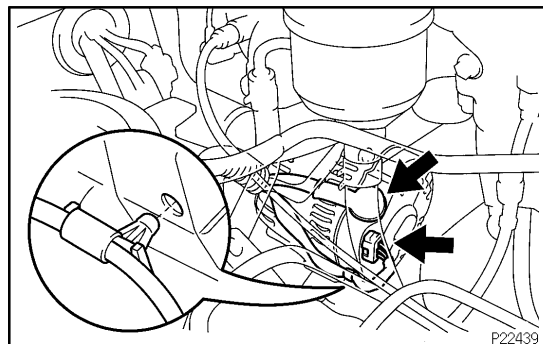

4. **REMOVE GENERATOR**

- (a) Disconnect the generator connector.
- (b) Remove the rubber cap and nut, and disconnect the generator wire.
- (c) Disconnect the generator wire clamp from the generator.

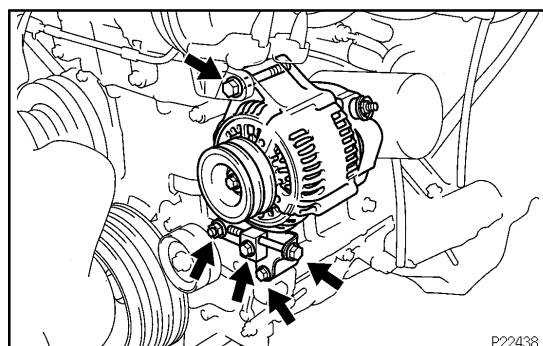

- (d) Remove the lock bolt, bolt, nut and drive belt adjusting bar.
- (e) Remove the pivot bolt and generator.