



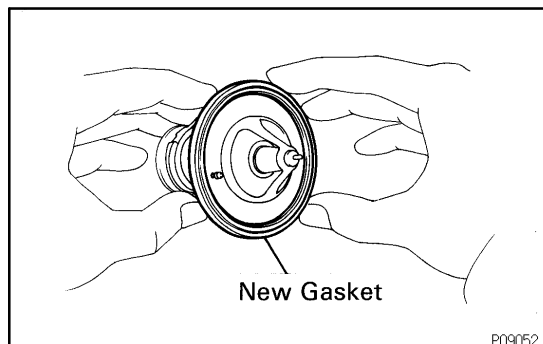

INSTALLATION

1. PLACE THERMOSTAT IN WATER PUMP

- (a) Install a new gasket on to the thermostat.
- (b) Align the thermostat jiggle valve with the protrusion of the water inlet housing, and insert the thermostat in the water inlet housing.

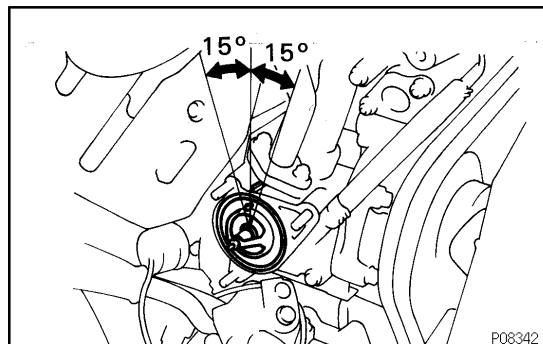

HINT:

The jiggle valve may be set within 15° of either side of the prescribed position.

2. INSTALL WATER INLET

Install the water inlet with the 3 nuts.

Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)

3. **FILL RADIATOR WITH ENGINE COOLANT**
4. **START ENGINE AND CHECK FOR LEAKS**