

DTC	51	ABS Pump Motor Lock
------------	-----------	----------------------------


CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
51	Pump motor is not operating normally during initial check	•ABS pump motor

Fail safe function:

If trouble occurs in the ABS pump motor, the ECU cuts off current to the ABS control (solenoid) relay and prohibits ABS control.

WIRING DIAGRAM

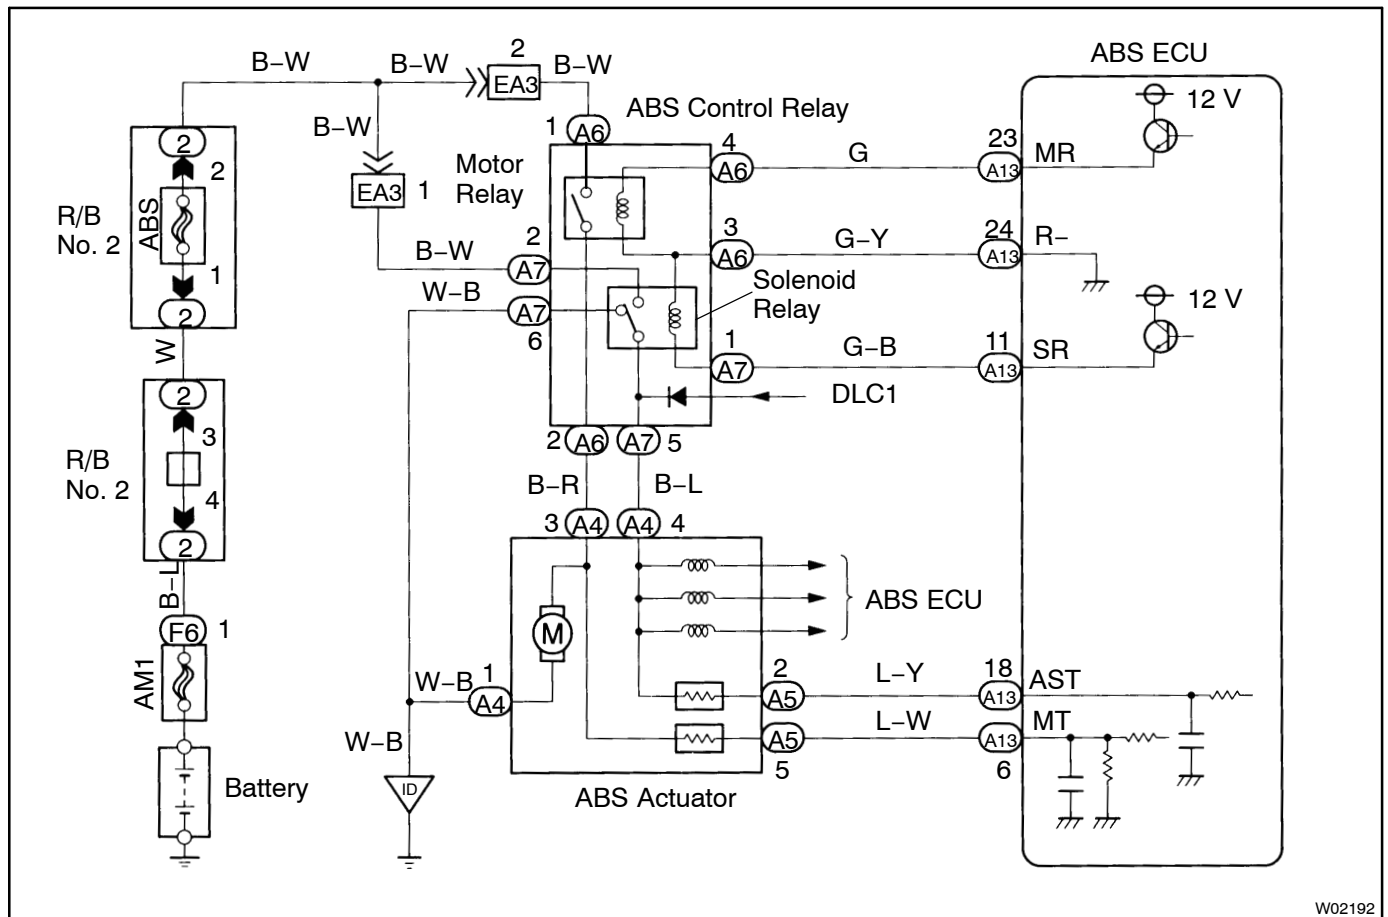

W02192