


Tc Terminal Circuit

CIRCUIT DESCRIPTION


Connecting terminals Tc and E₁ of the DLC1 causes the ECU to display the DTC by flashing the ABS warning light.

WIRING DIAGRAM

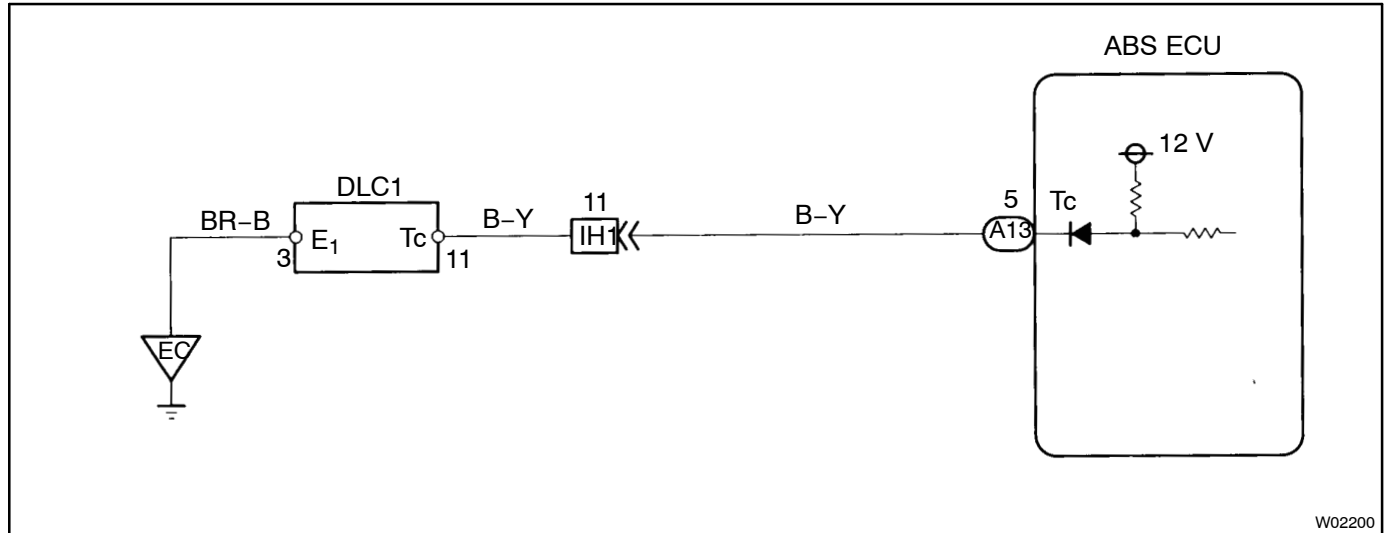

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check voltage between terminals Tc and E ₁ of DLC1. |
|---|--|

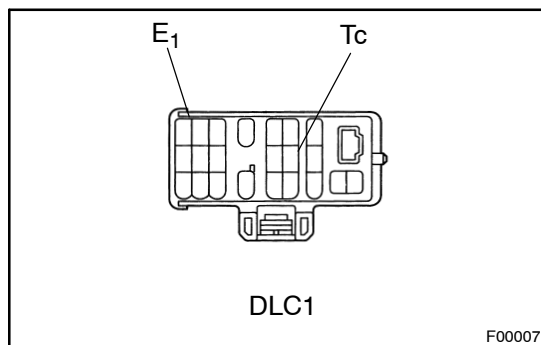

CHECK:

- Turn the ignition switch ON.
- Measure the voltage between terminals Tc and E₁ of the DLC1.

OK:

Voltage: 10 – 14 V

OK

If ABS warning light does not blink even after Tc and E₁ are connected, ECU may be defective.

NG

2	Check for open and short in harness and connector between ABS ECU and DLC1, and DLC1 and body ground (See page IN-28).
---	---

NG

Repair or replace harness or connector.

OK

Check and replace ABS ECU.