


## Ts Terminal Circuit

### CIRCUIT DESCRIPTION


The sensor check circuit detects abnormalities in the speed sensor signal which cannot be detected with the DTC check. Connecting terminals Ts and E<sub>1</sub> of the DLC1 in the engine compartment starts the check.

### WIRING DIAGRAM

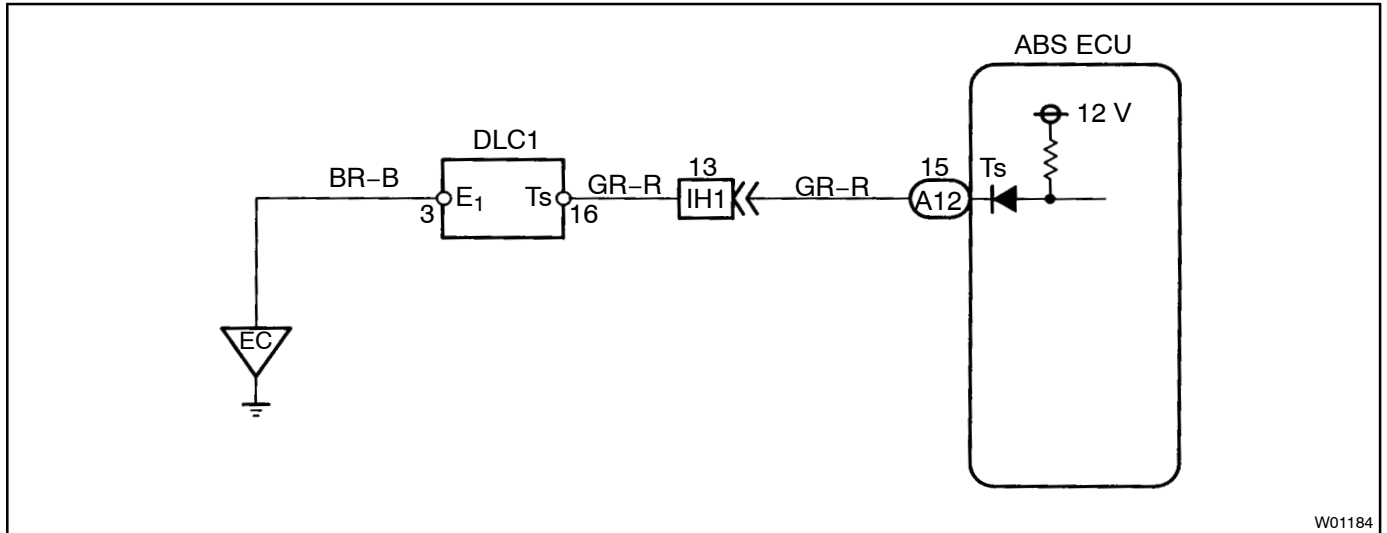

### INSPECTION PROCEDURE

- |   |                                                                |
|---|----------------------------------------------------------------|
| 1 | Check voltage between terminals Ts and E <sub>1</sub> of DLC1. |
|---|----------------------------------------------------------------|

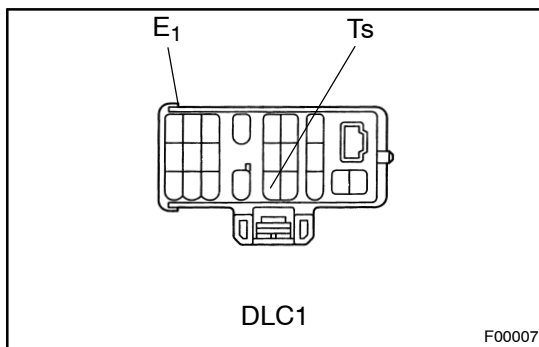

#### CHECK:

- Turn the ignition switch ON.
- Measure the voltage between terminals Ts and E<sub>1</sub> of the DLC1.

#### OK:

**Voltage: 10 - 14 V**

**OK**

**If ABS warning light does not blink even after Ts and E<sub>1</sub> are connected, ECU may be defective.**

**NG**

|   |                                                                                                                                         |
|---|-----------------------------------------------------------------------------------------------------------------------------------------|
| 2 | Check for open and short in harness and connector between ABS ECU and DLC1, and DLC1 and body ground (See page <a href="#">IN-28</a> ). |
|---|-----------------------------------------------------------------------------------------------------------------------------------------|

NG

Repair or replace harness or connector.

OK

Check and replace ABS ECU.